

P: 0800 683 352

E: sales@utemaster.com.au W: www.utemaster.co.nz

#### **Australia Support:**

P: 1800 769 577

W: www.utemaster.com.au

### **LOADSTOP-FRB10-DSR**

# Ford Ranger Extra Cab 2011-2022 With Destroyer Side Rails







## **Despatch List:**

ID#	DESCRIPTION	IMAGE	QTY
1	Base Rail PRT-005312		1x
2	Top Rail PRT-005425		1x
3	PRT-005315L PRT-005315R	UTE RESERVE AND THE PROPERTY OF THE PROPERTY O	1x 1x
4	M8 x 16mm Btn Bolt (Black)		17x
5	M8 Nyloc Nut		4x
6	M8 Spring Washer		13x



- P: 0800 683 352
- E: sales@utemaster.co.nz
- W: www.utemaster.co.nz

#### **Australia Support:**

- P: 1800 769 577
- E: sales@utemaster.com.au
- W: www.utemaster.com.au

1




Remove the front feet from the Destroyer Side Rails.

These are not required and can be set aside.

Repeat for both sides.

2

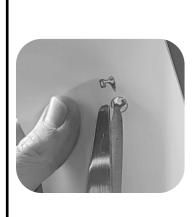







Cut out the circles indicated on the provided template.

Sit the paper Template on the front of the Load-Lid.

Ensure the template is oriented the correct way around. "Handle End" should be pointing towards the Load-Lid handle.

Ensure the arrows at each end are aligned with the hinge bolts. The template should sit centred on the Load-Lid, touching the bolts at each end.



P: 0800 683 352

E: sales@utemaster.co.nz

W: www.utemaster.co.nz

#### **Australia Support:**

P: 1800 769 577

E: sales@utemaster.com.au

W: www.utemaster.com.au

3



Mark all holes through the template onto the Load-Lid.

Remove the template from the Load-Lid.

4



Drill through all marks with a 8.5mm drill bit.

5



Run a bead of sealer around each hole.



- P: 0800 683 352
- E: sales@utemaster.co.nz
- W: www.utemaster.co.nz


#### Australia Support:

- P: 1800 769 577
- E: sales@utemaster.com.au
- W: www.utemaster.com.au

6



Sit the base rail (1) onto the front of the Load-Lid.

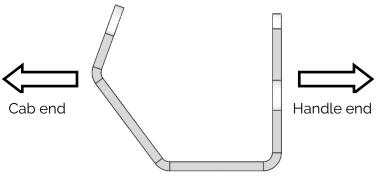

Ensure the base rail sits with the angled sides facing forwards towards the cab, and the flat side facing back towards the handle.

7





Bolt the base rail to the Load-Lid through each drilled hole using the following fasteners:

4) M8 x 16mm Btn Bolts (Black) 5) M8 Nyloc Nuts

Have the head of the bolt underneath the Load-Lid and the nut inside the base rail.



- P: 0800 683 352
- E: sales@utemaster.co.nz
- W: www.utemaster.co.nz

#### Australia Support:

- P: 1800 769 577
- E: sales@utemaster.com.au
- W: www.utemaster.com.au

8



Lift the top rail (2) onto the base rail.

9



Bolt the top rail to the base rail using the following fasteners:

4) M8 x 16mm Btn Bolts (Black)6) M8 Spring Washers

10



Sit the front feet (3) over the Load-Stop and Destroyer Side Rail.

NOTE: These are not the same feet removed in Step 1.



P: 0800 683 352

E: sales@utemaster.co.nz

W: www.utemaster.co.nz

#### **Australia Support:**

P: 1800 769 577

E: sales@utemaster.com.au

W: www.utemaster.com.au

11



Bolt the front feet to the Side Rails using the following fasteners:

4) M8 x 16mm Btn Bolts (Black)

6) M8 Spring Washers

12



Bolt the front feet to the Load Stop using the following fasteners:

4) M8 x 16mm Btn Bolts (Black)

6) M8 Spring Washers