

P: 1800 769 577

E: sales@utemaster.com.au W: www.utemaster.com.au

# **DESPATCH LIST**

## Vehicle Components (required for all installations):

Part Number / Description	IMAGE	QTY
80606-29 / WHUTELL-UTEMAIN-8 1.1		1x

### Load-Lid Components (only required if the Load-Lid does not have central locking pre-installed):

Part Number / Description	IMAGE	QTY
Load-Lid Actuator Assembly (1x PRT-003713, 1x PRT-003714, 1x 003611)	CO. 1. D.	1x
PRT-002878		1x
PRT-002879		1x
M6 x 12mm Button Head Bolt		2x
M6 Spring Washer		2x



P: 1800 769 577


E: sales@utemaster.com.au W: www.utemaster.com.au

# Toyota Hilux 2015+ Load-Lid Central Locking Fitting Instructions

Thank you for purchasing a quality Utemaster™ product, our aim is providing you with as much assistance as possible throughout the fitting process. Please contact us if assistance is needed.



Step 1) Connect the relays

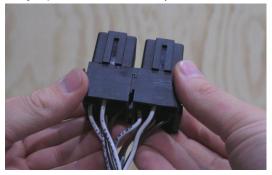

Step 2) Cable tie the relays in place






P: 1800 769 577

E: sales@utemaster.com.au W: www.utemaster.com.au

Step 3) Remove the ground bolts (may need to move the accessory fuse box first)



Step 4) Connect the ground cable to the ground point and re-install the bolt

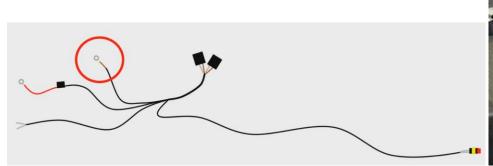



**Step 5)** Open the battery cover and remove the nut shown






P: 1800 769 577

E: sales@utemaster.com.au W: www.utemaster.com.au

Step 6) Attach the power cable to the thread and re-install the nut. Close the battery cover

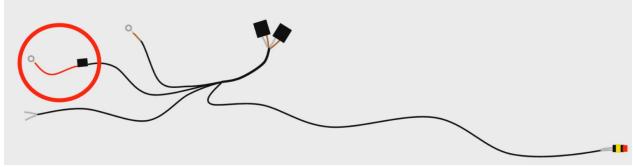



Step 7) Locate the cab entry point and make a small incision in it








P: 1800 769 577

E: sales@utemaster.com.au W: www.utemaster.com.au

Step 8) Push the Lock/Unlock cable through the incision into the cab interior

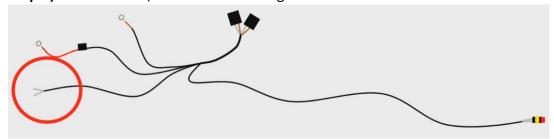

Once wire is through, add a dab of sealer to the incision made in the previous step.

**Step 9)** Locate the cab entry point in the interior (will need to remove the plastic cap below the glove box). Pull the cable through



Step 10) Remove the plastic caps and rubber seal to expose the wiring behind the kick panel








P: 1800 769 577


E: sales@utemaster.com.au W: www.utemaster.com.au

**Step 11)** Identify the plug shown (has one black and one white wire on top). Remove the plug and carefully cut back the wrapping to give more access to the individual wires



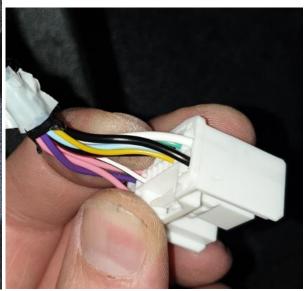

Step 12) Identify the black and white wires

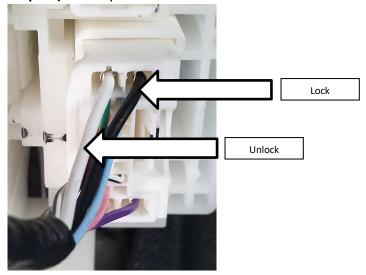

Step 13) Place one of the provided clips over the white wire







P: 1800 769 577

E: sales@utemaster.com.au W: www.utemaster.com.au

**Step 14)** Identify the wire labelled 'Unlock\_Sig' and insert this into the plastic clip alongside the white wire

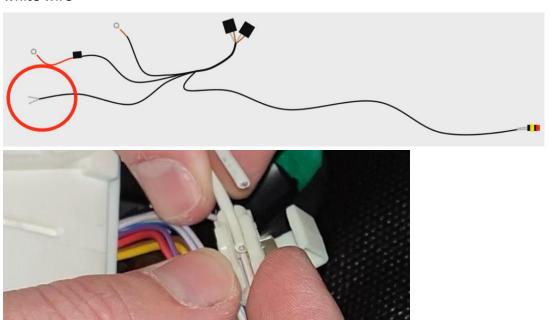


Step 15) Clamp the clip closed until the metal plate is no longer protruding, and close the clip

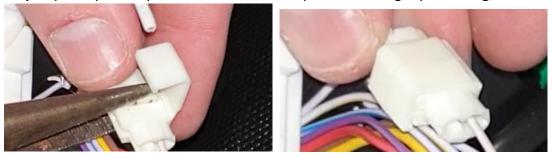

Step 16) Repeat Steps 13-15 to connect the wire labelled 'Lock\_Sig' to the Black wire

**Step 17)** Take the last cable remaining on the loom and feed it down through the bonnet cavity so it comes out underneath the vehicle

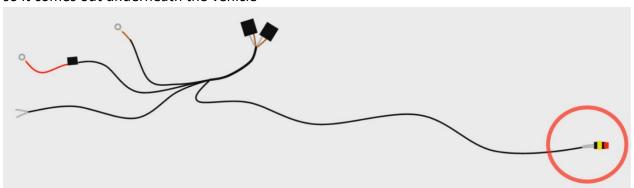




P: 1800 769 577

E: sales@utemaster.com.au W: www.utemaster.com.au


Step 18) Run down the length of the chassis and cable tie in place



Step 19) Pull up through the gap between the cab and wellside

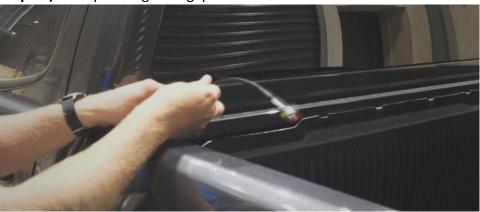

 Step 20) Install the Load-Lid as per fitting instructions provided





Your central locking is now fully fitted and ready to use.

Thank you again for using Utemaster™ and don't forget to keep checking our website for our latest innovations!