

P: 0800 683 352

E: sales@utemaster.co.nz W: www.utemaster.co.nz

Australia Support:

P: 1800 769 577

W: www.utemaster.com.au

DESPATCH LIST

Vehicle Components (required for all installations):

I	ID#	DESCRIPTION	IMAGE	QTY
	1	80606-29 / WHUTELL-UTEMAIN-8.1 1.1	<u>.</u>	1x

Load-Lid Components (only required if the Load-Lid does not have central locking pre-installed):

ID#	DESCRIPTION	IMAGE	QTY
2	Load-Lid Actuator Assembly (1x PRT-003713, 1x PRT-003714, 1x 003611)		1x
3	PRT-002878		1x
4	PRT-002879		1x
5	M6 x 12mm Button Head Bolt		2x
6	M6 Spring Washer		2x
7	80606-25 / WHUTELL-LIDTAIL 1.0 (Load-Lid Loom)	00	1x



P: 0800 683 352

E: sales@utemaster.co.nz
W: www.utemaster.co.nz

Australia Support:

P: 1800 769 577

E: sales@utemaster.com.au W: www.utemaster.com.au

Ford Ranger Raptor 2022+ Load-Lid Central Locking Fitting Instructions

LL-CLKFRC2-RAPTOR






Fitting Time: 30 - 60 mins

https://bit.ly/3KD4gS7

1

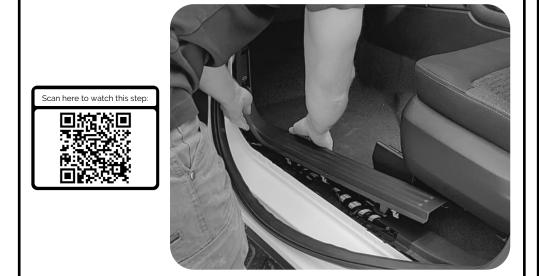

Remove the front kick panel from the passenger's side.

2



Remove the glove box.



- P: 0800 683 352
- E: sales@utemaster.co.nz
- W: www.utemaster.co.nz

Australia Support:

- P: 1800 769 577
- E: sales@utemaster.com.au
- W: www.utemaster.com.au

3





Connect the relays together.

4





Cable tie the relays into the engine bay.

5





Identify the cab entry point on the passenger's side and cut the end off the tube.

CAUTION: take care not to cut any existing cables or wires.

DO NOT use a knife for this step. Use side cutters or scissors.




- P: 0800 683 352
- E: sales@utemaster.co.nz
- W: www.utemaster.co.nz

Australia Support:

- P: 1800 769 577
- E: sales@utemaster.com.au
- W: www.utemaster.com.au

6



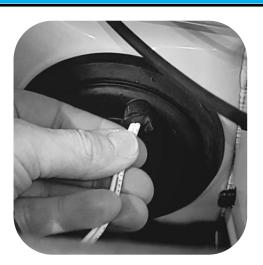


Feed the lock signal wires through the tube and pull out into the cab interior.

Tip: Use long nose pliers from inside to grab the end of the lock signal wires.

7



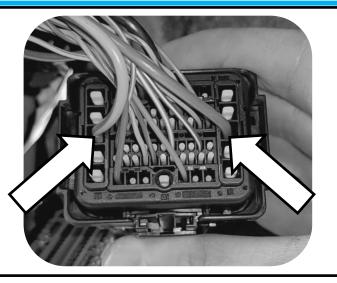


Identify the correct wires.

Grey/Brown = Lock Green/Brown = Unlock

8



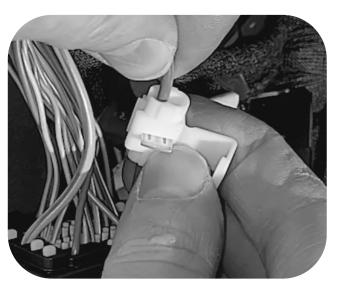

Place one of the provided clips over the Green/Brown wire.



P: 0800 683 352

E: sales@utemaster.co.nz

W: www.utemaster.co.nz

Australia Support:


P: 1800 769 577

E: sales@utemaster.com.au

W: www.utemaster.com.au

Ç




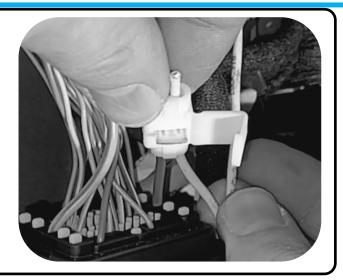

Insert the wire labelled 'Unlock_Sig' into the white clip.

10



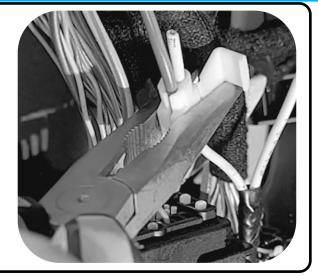

Squeeze the clip until the metal paddle sits flush.

Close the clip.

11

Repeat steps 8-10 to connect the Grey/Brown wire to the 'Lock_Sig' wire.

12





Reinstall the kick panel and glove box.



- P: 0800 683 352
- E: sales@utemaster.co.nz
- W: www.utemaster.co.nz

Australia Support:

- P: 1800 769 577
- E: sales@utemaster.com.au
- W: www.utemaster.com.au

13






Seal the join where the wires enter the grommet tube.

14



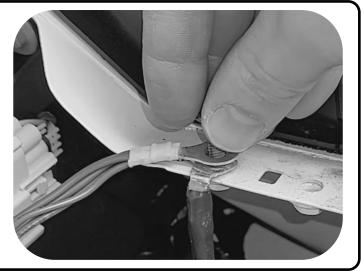

Install the ground terminal to the ground point above the firewall on the passenger's side.

15





Install the power terminal to the battery.



- P: 0800 683 352
- E: sales@utemaster.co.nz
- W: www.utemaster.co.nz

Australia Support:

- P: 1800 769 577
- E: sales@utemaster.com.au
- W: www.utemaster.com.au

16





Feed the longest branch of the loom down the firewall to the underside of the vehicle.

17





Run the loom down the length of the chassis and cable tie it in place.

18

Feed the loom up into the wellside.

Install the Utemaster accessory now if required (fitting instructions provided with the accessory).

19





Connect the vehicle wiring loom to the Utemaster accessory inside the tray.

20

Cable tie up any slack wires, pay particular attention to any in the engine bay area.

Your central locking is now fully fitted and ready to use.

Thanks again for choosing Utemaster and don't forget to keep checking our website for our latest innovations!