

P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz

Australia Support: P: 1800 769 577 E: sales@utemaster.com.au W: www.utemaster.com.au

Volkswagen Amarok 2023+ LLX-VWB3 Standard Load-Lid™



Despatch List:

ID#	DESCRIPTION	IMAGE	QTY		ID#	DESCRIPTION	IMAGE	QTY
1	PRT-006891-01 (with sponge gaskets and PRT-005982 installed)	E Contraction of the second se	1x		7	SS0610-5M		1x
2	PRT-005962R PRT-005962L		1x 1x		8	TK-M8x25		4x
3	PRT-005465R PRT-005465L		1x 1x		9	M8 x 25mm Btn Bolt		8x
4	PRT-005964 (each with 2x rubber strips)		2x		10	M8 Spring Washer		12x
5	PRT-005961	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	2x		11	M8 Medium Washer		4x
6	PRT-005963	°	2x		12	M8 Fender Washer		4x
	·				13	M6 x 20mm Btn Bolt	Caller	2x


Installation video

bit.ly/3HnElgF



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

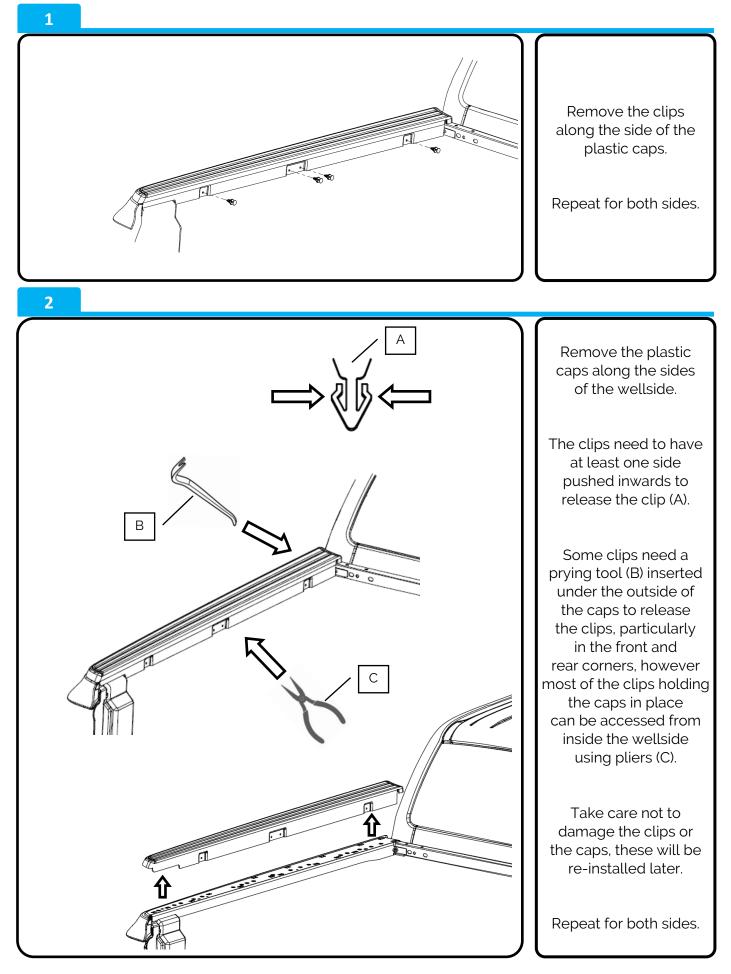



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

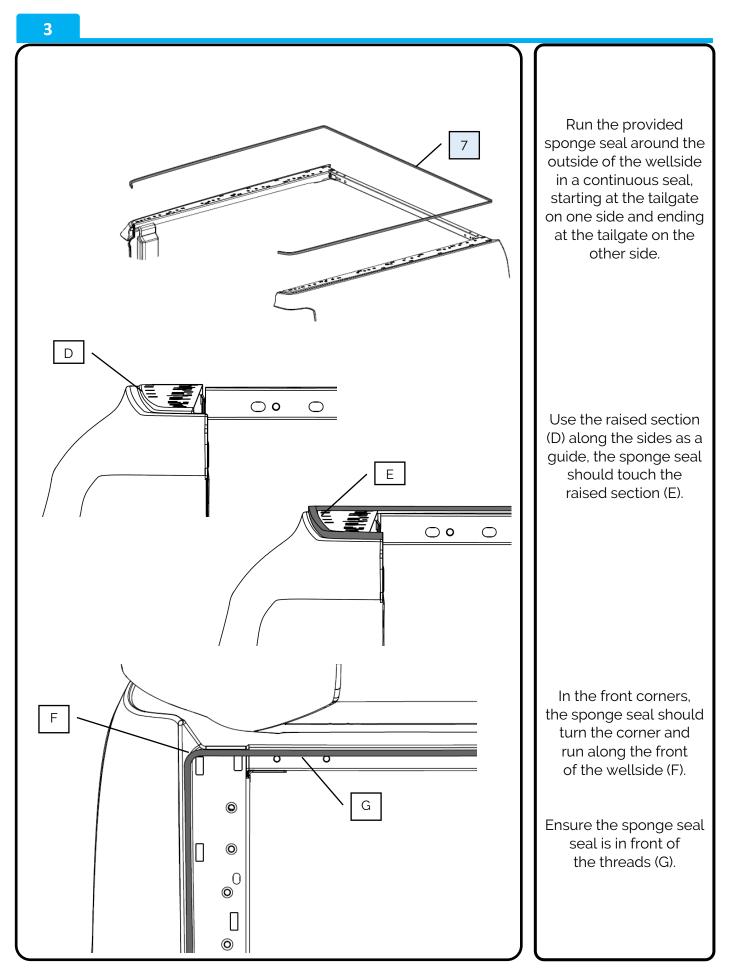



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

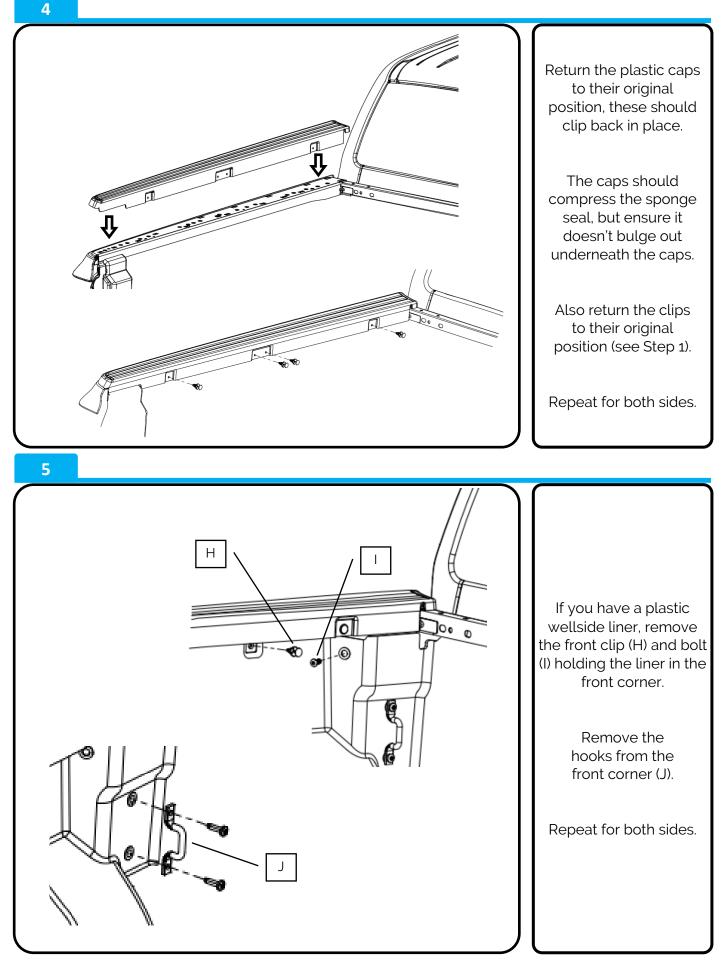



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz

Australia Support:

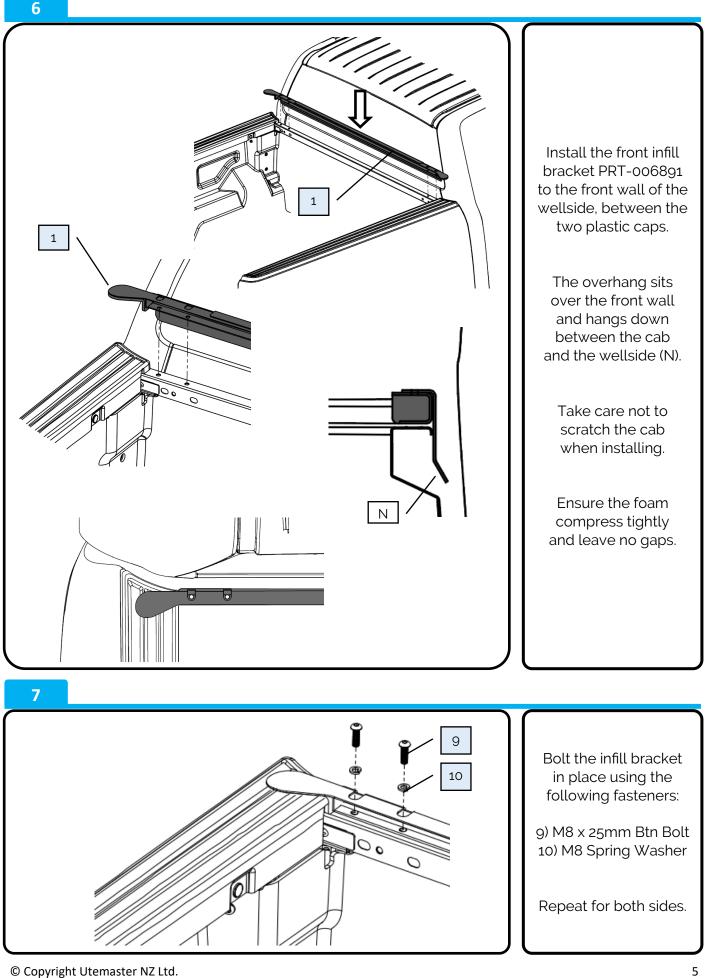




P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz

Australia Support:

P: 1800 769 577 E: sales@utemaster.com.au W: www.utemaster.com.au

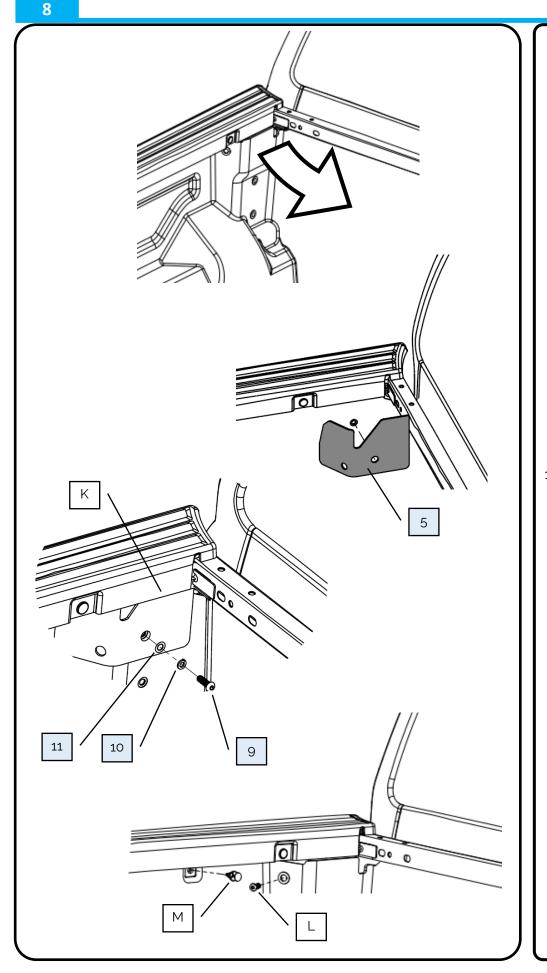

This step is only relevant for plastic wellside liners, spray liners will need a separate sealing kit Pull the front corner of the liner away from the wellside wall to give access behind. Insert the provided rubber gasket. This should sit inside the plastic cap (K). Bolt in place to the front thread using the following fasteners: 9) M8 x 25mm Btn Bolt 10) M8 Spring Washer 11) M8 Medium Washer Do not overtighten, or the bolt head will pull through the rubber. Return the liner to it's original position, sitting over top of the rubber gasket.

Return bolt (L) to its thread, this should pass through the hole in the rubber gasket.


Re-insert the plastic liner clip (M).

Repeat for both sides.



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

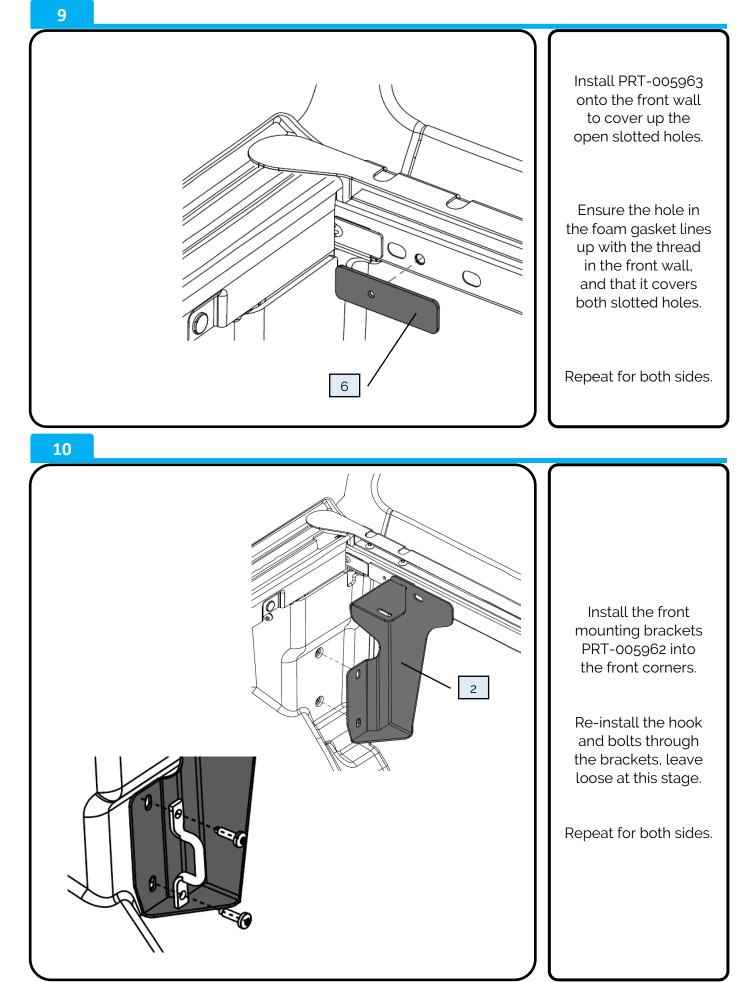



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

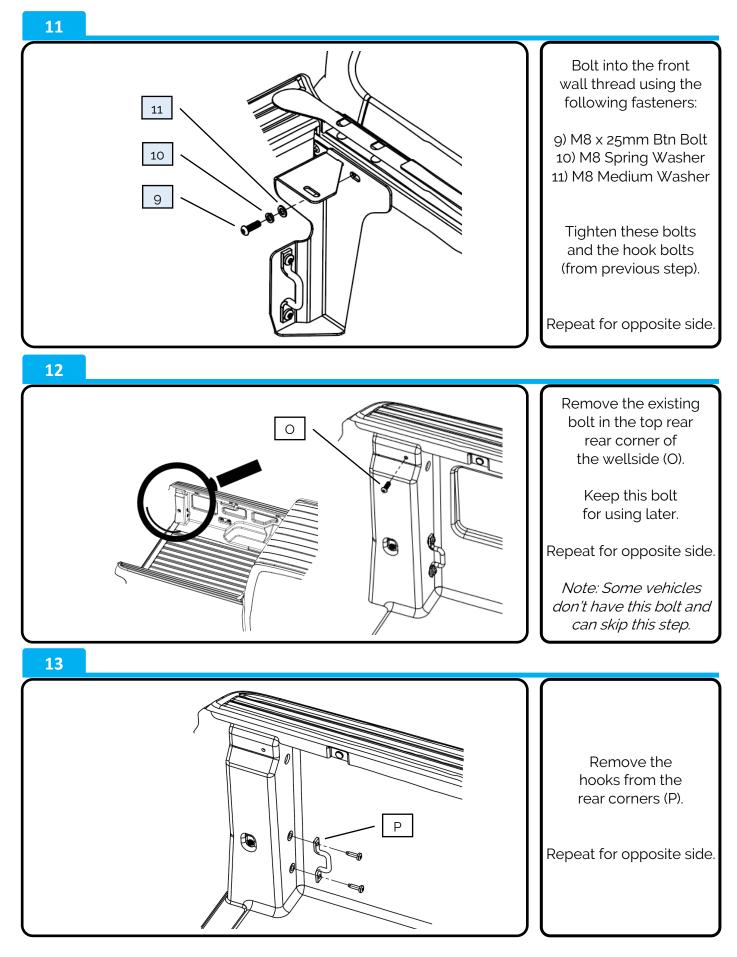



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

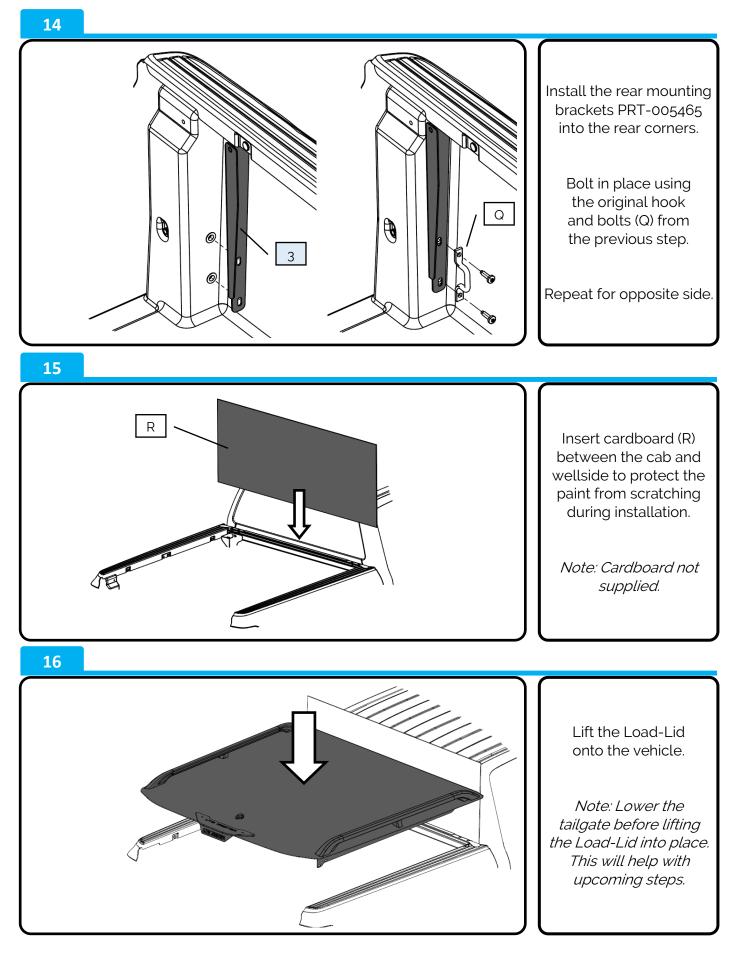



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz

Australia Support:

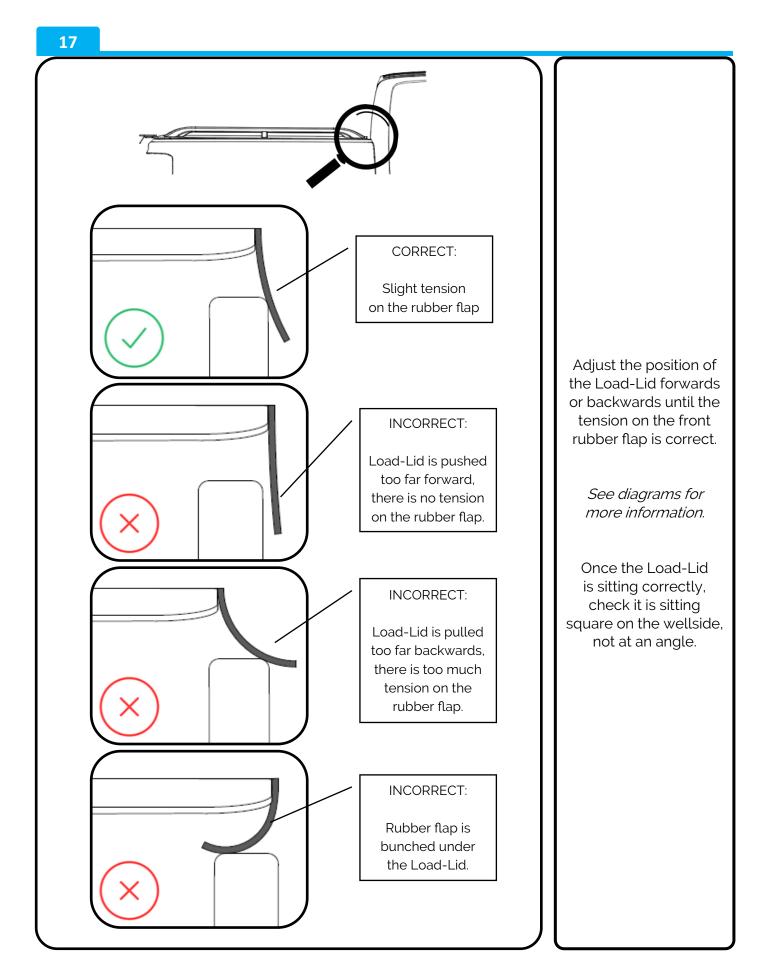




P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz

Australia Support:

P: 1800 769 577 E: sales@utemaster.com.au W: www.utemaster.com.au

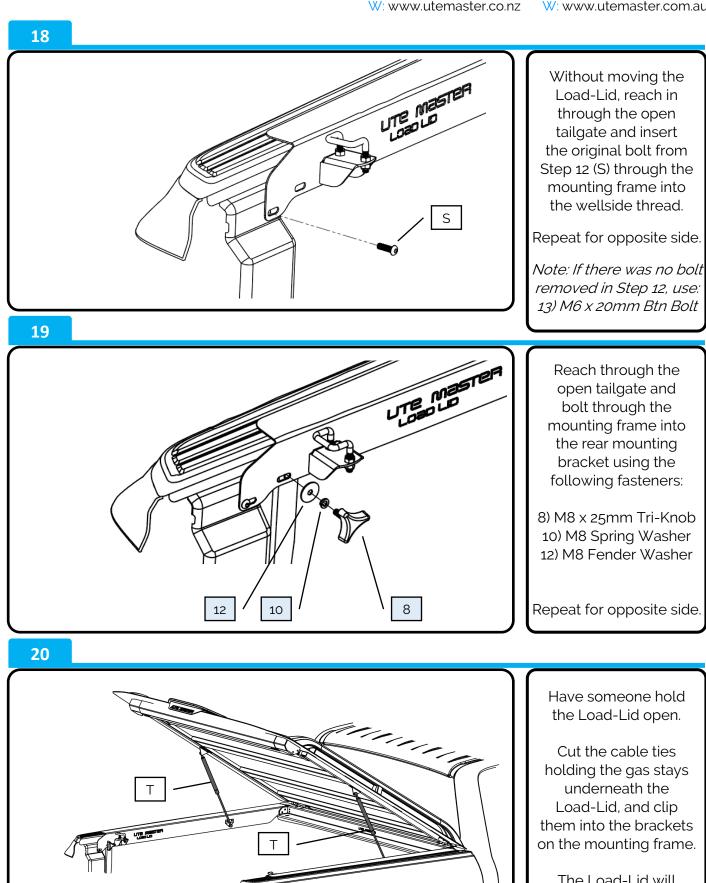


The Load-Lid will support itself once both gas stays are connected.



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz

Australia Support:

P: 1800 769 577 E: sales@utemaster.com.au W: www.utemaster.com.au

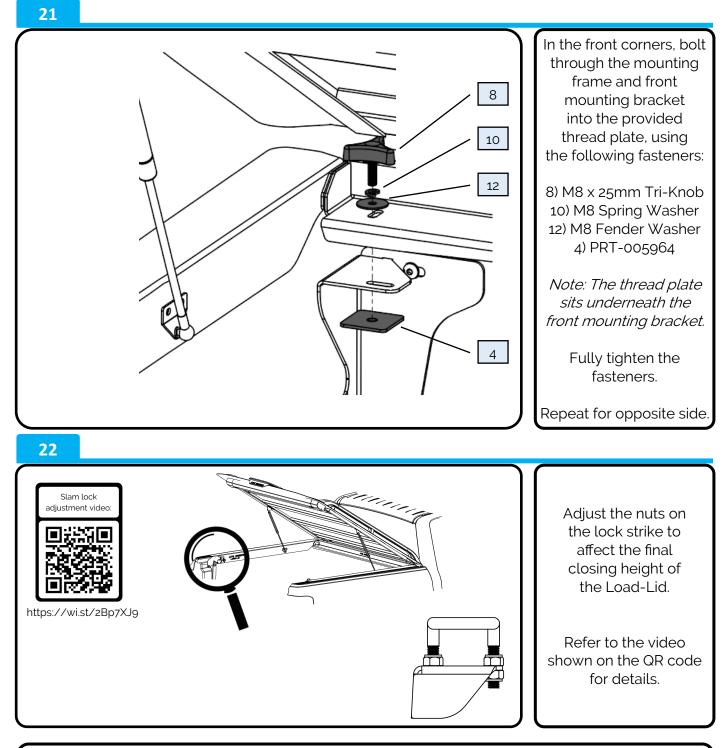

IMPORTANT NOTE:

When removing and refitting:

- Disconnect the gas stays and lock the Load-Lid into the mounting frame before undoing the clamps and removing the Load-Lid (this prevents damaging the wellside).
- When refitting the Load-Lid, ensure the rubber flap at the front of the Load-Lid is pressing firmly against the front of the wellside (refer to Step 17).
- If your Load-Lid has a rattle when driving, loosen all clamps and pull the Load-Lid back slightly to ensure the rubber flap is pressing firmly on the front (refer to Step 17), and re-tighten all clamps.