

P: 0800 683 352

P: 1800 43 345

**Australia Support:** 

E: sales@utemaster.co.nz E: sales@utemaster.com.au

W: www.utemaster.co.nz W: www.utemaster.com.au

# Holden Colorado 2012-2020 **Load-Lid Central Locking Fitting Instructions**

Thank you for purchasing a quality Utemaster™ product, our aim is providing you with as much assistance as possible throughout the fitting process. Please contact us if assistance is needed.

We recommend watching the installation video before attempting to install

Enter this address into your web browser to view the fitting video:

# https://wi.st/2HJ58qs




#### **DESPATCH:**

1x 80606-17 / WHUTELL-COL 1.1



Step 1) Connect the relays

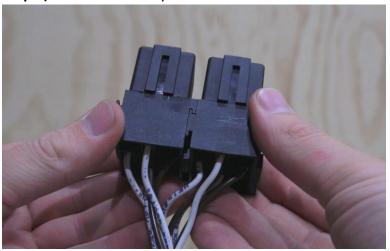



P: 0800 683 352

E: sales@utemaster.co.nz E: sales@utemaster.com.au

W: www.utemaster.co.nz W: www.utemaster.com.au

# **Australia Support:**

P: 1800 43 345

Step 2) Cable tie the relays in place






Step 3) Remove the earth bolt





Step 4) Connect the earth cable to the earth point and re-install the bolt

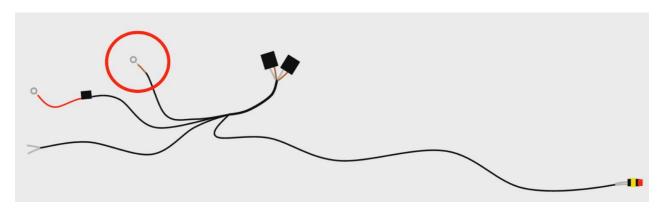



P: 0800 683 352

E: sales@utemaster.co.nz E: sales@utemaster.com.au

P: 1800 43 345


**Australia Support:** 

W: www.utemaster.co.nz W: www.utemaster.com.au

**Step 5)** Open the battery cover and remove the nut shown



**Step 6)** Attach the power cable to the thread and re-install the nut. Close the battery cover

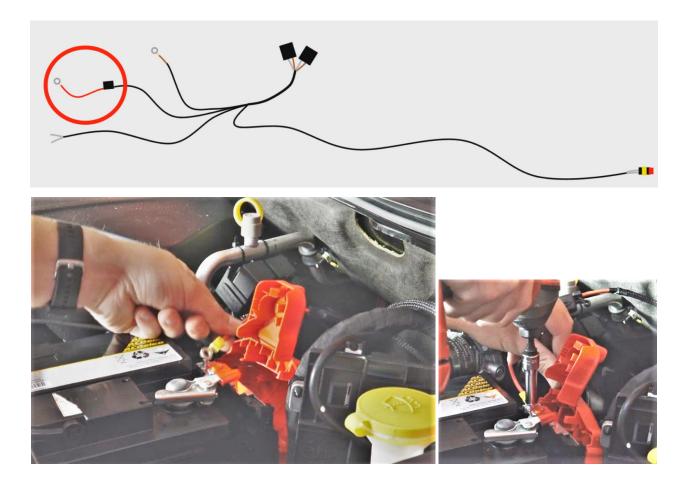



P: 0800 683 352

W: www.utemaster.co.nz W: www.utemaster.com.au

E: sales@utemaster.co.nz E: sales@utemaster.com.au

**Australia Support:** 

P: 1800 43 345

Step 7) Remove the plastic caps and rubber seal to expose the wiring behind the kick panel







Step 8) Locate the cab entry point from the interior



Step 9) Make a small incision in the cab entry rubber seal





P: 0800 683 352

E: sales@utemaster.co.nz E: sales@utemaster.com.au

**Australia Support:** P: 1800 43 345

W: www.utemaster.co.nz W: www.utemaster.com.au

Step 10) Insert a wire through the incision




Step 11) Tape the Lock/Unlock cable to the wire and draw it back through into the cab interior





Step 12) Behind the kick panel, undo the plug to make it easier to access the wires

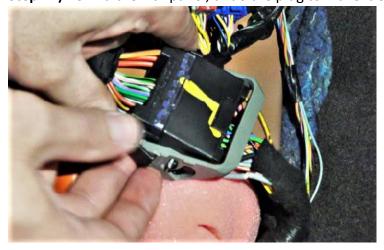



P: 0800 683 352


W: www.utemaster.co.nz W: www.utemaster.com.au

### **Australia Support:**

P: 1800 43 345

E: sales@utemaster.co.nz E: sales@utemaster.com.au


Step 13) Identify the wires with the colour blends indicated

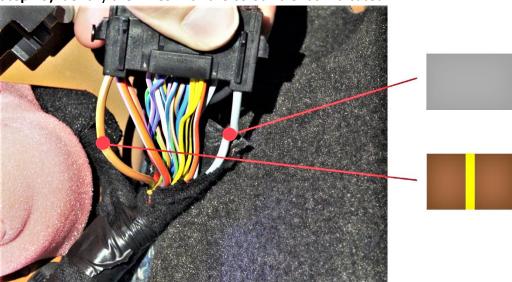

Step 14) Place one of the provided clips over the Grey wire



Step 15) Insert the labelled 'Lock' into the plastic clip alongside the Grey/Brown wire

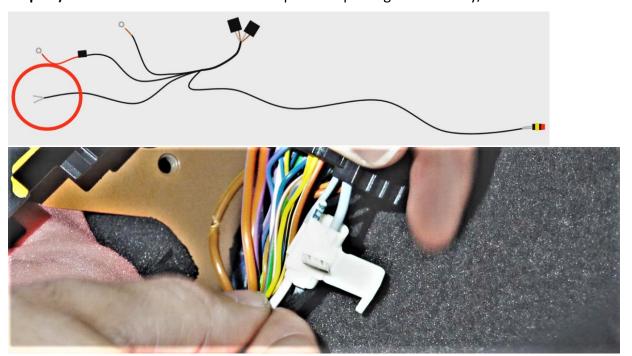



P: 0800 683 352

E: sales@utemaster.co.nz E: sales@utemaster.com.au

**Australia Support:** P: 1800 43 345

W: www.utemaster.co.nz W: www.utemaster.com.au

Step 16) Clamp the clip closed until the metal plate is no longer protruding, and close the clip




Step 17) Repeat Steps 14-16 for the Brown/Yellow wire

Step 18) Insert the plug back into its socket



Step 19) Re-install the plastic caps & rubber seal in the passenger's side door

Step 20) Take the last cable remaining on the loom and feed it down the firewall so it comes out underneath the vehicle

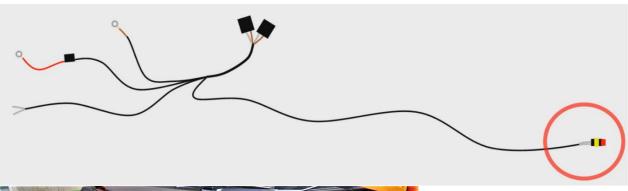





P: 0800 683 352


W: www.utemaster.co.nz W: www.utemaster.com.au

#### **Australia Support:**


P: 1800 43 345

E: sales@utemaster.co.nz E: sales@utemaster.com.au

Step 21) Run down the length of the chassis and cable tie in place

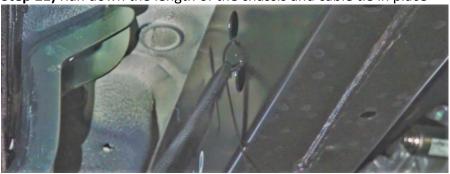

Step 22) Pull up through the gap between the cab and wellside

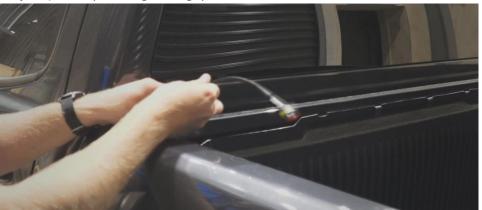

Step 23) Install the Load-Lid as per fitting instructions provided

Step 24) Connect the vehicle wiring loom to the plug already installed in the Load-Lid



Step 25) Cable tie any slack cables safely out of sight and where they won't hinder moving parts

Your central locking is now fully fitted and ready to use. Thank you again for using Utemaster™ and don't forget to keep checking our website for our latest innovations!