

P: 0800 683 352 W: www.utemaster.co.nz Australia Support:

P: 1800 769 577 E: sales@utemaster.co.nz E: sales@utemaster.com.au W: www.utemaster.com.au

DESPATCH LIST

Vehicle Components (required for all installations):

| ID# | DESCRIPTION | IMAGE | QTY |
|-----|---|-------|-----|
| 1 | 80606-42 (Chevrolet Silverado Vehicle Loom) | | 1x |

Load-Lid Components (only required if the Load-Lid does not have central locking pre-installed):

| ID# | DESCRIPTION | IMAGE | QTY |
|-----|---|-------|-----|
| 3 | Load-Lid Actuator Assembly (1x PRT-003713, 1x PRT-003714, 1x 003611) | | 1x |
| 4 | PRT-002878 | | 1x |
| 5 | PRT-002879 | e C | 1x |
| 6 | M6 x 12mm Button Head Bolt | E JAM | 2x |
| 7 | M6 Spring Washer | | 2x |
| 8 | 80606-43 (Load-Lid Loom) | | 1x |



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz

Australia Support: P: 1800 769 577 E: sales@utemaster.com.au W: www.utemaster.com.au


Chevrolet Silverado Load-Lid Central Locking Fitting Instructions

LL-CLKCSA33






30 - 60 mins

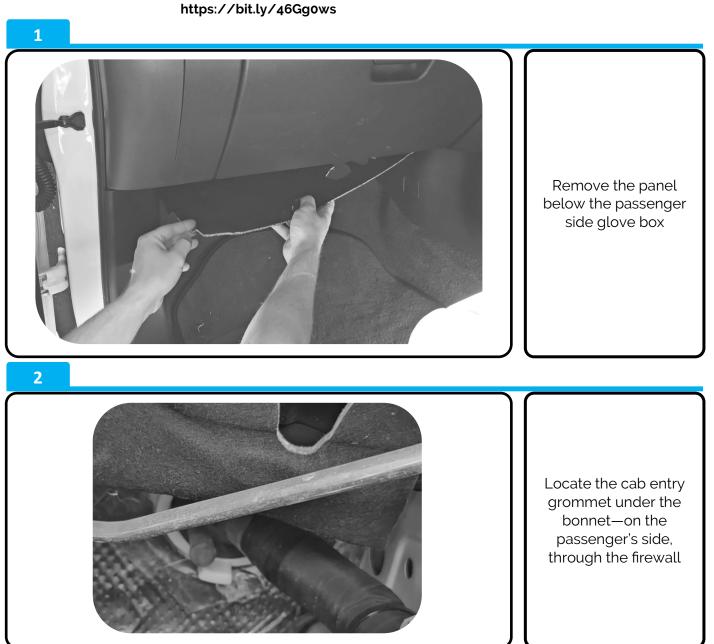



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

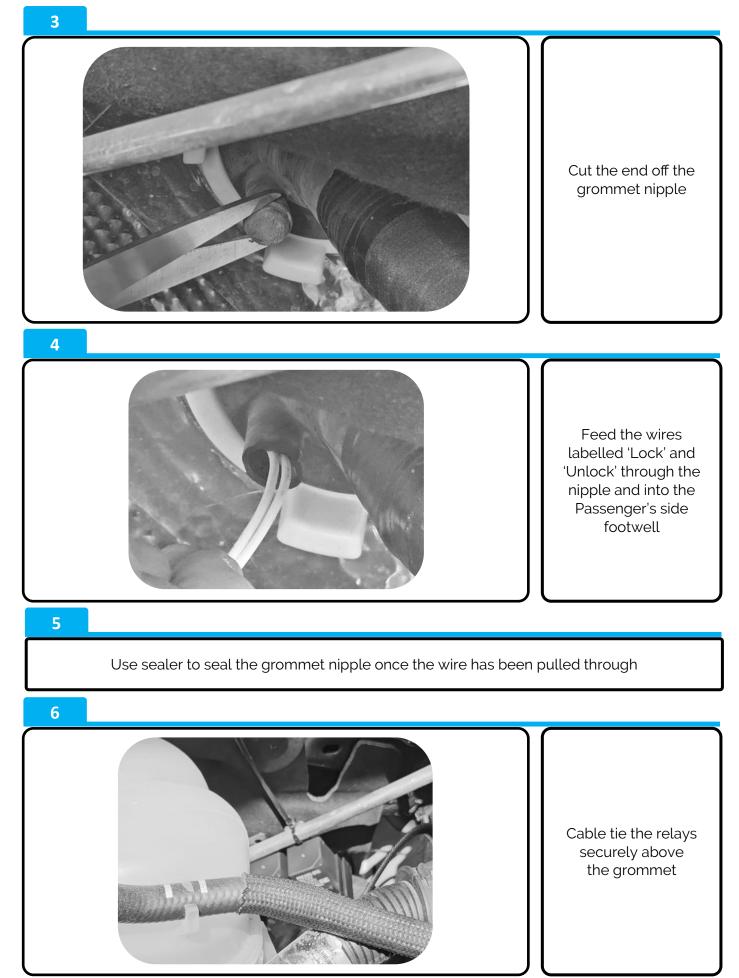



NZ Support: P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

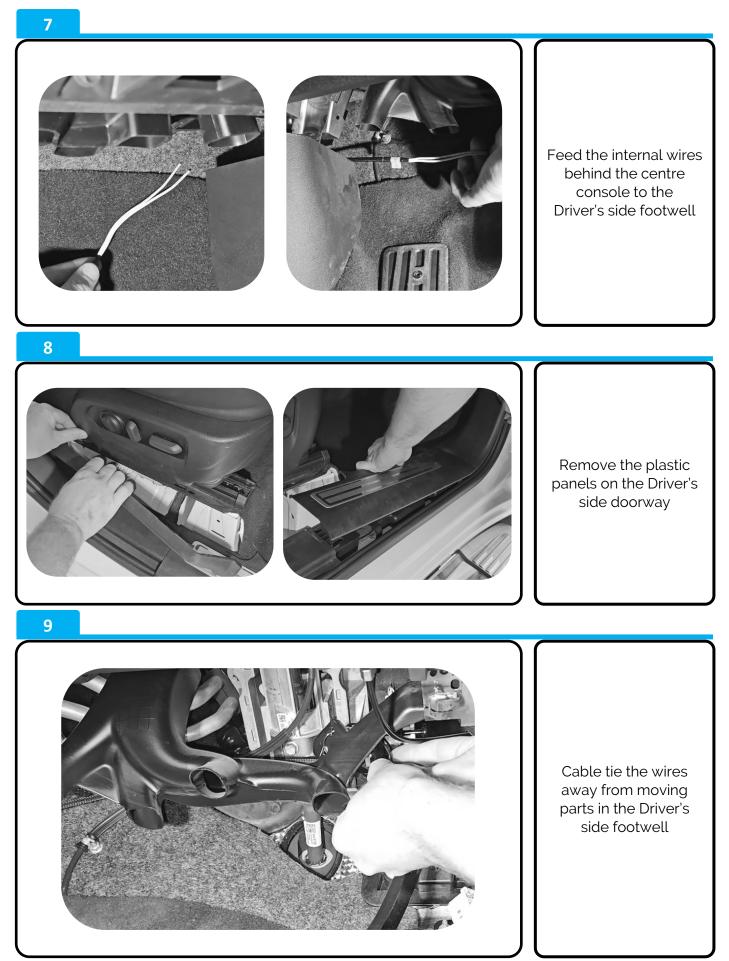



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

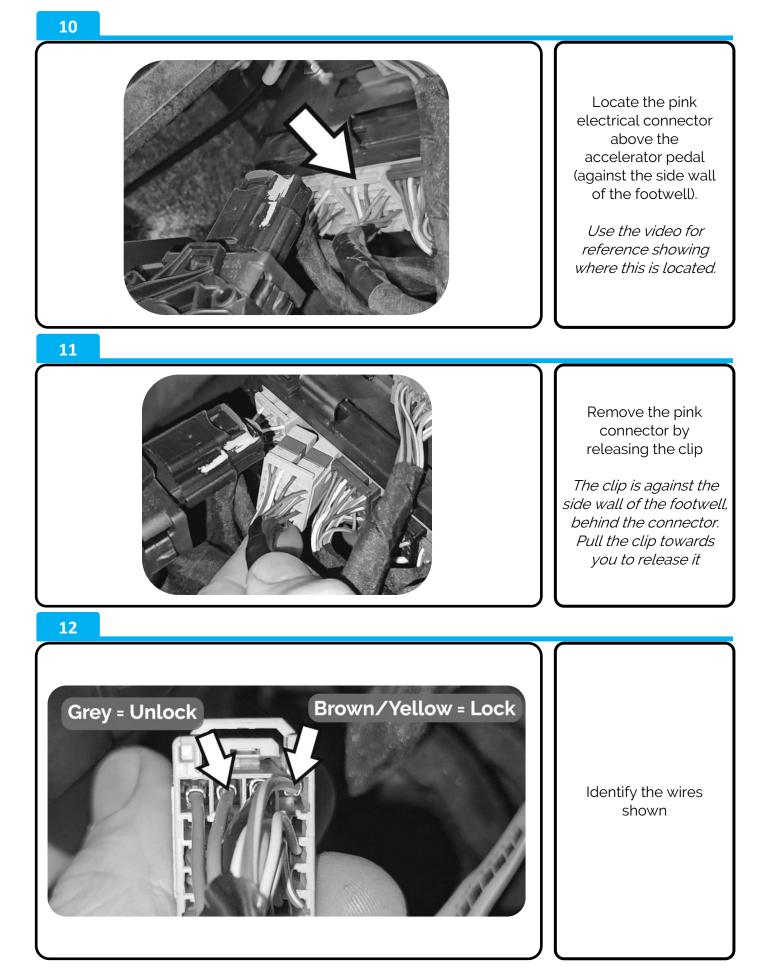



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

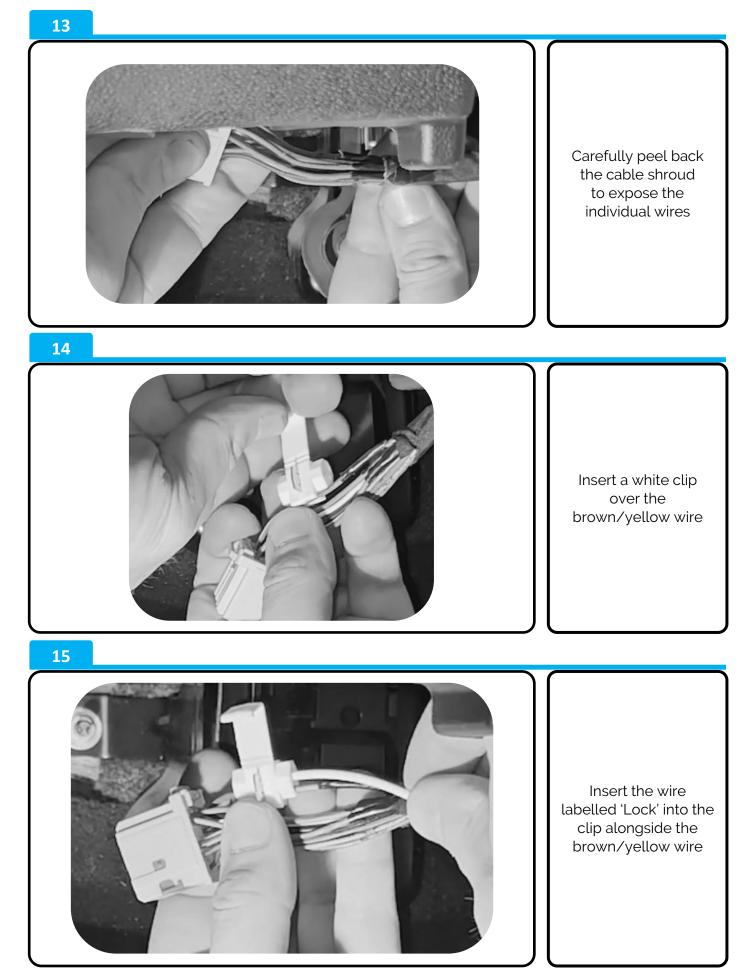



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

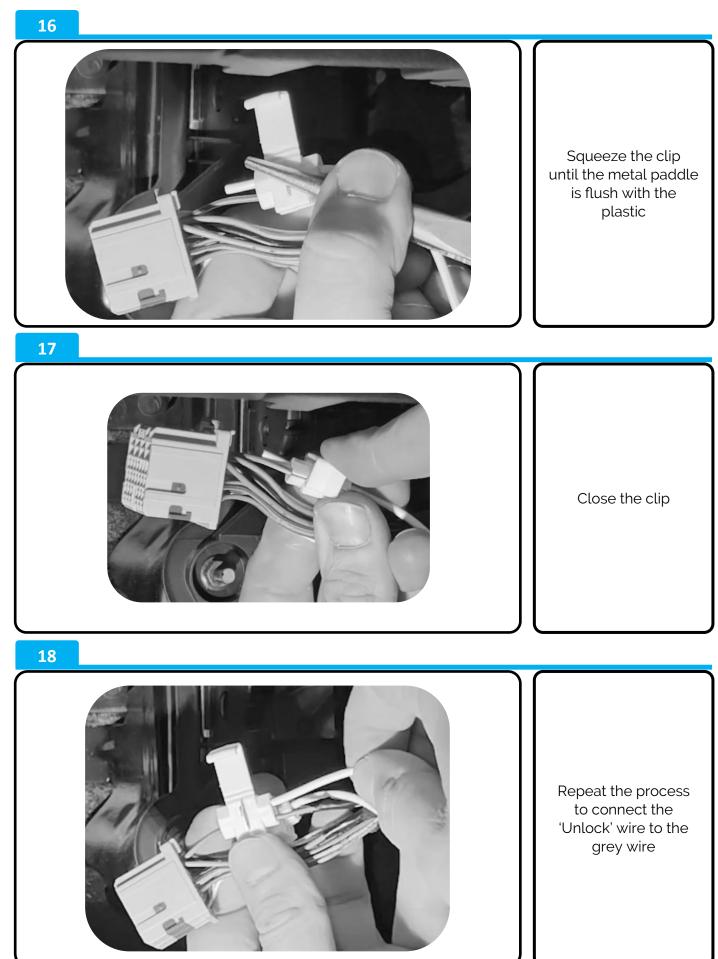



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

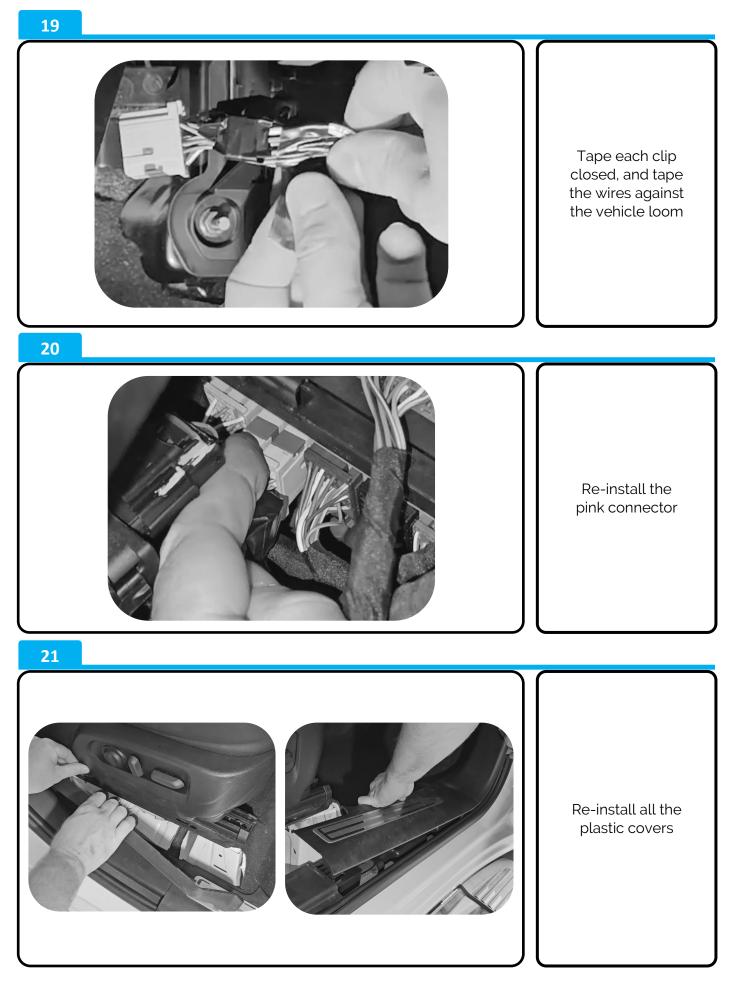



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz

Australia Support:

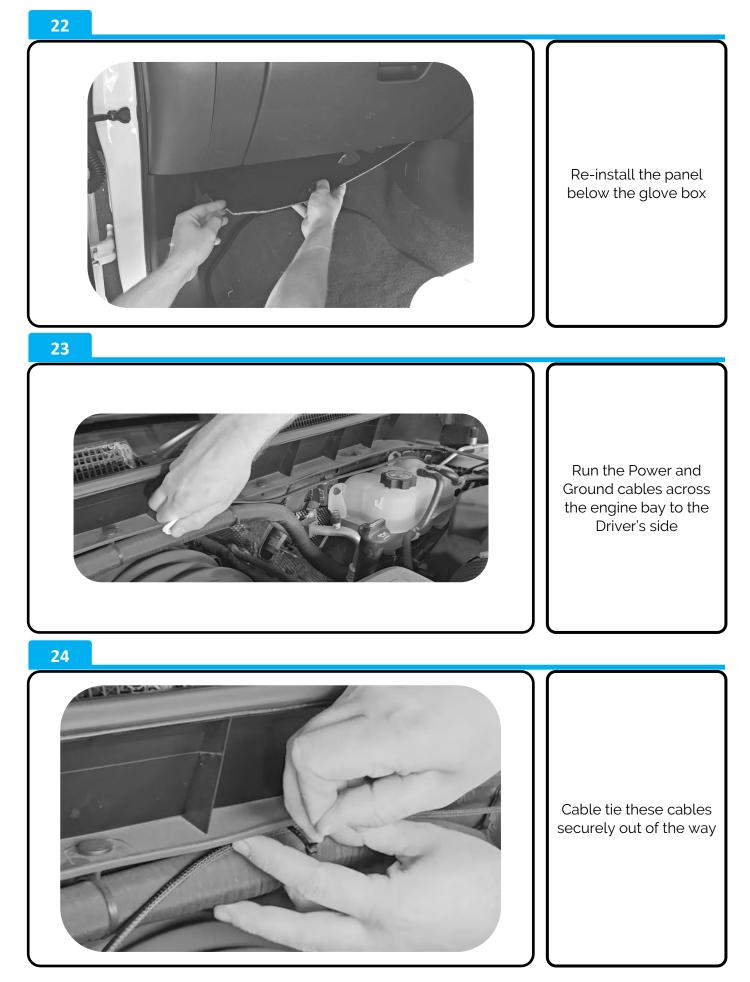



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz

Australia Support:

P: 1800 769 577 E: sales@utemaster.com.au W: www.utemaster.com.au




Connect the Ground cable to the ground connector on the vehicle



Connect the Power cable to the battery positive terminal

27

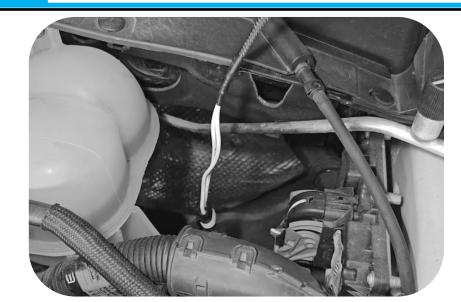

Feed the long cable down the firewall on the Passenger's side, to the underside of the vehicle.


Ensure it is clear of any moving or hot components



P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz

Australia Support:

P: 1800 769 577 E: sales@utemaster.com.au W: www.utemaster.com.au

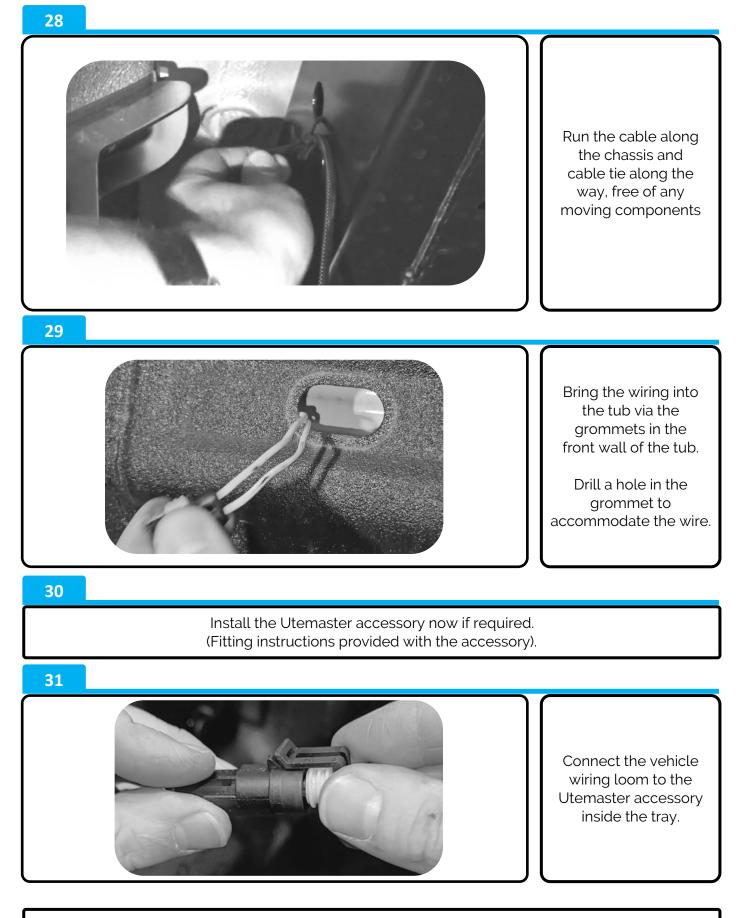

Your central locking is now fully fitted and ready to use. Thanks again for choosing Utemaster and don't forget to keep checking our website for our latest innovations!