

NZ Support:

P: 0800 683 352

E: sales@utemaster.co.nz

W: www.utemaster.co.nz

P: 1800 769 577

Australia Support:

E: sales@utemaster.com.au

W: www.utemaster.com.au

VW Amarok 2023+ SPRAYLINERSEAL-VWB3



bit.ly/3neZ4fO

NOTE:

These instructions are to be used in conjunction with the Load-Lid installation instructions.


For full Load-Lid installation instructions, refer to the instruction booklet provided with the Load-Lid.

Despatch List:

ID#	DESCRIPTION	IMAGE	QTY
1	PRT-006355-01L PRT-006355-01R (with gasket applied)		1x 1x
2	CC10827		6x
3	M8 x 25mm Btn Bolt (Black)		4x

ID#	DESCRIPTION	IMAGE	QTY
4	M8 Spring Washer		4x
5	M8 Medium Washer		4x
6	M8 Foam washer	•	6х

1

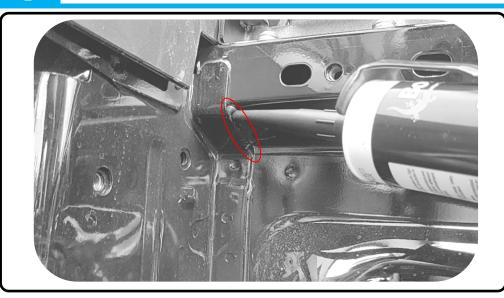

Fill the front corner hole shown in the image with Sealer (not provided)

Repeat for both sides



NZ Support:

- P: 0800 683 352
- E: sales@utemaster.co.nz
- W: www.utemaster.co.nz

Australia Support:

- P: 1800 769 577
- E: sales@utemaster.com.au
- W: www.utemaster.com.au

5





Install front sealing brackets on both sides using the following fasteners:

3) M8 x 25mm Btn Bolt4) M8 Spring Washer5) M8 Medium Washer

3



Combine the foam washers with the plastic clips

4



Insert the plastic clips firmly into the 6 holes along the front of the wellside

5

Refer to the provided load-lid fitting instructions for the next steps.