

NZ Support: P: 0800 683 352

Australia Support: P: 1800 769 577 E: sales@utemaster.co.nz E: sales@utemaster.com.au W: www.utemaster.co.nz W: www.utemaster.com.au

LOADSTOP-DRA29-SR

Ram 1500 2018+ With Cast Aluminium Side Rails





30-60 mins

https://bit.ly/3fvXIsK

Despatch List:


| ID# | DESCRIPTION | IMAGE | QTY |
|-----|-------------------------------|--|----------|
| 1 | Base Rail PRT-005334 | | 1x |
| 2 | Top Rail PRT-005333 | CONCERCION CHICAGO CHI | 1x |
| 3 | PRT-005304L PRT-005304R | ure means | 1x 1x |
| 4 | M6 x 12mm Btn Bolt (Black) | | 2x |
| 5 | M8 x 16mm Btn Bolt (Black) | Gauge | 14x |
| 6 | M6 Spring Washer | C | 2x |
| 7 | M8 Spring Washer | C | 9x |
| 8 | M8 Nyloc Nut | | 5x |
| 9 | Thread Plate PRT-006056 | TOS . | 2x |



NZ Support:

P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

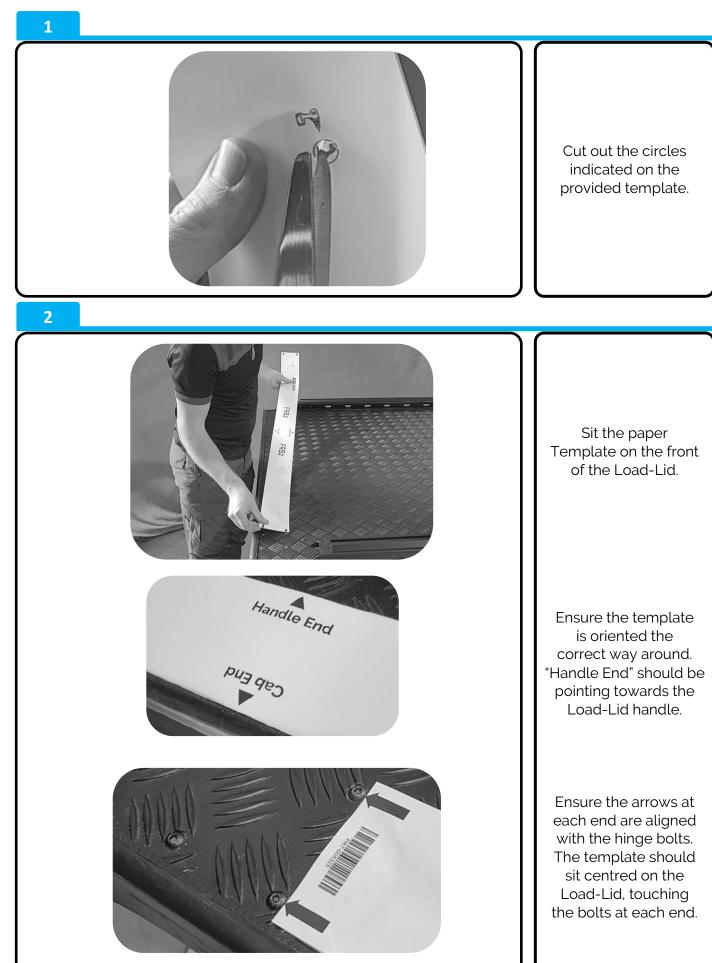



NZ Support: P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz

Australia Support:

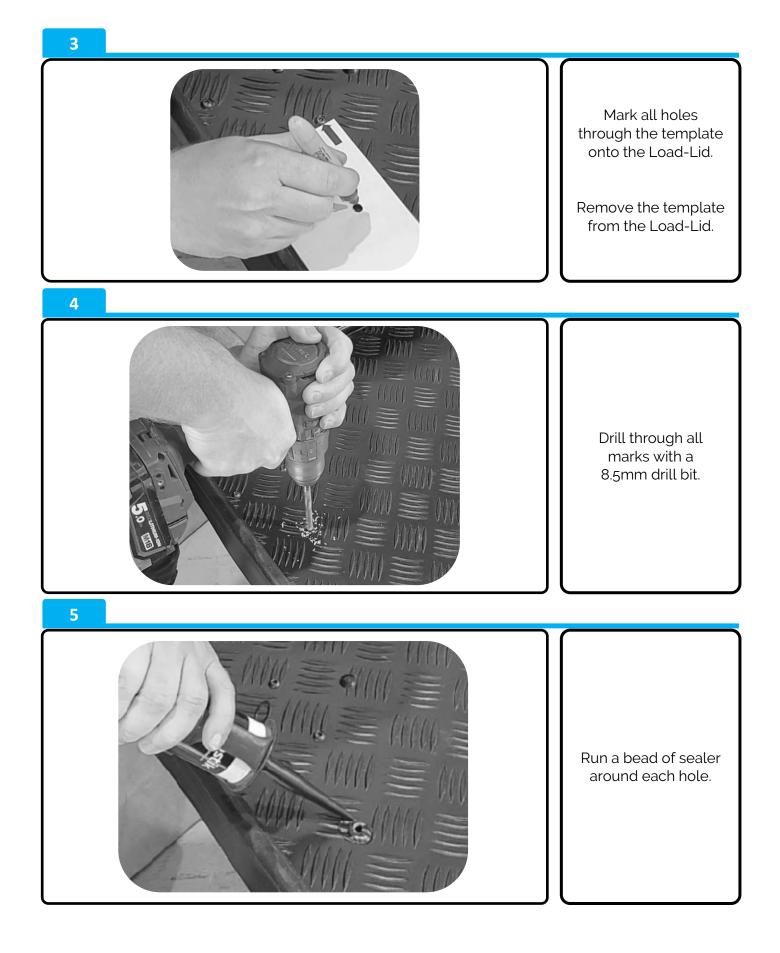




NZ Support:

P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

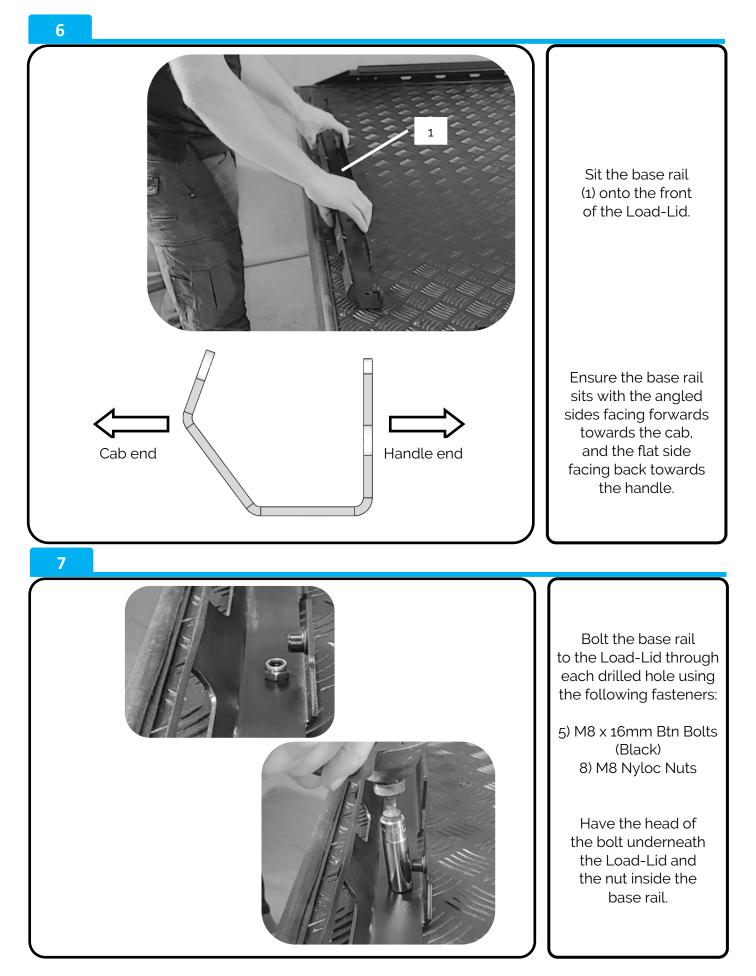



NZ Support: P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz

Australia Support:

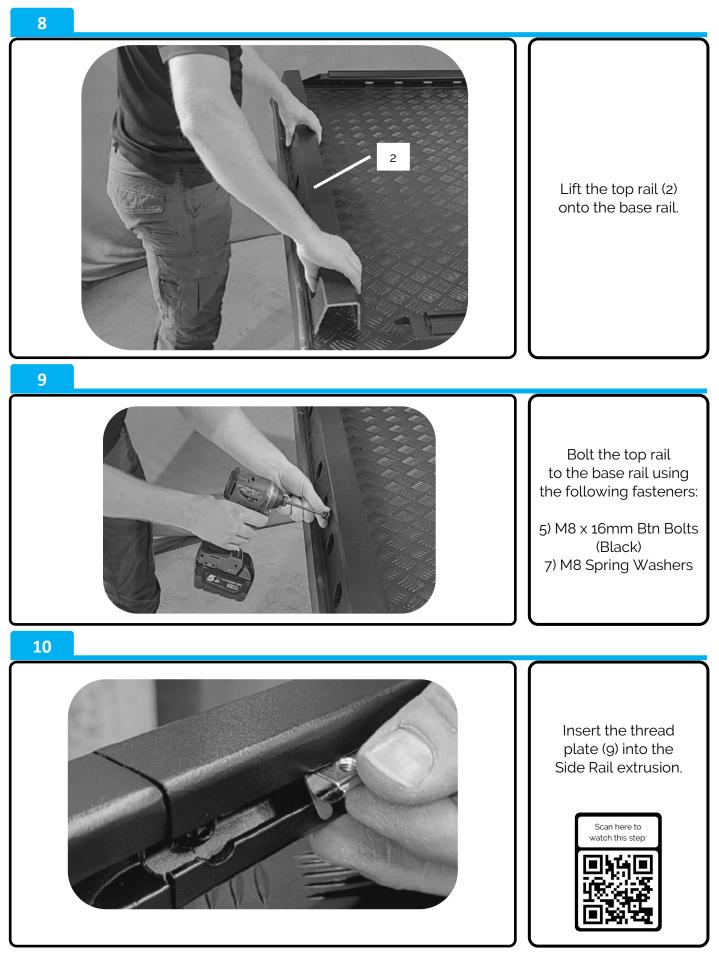



NZ Support:

P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

P: 1800 769 577 E: sales@utemaster.com.au W: www.utemaster.com.au



Sit the front feet (3) over the Load-Stop and Side Rail.

12

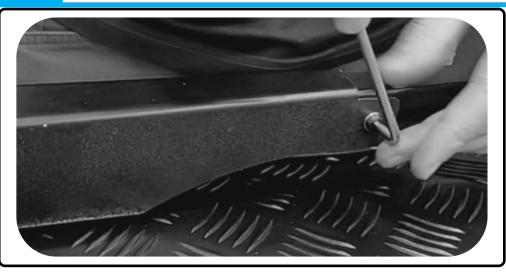

Bolt the front feet to the Side Rail thread plate, using the following fasteners:

4) M6 x 12mm Btn Bolts (Black)6) M6 Spring Washers

13



Bolt the front feet to the Load Stop using the following fasteners:

5) M8 x 16mm Btn Bolts (Black) 7) M8 Spring Washers