

NZ Support:

P: 0800 683 352

E: sales@utemaster.co.nz W: www.utemaster.co.nz

1.0000 003 332

P: 1800 769 577

Australia Support:

E: sales@utemaster.com.au

W: www.utemaster.com.au

Load-Lid RHS Tool Mount Kit (TL-MNT-RHS)



Installation video bit.ly/3RnlyFe

Despatched by:



Fitting Time: **10 Minutes**

Despatch List:

ID#	DESCRIPTION	IMAGE	QTY	✓
[1]	AceO'Spades Holder		x2	
[2]	M8 T-Nut Thread Plate <i>(PRT-006056)</i>		X2	
[3]	M8 Cap Screw (Black)		X2	

Place a spring loaded T-nut [2] into the track you want to mount the first holder to.




NZ Support:

- P: 0800 683 352
- E: sales@utemaster.co.nz
- W: www.utemaster.co.nz

Australia Support:

- P: 1800 769 577
- E: sales@utemaster.com.au
- W: www.utemaster.com.au

2

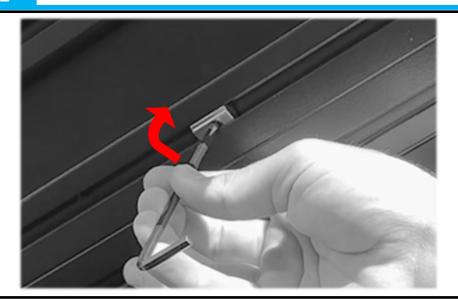

Rotate the T-nut over so the thread is facing out of the track. Using an Allen key or similar object is recommended for this step.

3



Insert 1x M8 Cap Screw
[3] into the mounting hole of the AceO'Spades

4



Using a 5mm Hex key, thread the cap screw into the T-nut thread plate. The holder should still be able to rotate




NZ Support:

- P: 0800 683 352
- E: sales@utemaster.co.nz
- W: www.utemaster.co.nz

Australia Support:

- P: 1800 769 577
- E: sales@utemaster.com.au
- W: www.utemaster.com.au

5

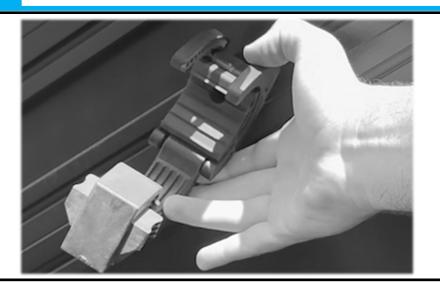

Rotate the AceO'Spades holder into the desired orientation.

6



Repeat the previous steps for the second AceO'Spades holder.

Make sure to line the pair of holders up with each other so your desired tool can be held in place sufficiently.

Your Load Lid Tool Mount Kit is now fully fitted and ready use.

Thanks again for choosing Utemaster and don't forget to keep checking our website for our latest innovations!