

Ford Ranger 2022+ SPRAYLINERSEAL-FRC2



NOTE:
These instructions are to be used in conjunction with the Load-Lid installation instructions.
For full Load-Lid installation instructions, refer to the instruction booklet provided with the Load-Lid.


<https://cutt.ly/XNuzAtC>

Despatch List:

ID#	DESCRIPTION	IMAGE	QTY
1	PRT-006355-01L PRT-006355-01R <i>(with gasket applied)</i>		1x 1x
2	CC10827		6x
3	M8 x 25mm Btn Bolt (Black)		4x

ID#	DESCRIPTION	IMAGE	QTY
4	M8 Spring Washer		4x
5	M8 Medium Washer		4x
6	M8 Foam washer		6x


1

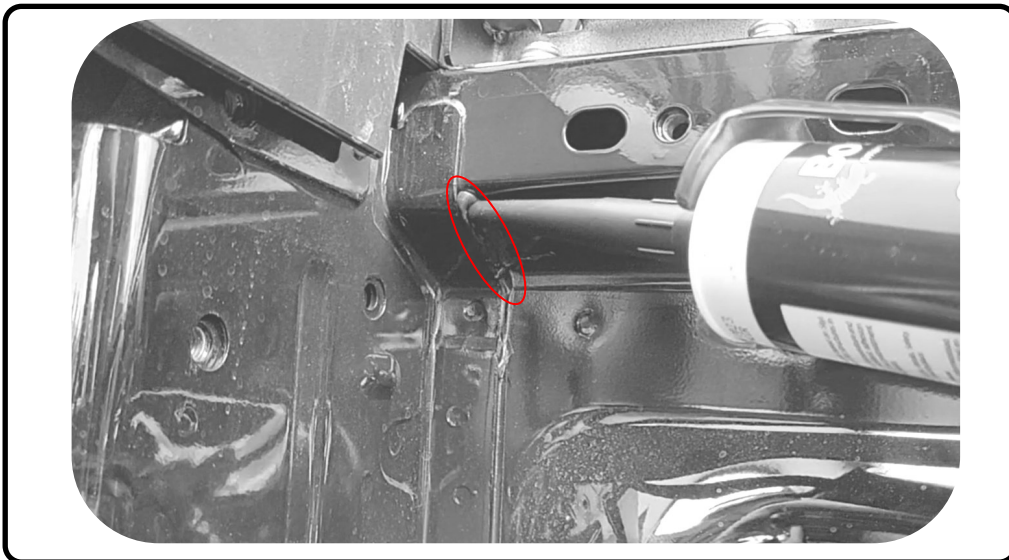

Fill the front corner hole shown in the image with Sealer (not provided)

Repeat for both sides

2

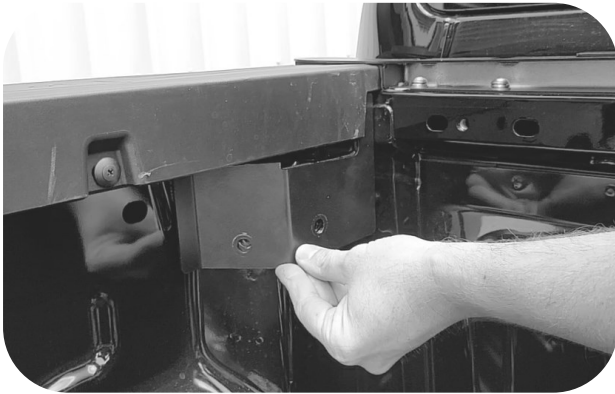

Install front sealing brackets on both sides using the following fasteners:

- 3) M8 x 25mm Btn Bolt
- 4) M8 Spring Washer
- 5) M8 Medium Washer

3



Combine the foam washers with the plastic clips

4



Insert the plastic clips firmly into the 6 holes along the front of the wellside

5

Refer to the provided load-lid fitting instructions for the next steps .