

NZ Support: P: 0800 683 352

Australia Support: P: 1800 769 577 E: sales@utemaster.co.nz E: sales@utemaster.com.au W: www.utemaster.co.nz W: www.utemaster.com.au

LOADSTOP-FRC2-SR

Ford Ranger 2022+ With Cast Aluminium Side Rails





30-60 mins

https://bit.ly/3fvXIsK

Despatch List:


ID#	DESCRIPTION	IMAGE	QTY
1	Base Rail PRT-005312		1x
2	Top Rail PRT-006041	CONCERCION CHICAGO CHI	1x
3	PRT-005304L PRT-005304R	ure means	1x 1x
4	M6 x 12mm Btn Bolt (Black)		2x
5	M8 x 16mm Btn Bolt (Black)	Gaunt	13x
6	M6 Spring Washer	C	2x
7	M8 Spring Washer	C	9x
8	M8 Nyloc Nut		4x
9	Thread Plate PRT-006056	TOS .	2x



NZ Support:

P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

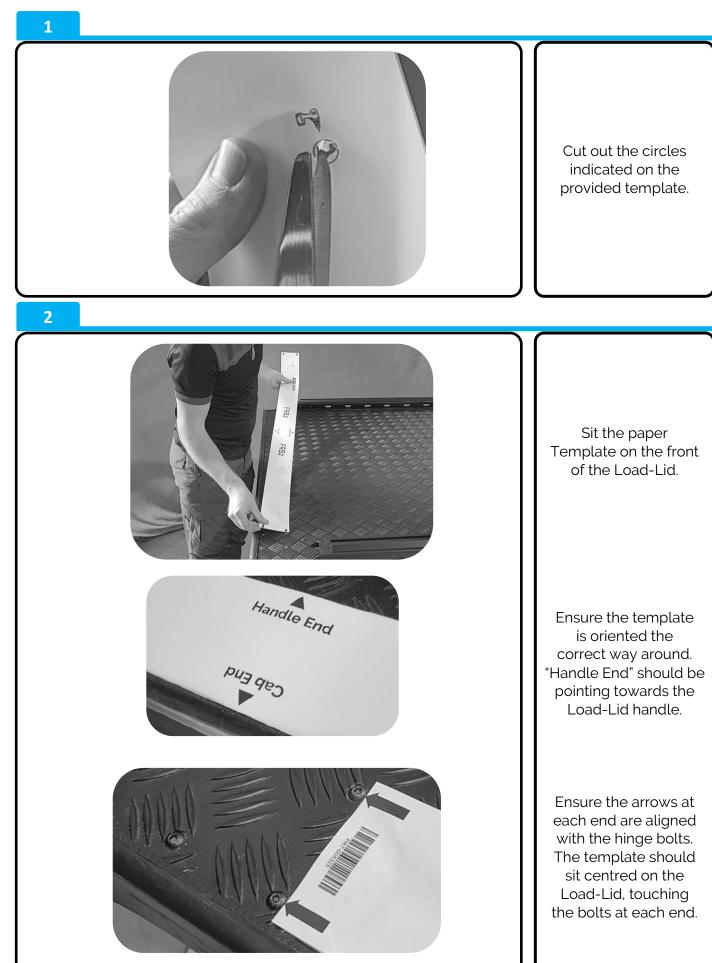



NZ Support: P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz

Australia Support:

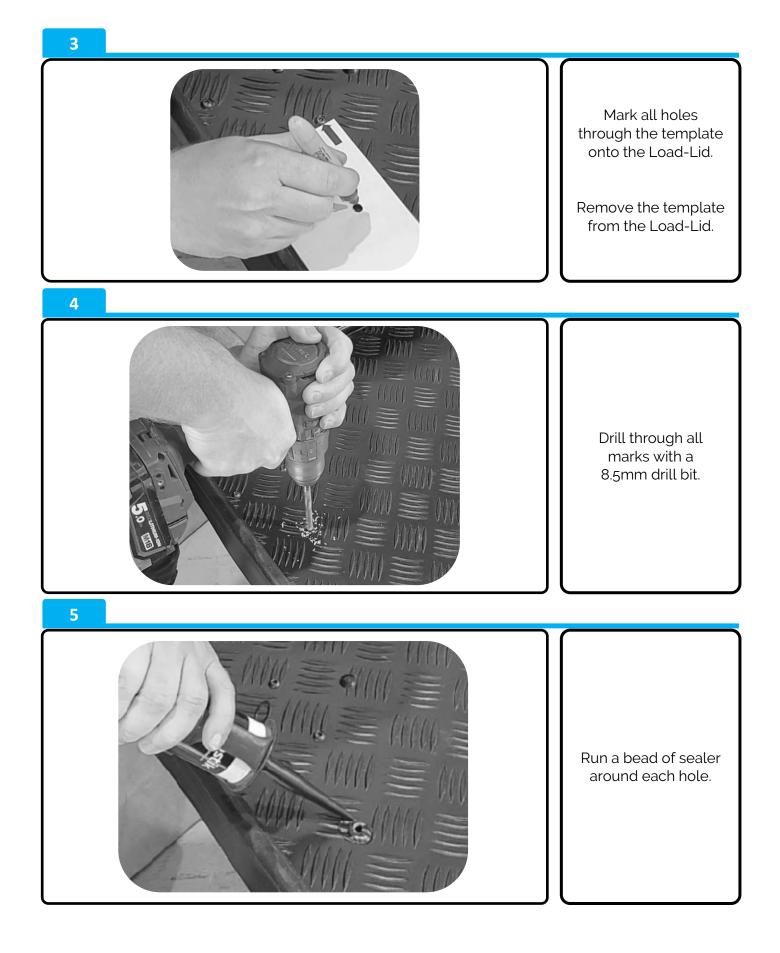




NZ Support:

P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

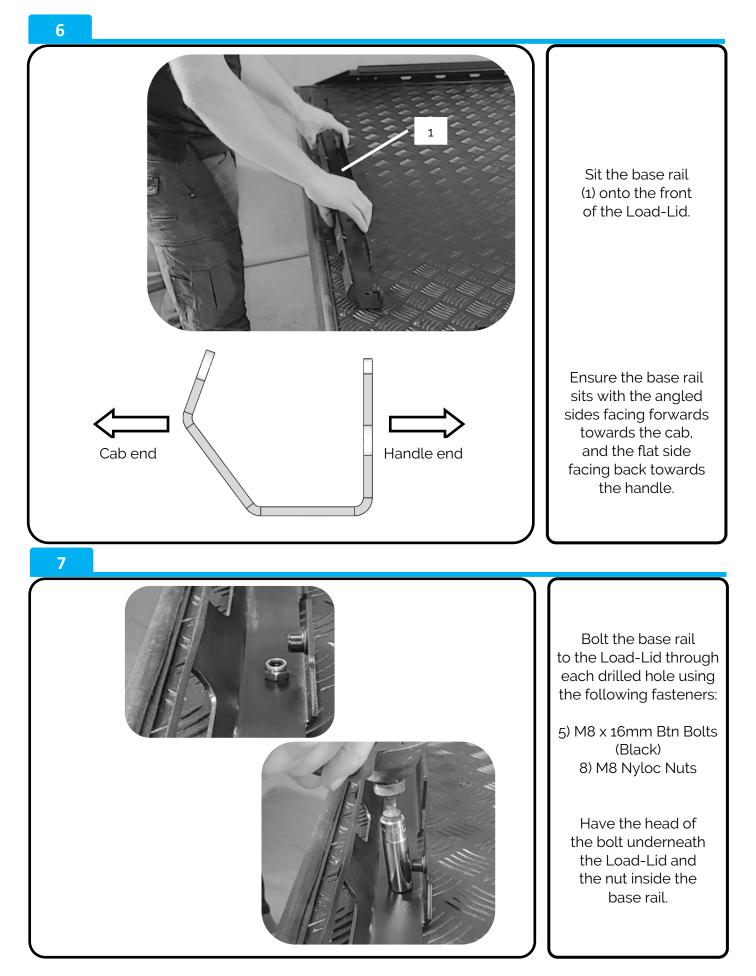



NZ Support: P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz

Australia Support:

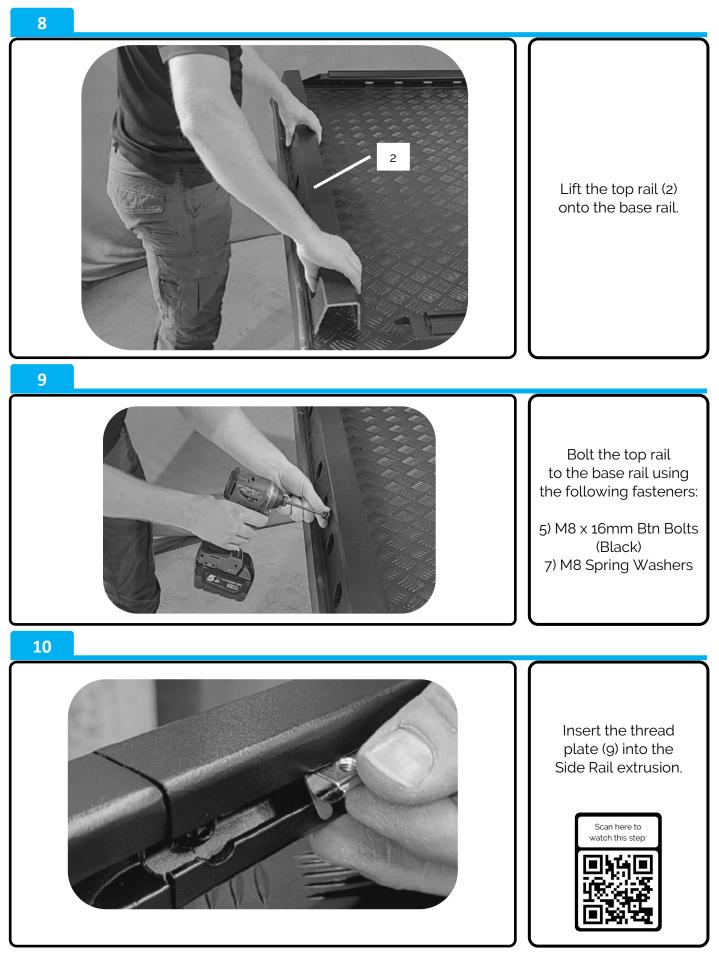



NZ Support:

P: 0800 683 352 E: sales@utemaster.co.nz W: www.utemaster.co.nz


Australia Support:

P: 1800 769 577 E: sales@utemaster.com.au W: www.utemaster.com.au



Sit the front feet (3) over the Load-Stop and Side Rail.

12

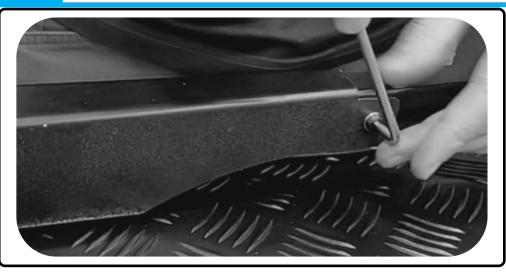

Bolt the front feet to the Side Rail thread plate, using the following fasteners:

4) M6 x 12mm Btn Bolts (Black)6) M6 Spring Washers

13



Bolt the front feet to the Load Stop using the following fasteners:

5) M8 x 16mm Btn Bolts (Black) 7) M8 Spring Washers