

P: 0800 683 352

E: sales@utemaster.com.au W: www.utemaster.co.nz

#### **Australia Support:**

P: 1800 769 577

#### W: www.utemaster.com.au

## LOADSTOP-VWA3-MSB-SR

# **Volkswagen Amarok 2011+** Sailplane Load-Lid with Cast Side Rails





https://bit.ly/3fvXIsK

### **Despatch List:**

ID#	DESCRIPTION	IMAGE	QTY
1	Base Rail PRT-005319		1x
2	Top Rail PRT-005396		1x
3	PRT-005367L PRT-005367R	UTB MISSESS STL	1x 1x
4	M6 x 12mm Btn Bolt (Black)		2x
5	M8 x 16mm Btn Bolt (Black)		7x
6	M6 Spring Washer		2x
7	M8 Spring Washer		7x
8	M8 Nyloc Nut		3x
9	Thread Plate PRT-006056		2x



- P: 0800 683 352
- E: sales@utemaster.co.nz
- W: www.utemaster.co.nz

#### Australia Support:

- P: 1800 769 577
- E: sales@utemaster.com.au
- W: www.utemaster.com.au

1



Cut out the circles indicated on the provided template.

2



Sit the paper Template on the front of the Load-Lid.



Ensure the template is oriented the correct way around. "Handle End" should be pointing towards the Load-Lid handle.



each end are aligned with the hinge bolts.
The template should sit centred on the Load-Lid, touching the bolts at each end.



P: 0800 683 352

E: sales@utemaster.co.nz

W: www.utemaster.co.nz

#### **Australia Support:**

P: 1800 769 577

E: sales@utemaster.com.au

W: www.utemaster.com.au

3



Mark all holes through the template onto the Load-Lid.

Remove the template from the Load-Lid.

4



Drill through all marks with a 8.5mm drill bit.

5



Run a bead of sealer around each hole.



- P: 0800 683 352
- E: sales@utemaster.co.nz
- W: www.utemaster.co.nz


#### **Australia Support:**

- P: 1800 769 577
- E: sales@utemaster.com.au
- W: www.utemaster.com.au

6



Sit the base rail (1) onto the front of the Load-Lid.

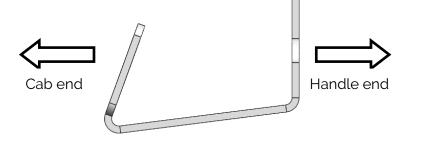

Ensure the base rail sits with the angled sides facing forwards towards the cab, and the flat side facing back towards the handle.





Bolt the base rail to the Load-Lid through each drilled hole using the following fasteners:

- 5) M8 x 16mm Btn Bolts (Black)
  - 8) M8 Nyloc Nuts

Have the head of the bolt underneath the Load-Lid and the nut inside the base rail.



- P: 0800 683 352
- E: sales@utemaster.co.nz
- W: www.utemaster.co.nz

#### Australia Support:

- P: 1800 769 577
- E: sales@utemaster.com.au
- W: www.utemaster.com.au

8



Lift the top rail (2) onto the base rail.

9



Bolt the top rail to the base rail using the following fasteners:

5) M8 x 16mm Btn Bolts (Black) 7) M8 Spring Washers

10



Insert the thread plate (9) into the Side Rail extrusion.





- P: 0800 683 352
- E: sales@utemaster.co.nz
- W: www.utemaster.co.nz

#### **Australia Support:**


- P: 1800 769 577
- E: sales@utemaster.com.au
- W: www.utemaster.com.au

11



Sit the front feet (3) over the Load-Stop and Side Rail.

12

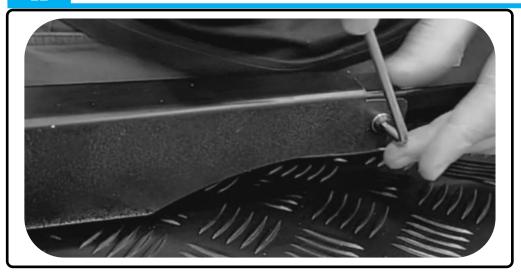

Bolt the front feet to the Side Rail thread plate, using the following fasteners:

- 4) M6 x 12mm Btn Bolts (Black)
- 6) M6 Spring Washers

13



Bolt the front feet to the Load Stop using the following fasteners:

5) M8 x 16mm Btn Bolts (Black) 7) M8 Spring Washers