

















## Nissan Navara 2020+ Centurion Canopy Despatch List

PRT-004209L PRT-004209R		1x 1x	
PRT-004440		2x	
PRT-004211L PRT-004211R		1x 1x	
PRT-004210L PRT-004210R		1x 1x	
PRT-004332L PRT-004332R		1x 1x	
M8 x 25mm Button head bolt		12x	
M8 flat steel washer		16x	
M8 nyloc nut		4x	
M8 spring washer		8x	
M6 x 40mm Button head bolt		2x	
M6 x 20mm Button head bolt		8x	
M6 Nyloc nut		2x	
M6 flat steel washer		10x	
M6 spring washer		8x	
Wire taps (red)		2x	
9mm x 6.4mm sponge tape 2m length		1x	

## Nissan Navara 2020+ Centurion Canopy Fitting Instructions

Thank you for purchasing a quality Utemaster™ product, our aim is providing you with as much assistance as possible throughout the fitting process. Please contact us if assistance is needed.

**We recommend watching the installation video before attempting to install**

Enter this address into your web browser to view the fitting video:

**<https://bit.ly/3vLHvCn>**



**Step 1)** Seal the cracks in the front corners.



**Step 2)** If the vehicle has a liner installed, notch the front and rear corners as shown.  
(Images show vehicle with canopy already installed)



**Step 3)** Run the provided sponge tape across the front of the wellside.



**Step 4)** Remove the bolts from the front of the wellside.



**Step 5)** Remove the bolts from the rear of the wellside.



**Step 6)** Install the rear base brackets (PRT-004211) to the rear wellside threads, ensure steel washers and spring washers are used with the bolts.



**Step 7)** Install the rear top bracket (PRT-004210) to the base bracket, ensure steel washers and spring washers are used with the bolts.



**Step 8)** Install the front brackets (PRT-004209) to the front wellside threads, ensure steel washers and spring washers are used with the bolts.





**Step 9)** Remove the bolts shown from the rear of the canopy.



**Step 10)** Lift the canopy onto the vehicle.




**Step 11)** Bolt the canopy to the front brackets, using M8 nuts and bolts with steel washers on both sides.



**Step 12)** Bolt the canopy to the rear brackets, using M6 bolts with steel washers and spring washers.



**Step 13)** Install the clamping tab (PRT-004440) to each side, with nyloc nut underneath the clamping tab.

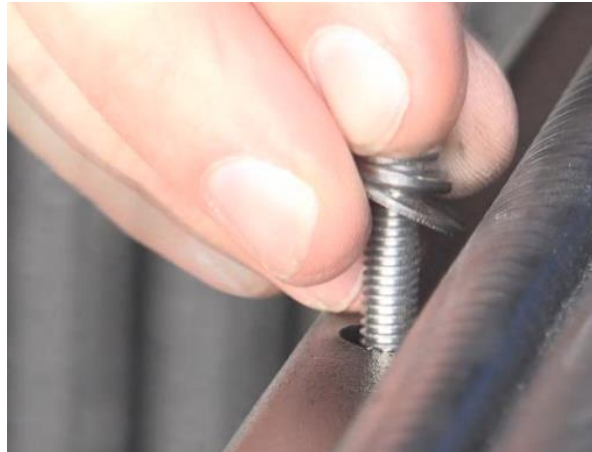

**Step 14)** Remove the tailgate latch bolt, and the liner bolt from the top corner of the tailgate (only if ute has a liner).



**Step 15)** Insert tailgate bracket underneath the liner as shown.



**Step 16)** Re-install the bolts through the tailgate bracket.



**Step 17)** Remove and unplug the passenger side rear light.




**Step 18)** Feed the canopy brake light wire through the wellside into the rear light cavity.





**Step 19)** Use the provided wire taps to connect the canopy wires onto the light wires indicated below:                      Red > Red                      Black > Black

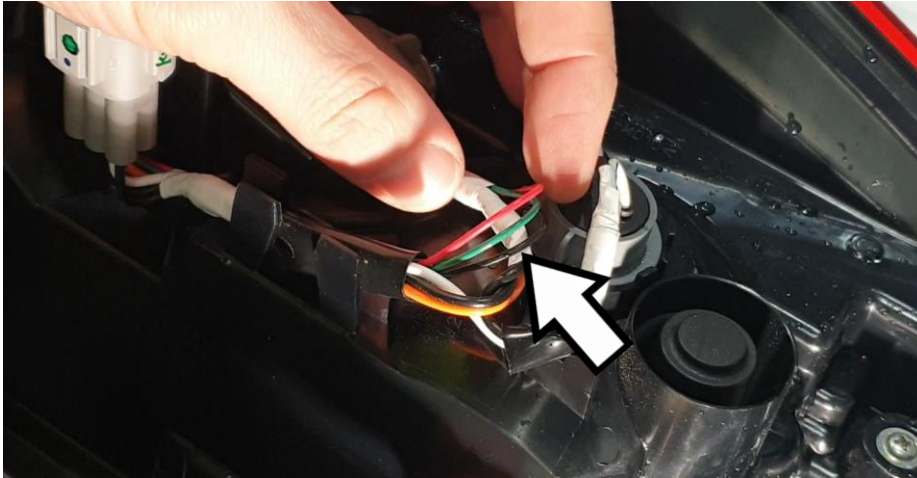

**Step 20)** Re-install the rear light.



Your canopy is now fully fitted and ready to use.  
Thank you again for using Utemaster™ and don't forget to keep checking our website for our latest innovations!