

Ford Ranger WildTrak 2022+

Tub Divider



Installation
video


bit.ly/3slo7QJ



Despatch List:


ID#	DESCRIPTION	IMAGE	QTY
1	Tub Divider Set <i>(PRT-006956)</i>		2X
2	Rear Brackets <i>(PRT-006956-03L)</i> <i>(PRT-006956-03R)</i>		1xL 1xR
3	Front Brackets <i>(PRT-006956-05L)</i> <i>(PRT-006956-05R)</i>		1xL 1xR
5	M8 x 20mm Btn Bolt		8x
6	M8 Spring Washer		8x
7	M8 Flat Washer		8x

1

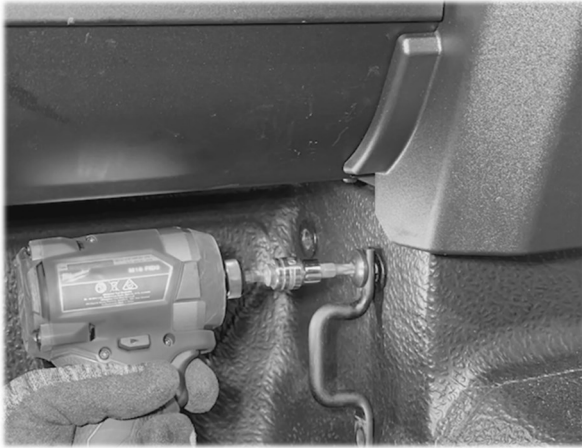

Remove the front hooks on both sides of the tub

2

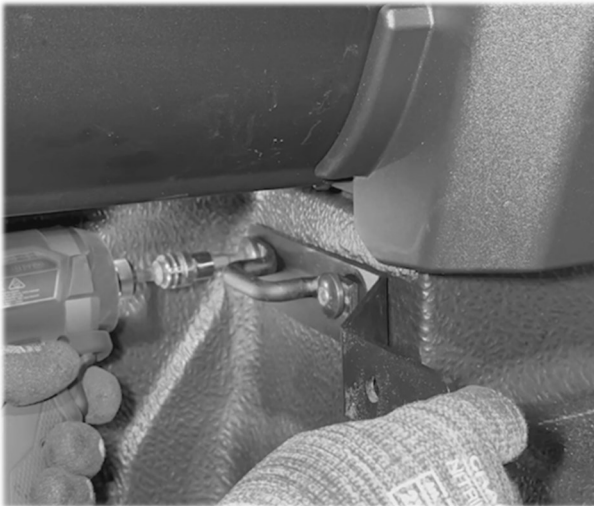


Reuse the bolts and install the front brackets [3]

3



Remove the rear hooks on both sides of the tub

4

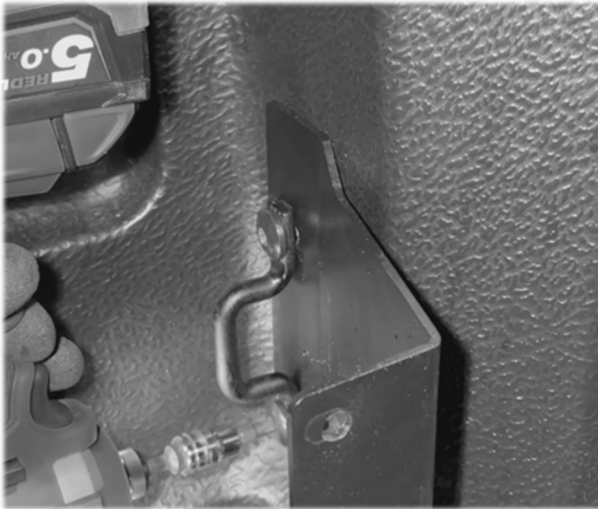

Reuse the bolts and
install the rear
brackets [2]


**Leave these brackets
loose**

5



Position the side boards
in place. Make sure to
have the rough side
facing out. The boards
will be labelled with left
(L) and right (R) cutouts

6

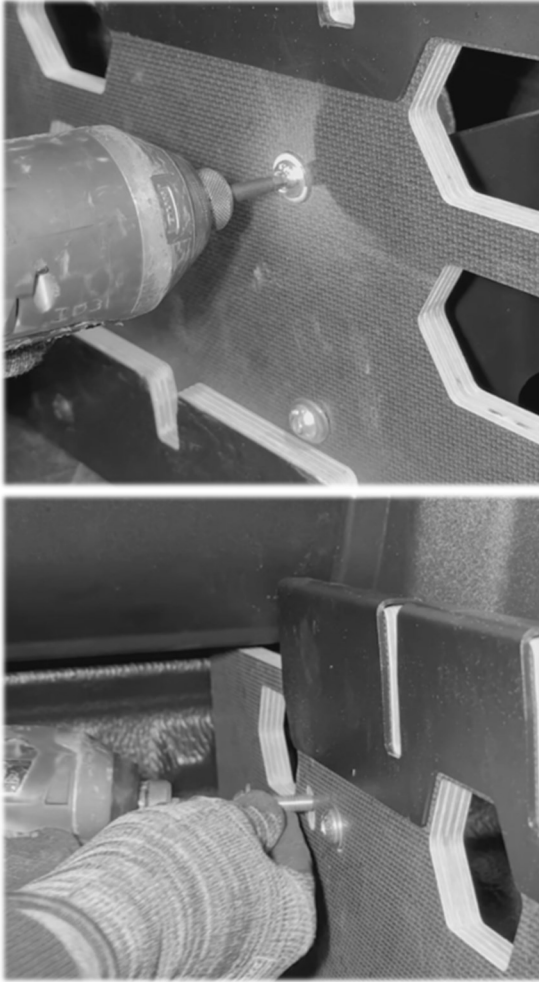

Loosely bolt the side boards to the brackets using the following fasteners:

[5] 8x M8x20 Btn Bolt

[6] 8x M8 Spring Washer


[7] 8x M8 Flat Washer

7



Place the central dividers at the front and rear positions to correctly space the sides

8

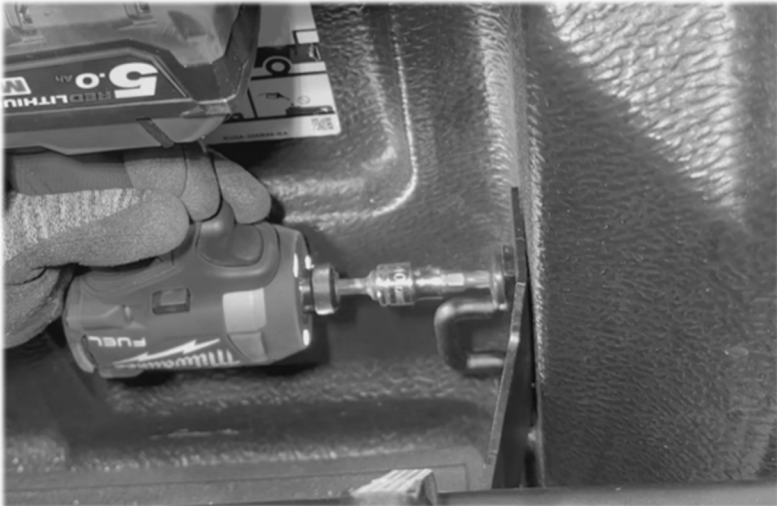

Now with the sides correctly distanced, tighten all the loose bolts

When completed, check the central dividers fit snugly in multiple positions

Your Tub divider is now fully fitted and ready to use.
Thanks again for choosing Utemaster and don't forget to keep checking our website for our latest innovations!