










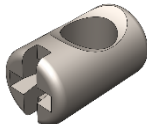



## Mazda BT-50

### Canopy Despatch List

|   |   |                        |  |
|---|---|------------------------|--|
| <b>PRT-001622L</b><br><b>PRT-001622R</b>    |    | <b>1x</b><br><b>1x</b> |  |
| <b>PRT-001666</b>                           |    | <b>2x</b>              |  |
| <b>PRT-001711L</b><br><b>PRT-001711R</b>    |   | <b>1x</b><br><b>1x</b> |  |
| <b>PRT-001945L</b><br><b>PRT-001945R</b>    |    | <b>1x</b><br><b>1x</b> |  |
| <b>M6 x 20mm</b><br><b>button head bolt</b> |  | <b>2x</b>              |  |
| <b>M6 x 40mm</b><br><b>button head bolt</b> |  | <b>2x</b>              |  |
| <b>M6 washer</b>                            |  | <b>8x</b>              |  |
| <b>M6 spring washer</b>                     |  | <b>8x</b>              |  |
| <b>M8 x 25mm</b><br><b>button head bolt</b> |  | <b>8x</b>              |  |
| <b>M8 washer</b>                            |  | <b>12x</b>             |  |
| <b>M8 spring washer</b>                     |  | <b>8x</b>              |  |
| <b>M6 barrel nut</b>                        |  | <b>2x</b>              |  |
| <b>M8 nyloc nut</b>                         |  | <b>4x</b>              |  |

## Mazda BT-50

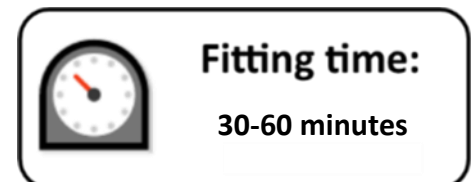
### Canopy Fitting Instructions

Thank you for purchasing a quality Utemaster™ product, our aim is providing you with as much assistance as possible throughout the fitting process. Please contact us if assistance is needed.

**We recommend watching the installation video before attempting to install**

Enter this address into your web browser to view the fitting video:

**<https://wi.st/2skGMgH>**



**Step 1)** Remove the hooks from the rear of the wellside



**Step 2) Lift the canopy onto the vehicle****Step 3) Remove the two bolts on each side at the rear of the canopy****Step 4) Lift the rear mounting brackets into position**



**Step 5)** Re-install the bolts through the bracket into the canopy



**Step 6)** Re-install the hooks with bolts going through the brackets



**Step 7)** Lift the front mounting brackets into position



**Step 8)** Loosely insert an M6 bolt into the front wellside thread (leaving it loose makes it easier to line up the bolts in the next step)



**Step 9)** Install M8 bolts into the two side wellside threads. Fully tighten all three bolts in the bracket



**Step 10)** Insert bolts connecting the canopy to the front bracket and fully tighten





**Step 11)** Hook the centre clamp through the slot in the side



**Step 12)** Sit the barrel nut under the clamp, lined up with the hole (as indicated below)



**Step 13)** Bolt through the top face into the barrel nut, pulling the clamp tight



**Step 14)** Remove the indicated bracket from the tailgate



**Step 15)** Peel the red backing tape off the provided brackets



**Step 16)** Replace the tailgate bracket, sit the provided bracket on top, and bolt through both



Your canopy is now fully fitted and ready to use.

Thank you again for using Utemaster™ and don't forget to keep checking our website for our latest innovations!