










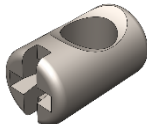



Mazda BT-50

Canopy Despatch List

PRT-001622L PRT-001622R		1x 1x	
PRT-001666		2x	
PRT-001711L PRT-001711R		1x 1x	
PRT-001945L PRT-001945R		1x 1x	
M6 x 20mm button head bolt		2x	
M6 x 40mm button head bolt		2x	
M6 washer		8x	
M6 spring washer		8x	
M8 x 25mm button head bolt		8x	
M8 washer		12x	
M8 spring washer		8x	
M6 barrel nut		2x	
M8 nyloc nut		4x	

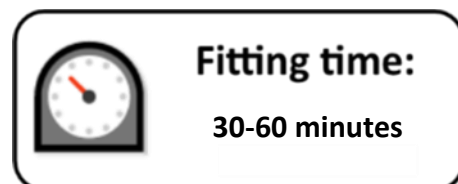
Mazda BT-50 2011-2020 Canopy Fitting Instructions

Thank you for purchasing a quality Utemaster™ product, our aim is providing you with as much assistance as possible throughout the fitting process. Please contact us if assistance is needed.

We recommend watching the installation video before attempting to install

Enter this address into your web browser to view the fitting video:

<http://bit.ly/3TPCCq1>



Step 1) Remove the hooks from the rear of the wellside



Step 2) Lift the canopy onto the vehicle**Step 3) Remove the two bolts on each side at the rear of the canopy****Step 4) Lift the rear mounting brackets into position**

Step 5) Re-install the bolts through the bracket into the canopy



Step 6) Re-install the hooks with bolts going through the brackets



Step 7) Lift the front mounting brackets into position



Step 8) Loosely insert an M6 bolt into the front wellside thread (leaving it loose makes it easier to line up the bolts in the next step)



Step 9) Install M8 bolts into the two side wellside threads. Fully tighten all three bolts in the bracket



Step 10) Insert bolts connecting the canopy to the front bracket and fully tighten



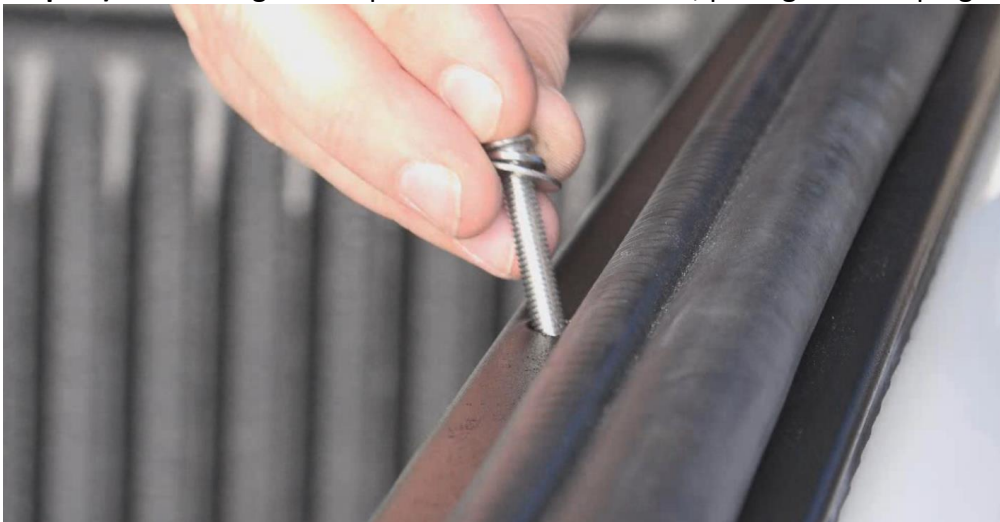
Step 11) Hook the centre clamp through the slot in the side



Step 12) Sit the barrel nut under the clamp, lined up with the hole (as indicated below)



Step 13) Bolt through the top face into the barrel nut, pulling the clamp tight



Step 14) Remove the indicated bracket from the tailgate



Step 15) Peel the red backing tape off the provided brackets



Step 16) Replace the tailgate bracket, sit the provided bracket on top, and bolt through both



Your canopy is now fully fitted and ready to use.
Thank you again for using Utemaster™ and don't forget to keep checking our website for our latest innovations!