

# Ford Ranger WildTrak 2022+

## GearForce Ladder Rack



Installation  
video

[bit.ly/3YAFARd](https://bit.ly/3YAFARd)



### Despatch List:

ID#	DESCRIPTION	IMAGE	QTY
[1]	Packer Plate (PRT-006990-08)		<b>2X</b>
[2]	M6 x 25mm Btn Bolt		<b>4X</b>
[3]	M6 Spring Washer		<b>4X</b>
[4]	M6 Flat Washer		<b>4X</b>
[5]	Thread Plate (PRT-007047)		<b>4X</b>
[7]	M8 x 20mm Btn Bolt (Black)		<b>8X</b>
[8]	M8 Nyloc Nut		<b>8X</b>

Ensure you have a GearForce Fit Kit installed when using GearForce Products.  
**If you have a GearForce Platform, skip to step 3**

1



Slide 2 of the provided thread plates [5] in from the front of each track

Slide these plates using an Allen key to the approximate position you want your Ladder Rack to sit


2



Place down a provided packer plate [1] over each pair of thread plates. Make sure to line the thread plates up with the slots in the packer.

Ensure the longer side of the plate faces in towards the tub as shown

3

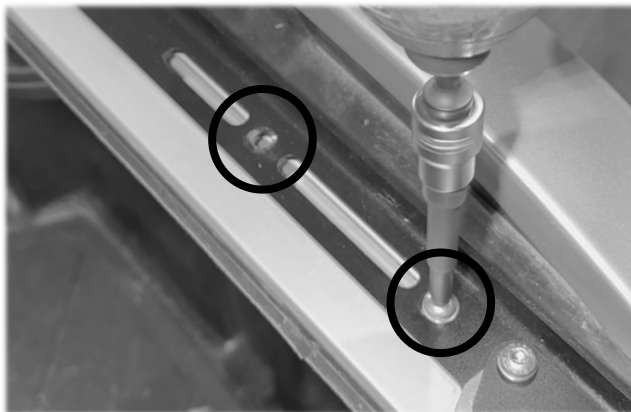


If you have a GearForce Tub Platform installed, remove the 2 indicated bolts on each side of the base bracket

4



Position the assembled Ladder Rack in place. If you have a Tub Platform, angle it in as shown. If not, position the Ladder Rack over the packer plates from step 2

5

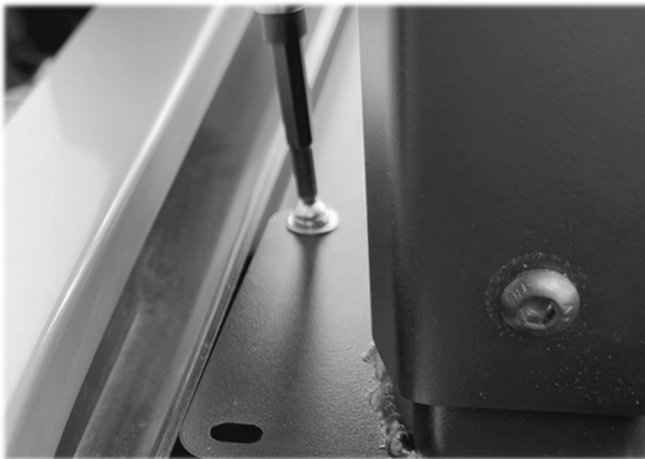

Bolt the Ladder Rack down in through the thread plates using the following fasteners:

- 2) 4x M6x25mm Bolt**
- 3) 4x M6 Spring Washer**
- 4) 4x M6 Flat Washer**

Check that your WildTrak roller shutter lid still opens and closes completely. If the lid has trouble closing, loosen the 4 bolts fixing the ladder rack in place and retighten with the lid closed. If problems persist, contact Utemaster for assistance

Your GearForce Ladder Rack is now fully fitted and ready to use.  
Thanks again for choosing Utemaster and don't forget to keep checking our website for our latest innovations!