


# LOADSTOP-GWMA32-DSR

## GWM Cannon 2021+ With Destroyer Side Rails




<https://bit.ly/3fvXlsK>

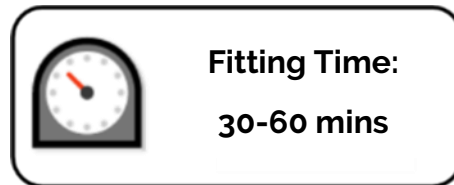

### Despatch List:

ID#	DESCRIPTION	IMAGE	QTY
1	Base Rail PRT-005312		1x
2	Top Rail PRT-005355		1x
3	PRT-005315L PRT-005315R		1x 1x
4	M8 x 16mm Btn Bolt (Black)		17x
5	M8 Nyloc Nut		4x
6	M8 Spring Washer		13x

1

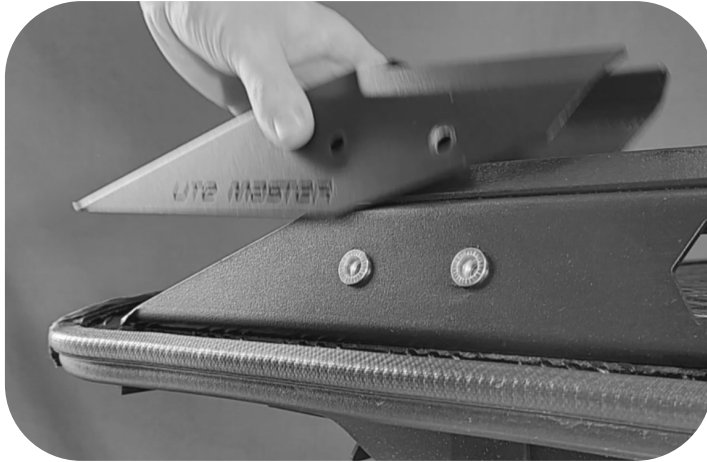

Remove the front feet from the Destroyer Side Rails.

These are not required and can be set aside.


*Repeat for both sides.*

2



Cut out the circles indicated on the provided template.

Sit the paper Template on the front of the Load-Lid.

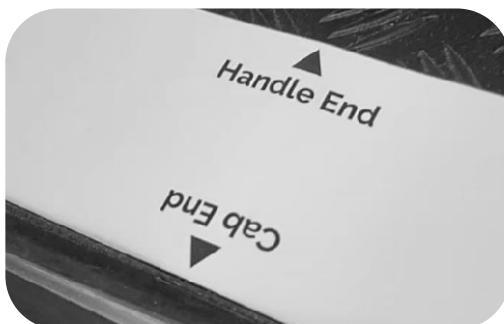

Ensure the template is oriented the correct way around. "Handle End" should be pointing towards the Load-Lid handle.



Ensure the arrows at each end are aligned with the hinge bolts. The template should sit centred on the Load-Lid, touching the bolts at each end.

3



Mark all holes through the template onto the Load-Lid.

Remove the template from the Load-Lid.

4





Drill through all marks with a 8.5mm drill bit.

5



Run a bead of sealer around each hole.

6

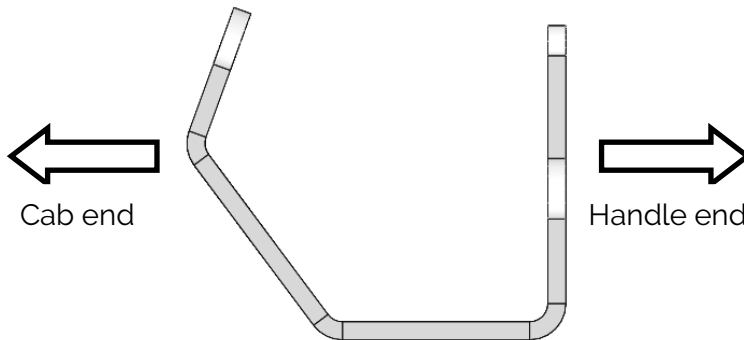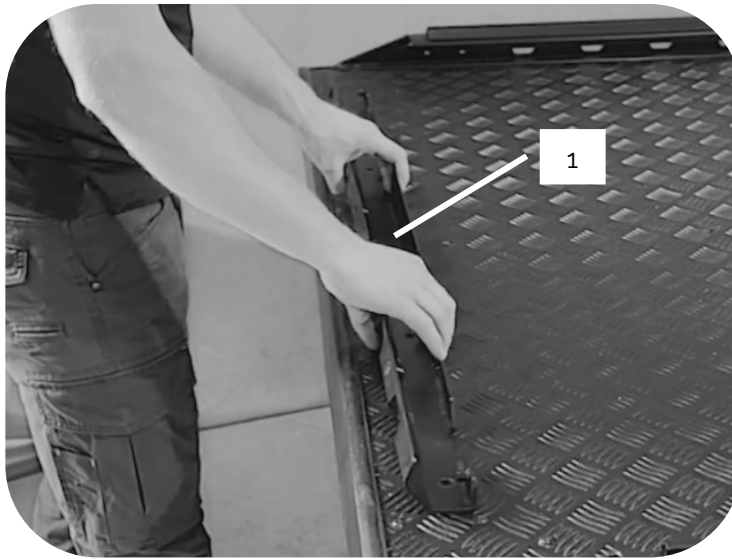

Sit the base rail (1) onto the front of the Load-Lid.

Ensure the base rail sits with the angled sides facing forwards towards the cab, and the flat side facing back towards the handle.

7




Bolt the base rail to the Load-Lid through each drilled hole using the following fasteners:

- 4) M8 x 16mm Btn Bolts (Black)
- 5) M8 Nyloc Nuts

Have the head of the bolt underneath the Load-Lid and the nut inside the base rail.

8

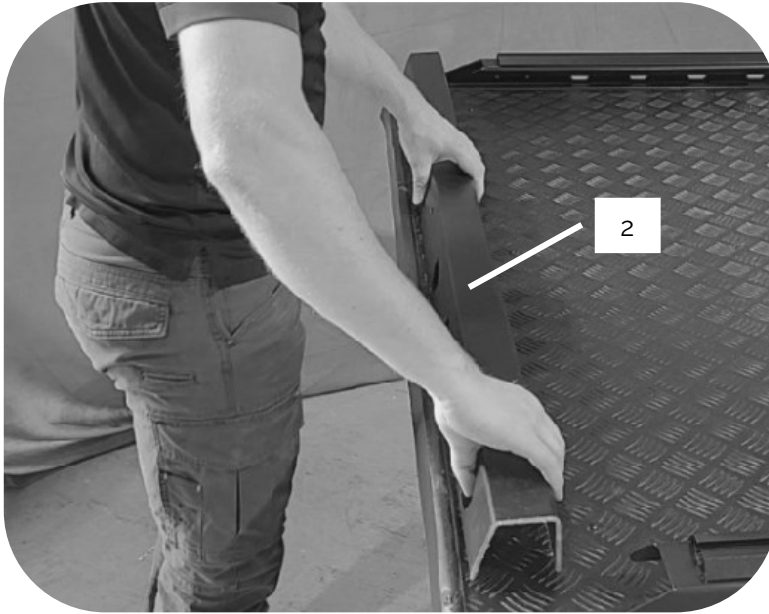

Lift the top rail (2)  
onto the base rail.

9



Bolt the top rail  
to the base rail using  
the following fasteners:

- 4) M8 x 16mm Btn Bolts  
(Black)
- 6) M8 Spring Washers

10



Sit the front feet (3)  
over the Load-Stop  
and Destroyer  
Side Rail.

*NOTE: These are not  
the same feet  
removed in Step 1.*

11



Bolt the front feet to the Side Rails using the following fasteners:

- 4) M8 x 16mm Btn Bolts (Black)
- 6) M8 Spring Washers

12



Bolt the front feet to the Load Stop using the following fasteners:

- 4) M8 x 16mm Btn Bolts (Black)
- 6) M8 Spring Washers