







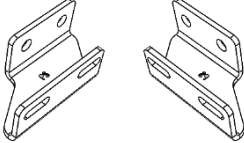



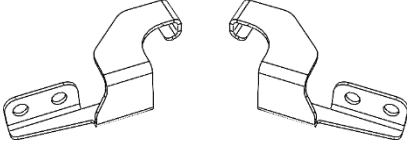


LDV T60

Centurion Canopy Despatch List

PRT-005119L PRT-005119R		1x 1x
PRT-001666		2x
PRT-005120L PRT-005120R		1x 1x
PRT-005122L PRT-005122R		1x 1x
M6 x 40mm button head bolt		2x
M6 washer		2x
M6 spring washer		2x
M8 x 25mm button head bolt		10x
M8 washer		12x
M8 spring washer		6x
M6 barrel nut		2x
M8 nyloc nut		4x
Wire taps - red		2x

LDV T60

Centurion Canopy Fitting Instructions

Thank you for purchasing a quality Utemaster™ product, our aim is providing you with as much assistance as possible throughout the fitting process. Please contact us if assistance is needed.

We recommend watching the installation video before attempting to install

Enter this address into your web browser to view the fitting video:

<https://bit.ly/3FP8YrU>



Step 1) Remove the bolts from the front corners of the wellside.



Step 2) Install rubber strip along the inside edge of the wellside, flush with the top edge and against the front wall.



Step 3) Install the front mounting brackets. Passenger side is marked with 'PS' and driver's side is marked with 'DS'.



Step 4) Remove the bolts from the rear corner of the wellside.



Step 5) Install the rear mounting brackets. Passenger side is marked with 'PS' and driver's side is marked with 'DS'.



Step 6) Remove the bolts in the rear corners of the canopy.



Step 7) Lift the canopy onto the vehicle.



Step 8) Ensure the canopy sits on the outside of the rear mounting brackets.



Step 9) Bolt through the rear mounting bracket into the threads in the canopy.



Step 10) Bolt the canopy to the front mounting brackets.




Step 11) Hook the centre clamp through the slot in the side.



Step 12) Sit the barrel nut under the clamp, lined up with the hole (as indicated below).



Step 13) Bolt through the top face into the barrel nut, pulling the clamp tight.

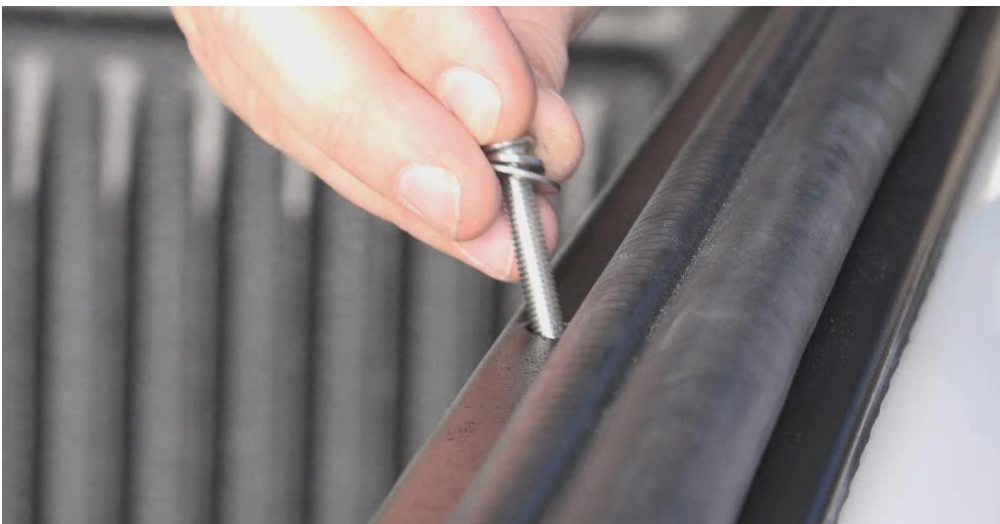

Step 14) Remove the two bolts on each side of the tailgate to remove the rubber stopper.



Step 15) Assemble the bracket with the provided tailgate brackets, with a washer in between so the tailgate bracket sits flat. Use a bolt to hold them together before installing to the tailgate.



Step 16) Install to the tailgate.




Step 17) Remove the rear passenger side tail light.




Step 18) Feed the brake light wire from the canopy through into the tail light cavity.




Step 19) Splice the end of the wire to reveal the individual red and black wires.

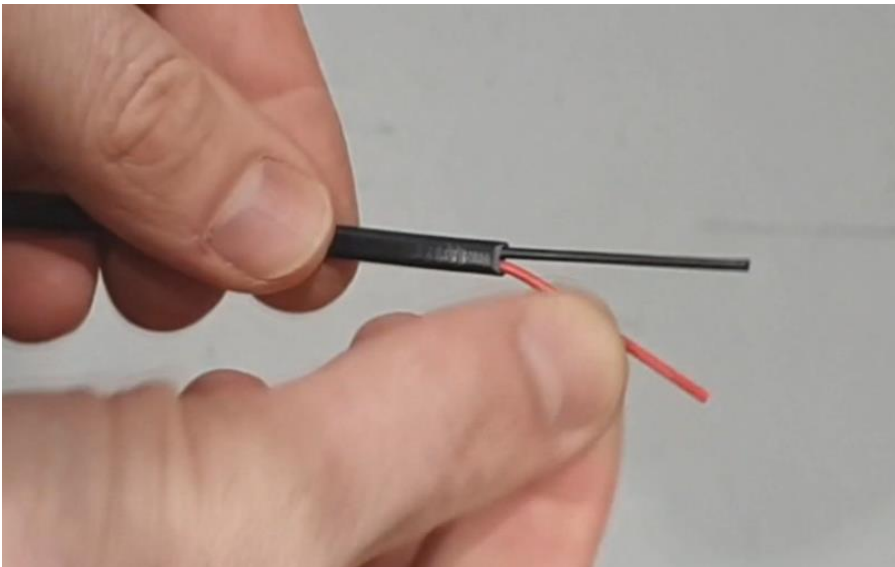

Step 20) Attach one of the provided clips onto the black wire running to the bottom light.

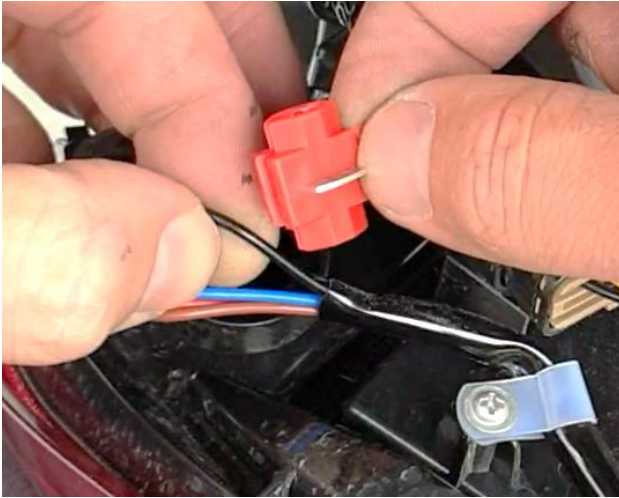

Step 21) Feed the black wire from the canopy into the clip alongside the black light wire.

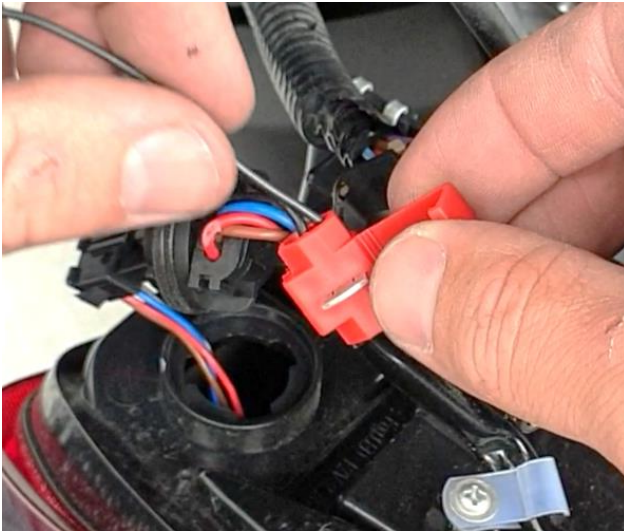

Step 22) Squeeze the clip until the metal paddle is flush with the plastic.



Step 23) Close the clip.



Step 24) Repeat Steps 20-23 to attach the red canopy wire to the red tail light wire.

Step 25) Re-install the tail light.



Your canopy is now fully fitted and ready to use.
Thank you again for using Utemaster™ and don't forget to keep checking our website for our latest innovations!