
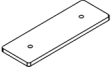



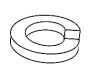






# CANTILEVER RACK TO SUIT CENTURION CANOPY



## Despatch List:

ID#	DESCRIPTION	IMAGE	QTY
1	PRT-005253		2
2	PRT-005254		2
3	PRT-003136		2
4	PRT-005026 (foam)		6

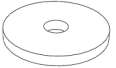ID#	DESCRIPTION	IMAGE	QTY
5	M8 Fender Washer		8
6	M8 Spring Washer		4
7	M8 x 30mm Btn Bolt		6
8	M8 Nyloc Nut (Stainless) NUTM8NA2		2
9	M8 Medium Washer Used on Ford Ranger only		2

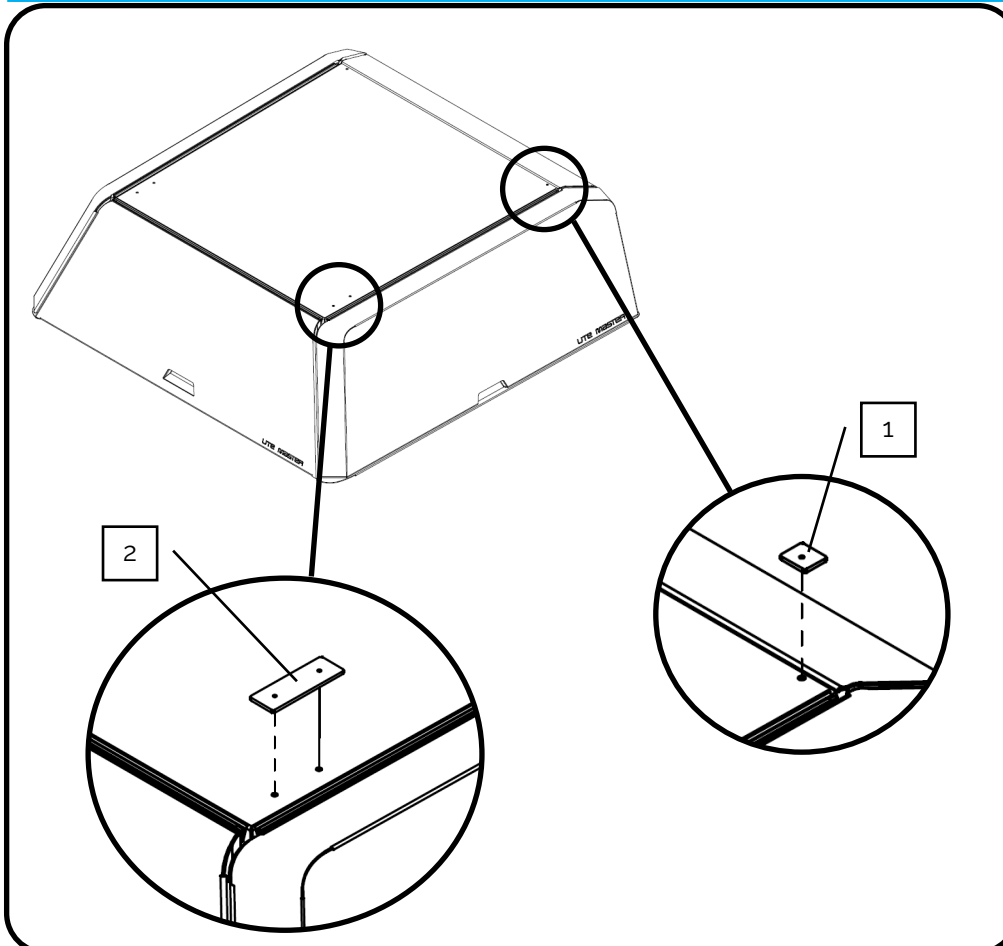**1**


*NOTE: the canopy may have blanking bolts in these holes. Remove these bolts before proceeding with the installation.*

Place the sponge washers over the holes in the canopy roof. Ensure the holes in the sponge washers align with the holes in the canopy roof.


- 1) PRT-005253 (2x)
- 2) PRT-005254 (2x)

Repeat for both sides.

2




2 person lift required

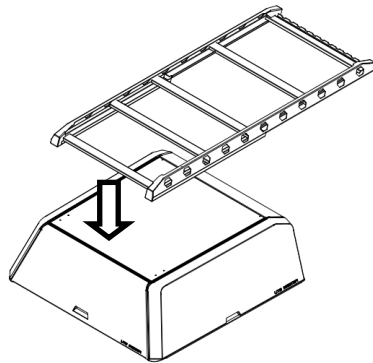

Fit cantilever onto the canopy roof.

Align rear bolt holes to the foam washers.

3

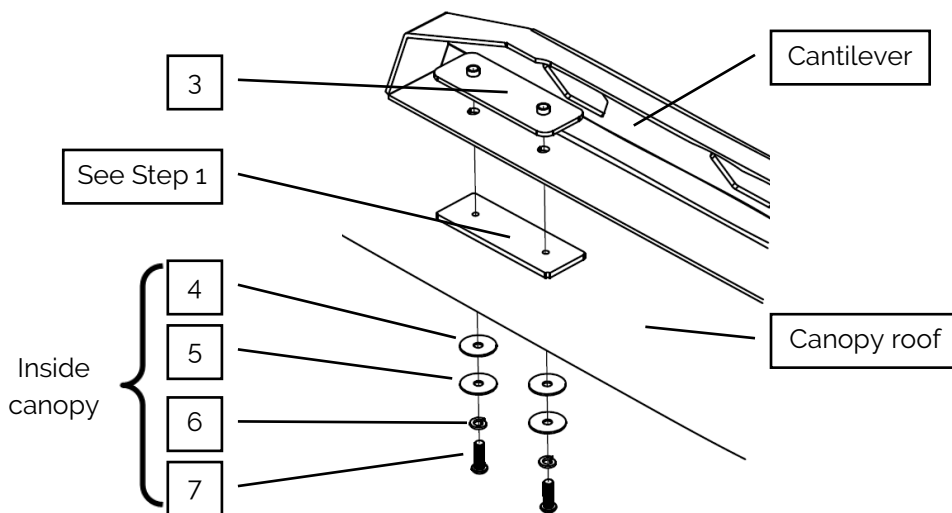

Bolt both rear corners using the following fasteners:

3) PRT-003136

4) PRT-005026 (foam)


5) M8 Fender Washer

6) M8 Spring Washer

7) M8 x 30mm Btn Bolt

Leave loose at this stage.

4

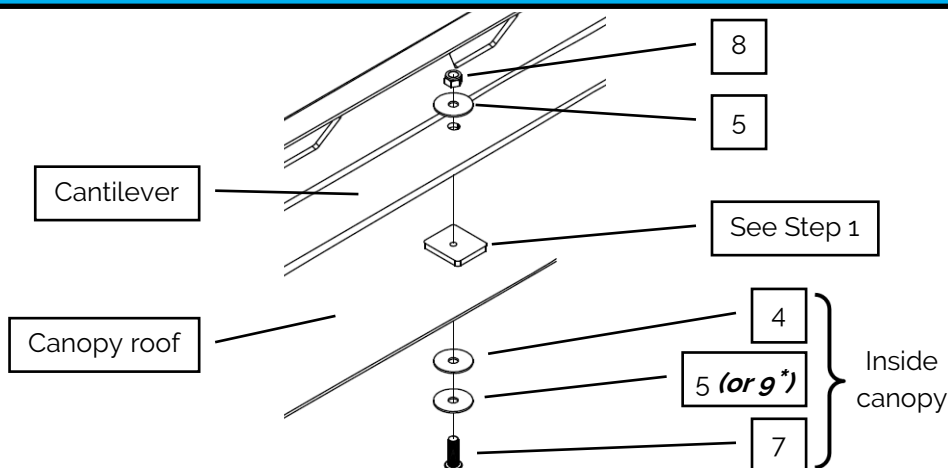

Bolt both front corners using the following fasteners:

4) PRT-005026 (foam)

5) M8 Fender Washer

*\*Ford Ranger uses (9)*

7) M8 x 30mm Btn Bolt

8) M8 Nyloc Nut

Leave loose at this stage.

5

Once all bolts are loosely in place, ensure the cantilever rack is sitting centred and straight.

Tighten all fasteners.

Check that foam between Cantilever Rack and Canopy roof is compressed to complete watertight seal.