










CANTILEVER RACK TO SUIT CENTURION CANOPY




Despatch List:

ID#	DESCRIPTION	IMAGE	QTY
1	PRT-005253		2
2	PRT-005254		2
3	PRT-003136		2
4	PRT-005026 (foam)		6

ID#	DESCRIPTION	IMAGE	QTY
5	M8 Fender Washer		8
6	M8 Spring Washer		4
7	M8 x 30mm Btn Bolt		6
8	M8 Nyloc Nut (Molybond) NUTM8NA2MB		2
9	M8 Medium Washer Used on Ford Ranger only		2

1

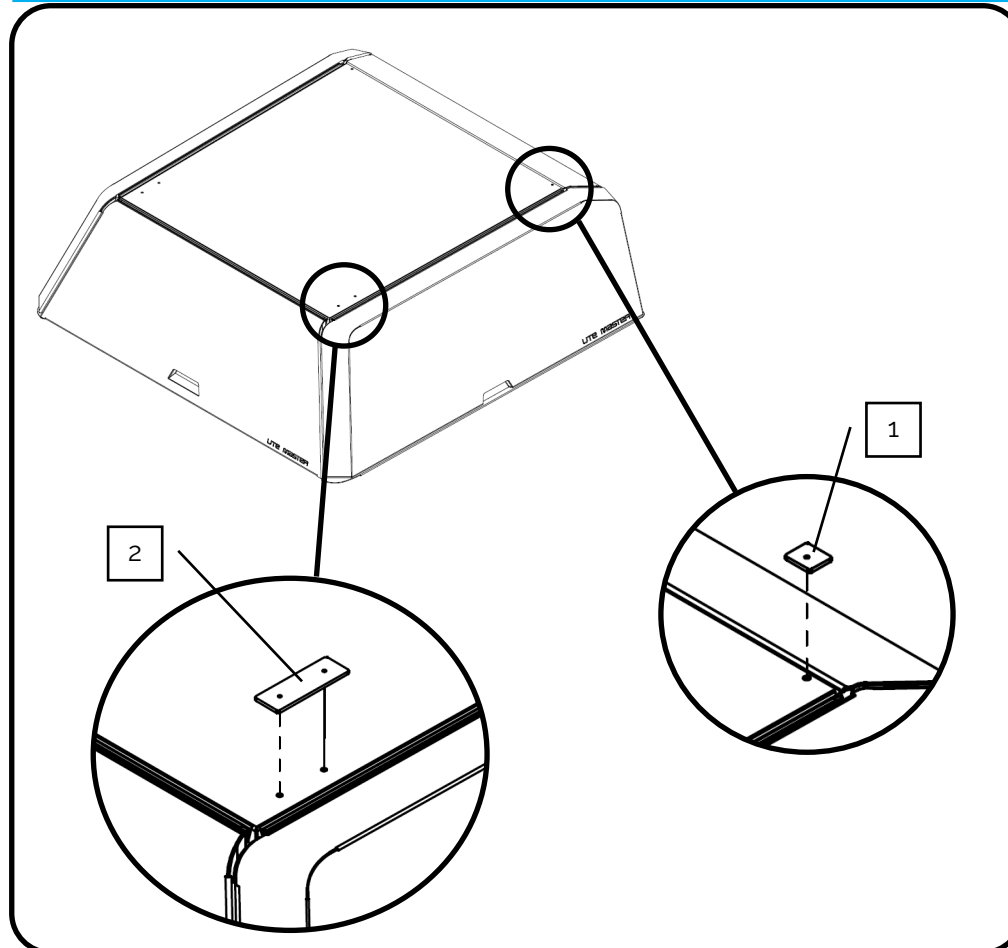

NOTE:
Remove the blanking bolts in the canopy before proceeding with the installation. These can be discarded.

Place the sponge washers over the holes in the canopy roof. Ensure the holes in the sponge washers align with the holes in the canopy roof.


- 1) PRT-005253 (2x)
- 2) PRT-005254 (2x)

Repeat for both sides.

2




2 person lift
required

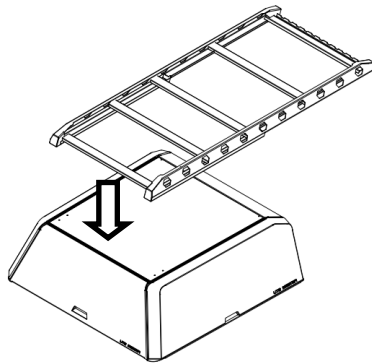

Fit cantilever onto
the canopy roof.

Align rear bolt holes
to the foam washers.

3

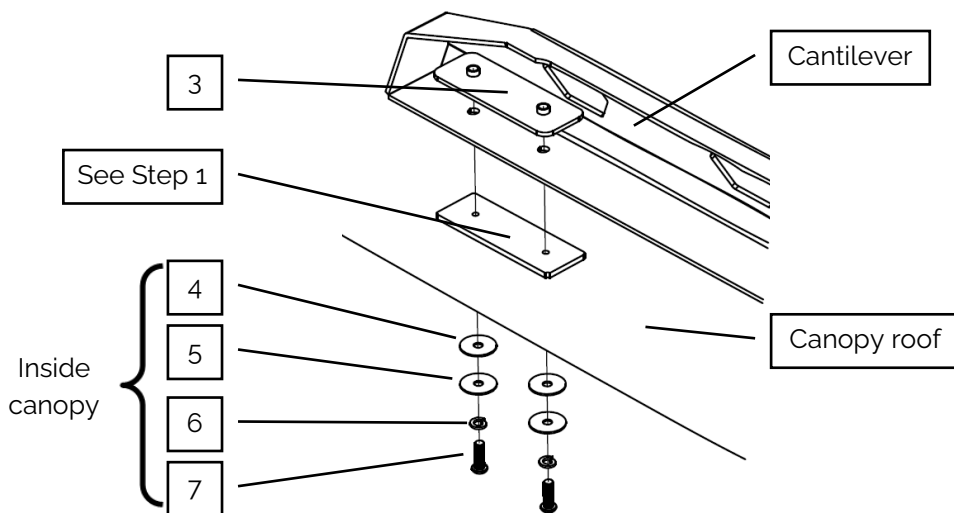


Bolt both rear corners
using the following
fasteners:

- 3) PRT-003136
- 4) PRT-005026 (foam)
- 5) M8 Fender Washer
- 6) M8 Spring Washer
- 7) M8 x 30mm Btn Bolt

Leave loose at this
stage.

4

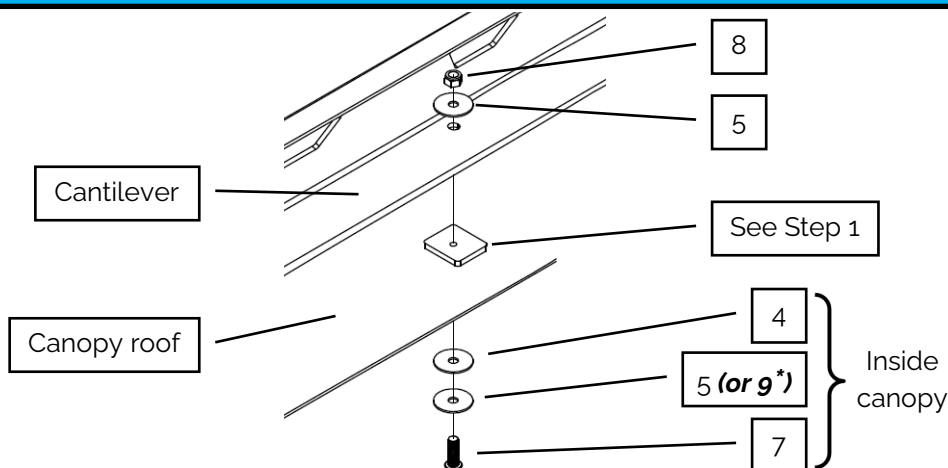

Bolt both front corners
using the following
fasteners:

- 4) PRT-005026 (foam)
- 5) M8 Fender Washer
- *Ford Ranger uses (9)
- 7) M8 x 30mm Btn Bolt
- 8) M8 Nyloc Nut

Leave loose at this
stage.

5

Once all bolts are loosely in place, ensure the cantilever rack is sitting centred and straight.
Tighten all fasteners.

Check that foam between Cantilever Rack and Canopy roof is compressed to complete watertight seal.