
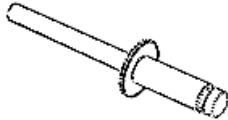
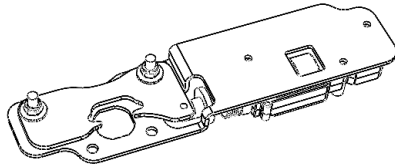
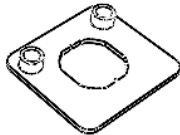






DESPATCH LIST

Vehicle Components (required for all installations):

ID#	DESCRIPTION	IMAGE	QTY
1	80606-26 / WHUTELL-08EXT 1.0 (Ford Ranger Vehicle Loom)		1x
2	RVSRSA18-6-BLACK (Black Aluminium Rivet)		4x

Load-Lid Components (only required if the Load-Lid does not have central locking pre-installed):

ID#	DESCRIPTION	IMAGE	QTY
3	Load-Lid Actuator Assembly (1x PRT-003713, 1x PRT-003714, 1x 003611)		1x
4	PRT-002878		1x
5	PRT-002879		1x
6	M6 x 12mm Button Head Bolt		2x
7	M6 Spring Washer		2x
8	80606-25 / WHUTELL-LIDTAIL 1.0 (Load-Lid Loom)		1x

Volkswagen Amarok 2023+ Load-Lid Central Locking Fitting Instructions

LL-CLKVWB3



Installation
video



Fitting Time:

30 - 60 mins

<https://bit.ly/3viuX86>

1

Scan here to watch this step:



Remove all plastic clips from the rear passenger side wheel arch lining.

2

Scan here to watch this step:



Drill out the four rivets which hold the wheel arch lining in place.

3

Scan here to watch this step:



Remove the plastic wheel arch lining.

4


Scan here to watch this step:



Clear any remaining rivet shafts from the holes.

5


Scan here to watch this step:

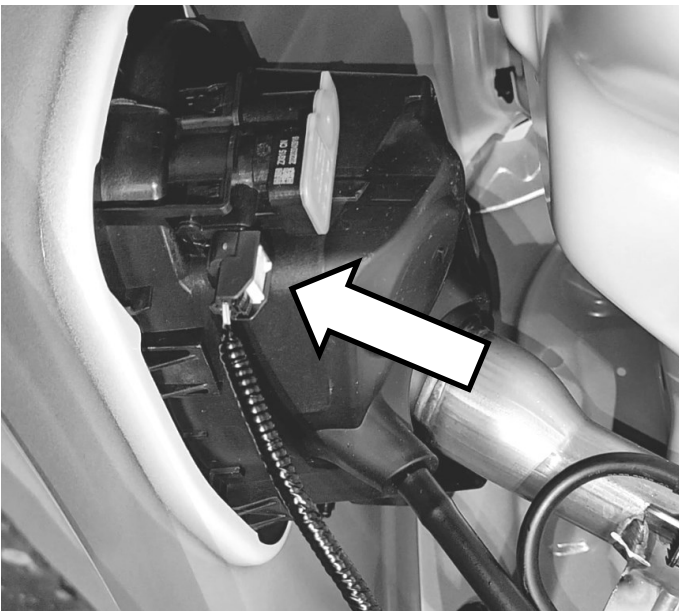

Locate and remove the fuel filler cap central locking plug.

6


Scan here to watch this step:

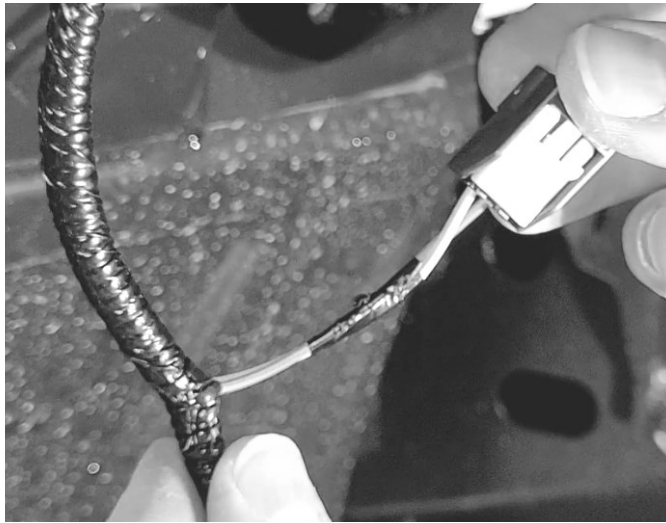

Peel back a section of conduit to reveal the two wires inside.

7


Scan here to watch this step:

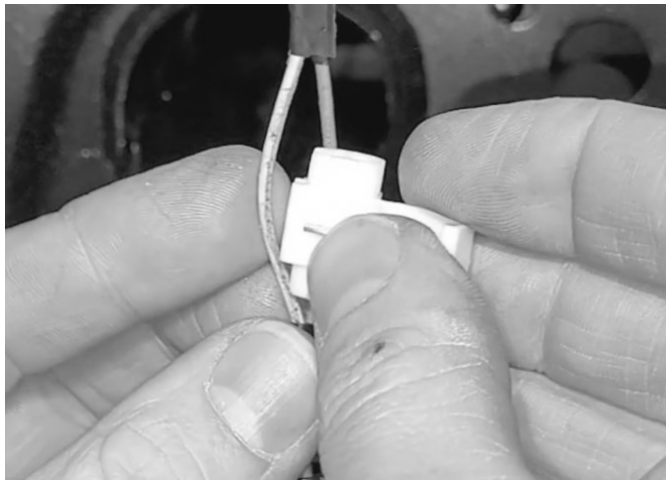

Place one of the provided white clips over the white wire.

8

Scan here to watch this step:

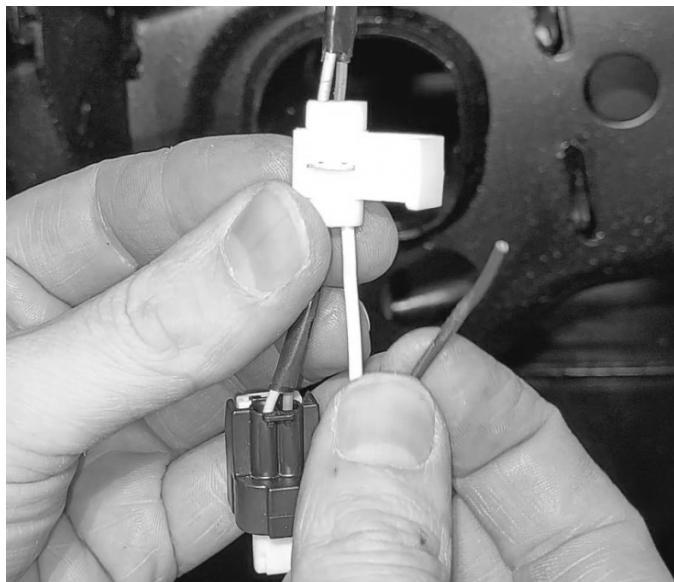


Feed the white wire from the end of the provided wiring loom 80606-26 into the white clip, alongside the white wire.

White > Blue/Green

9

Scan here to watch this step:

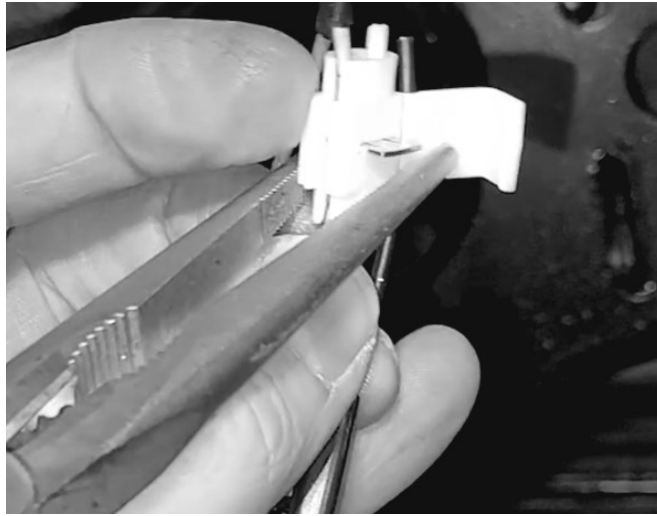


Squeeze the white clip with pliers until the metal clip sits flush with the plastic.

It should tightly clamp both wires.

10


Scan here to watch this step:

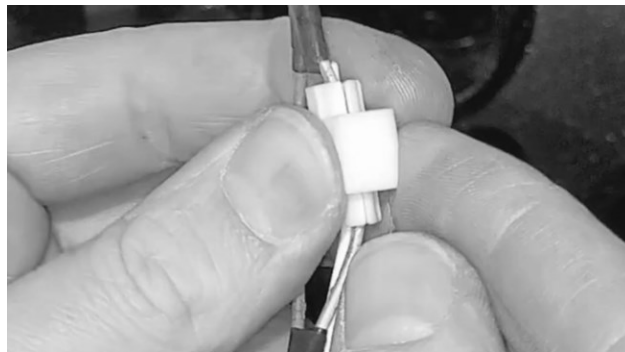

Close the clip.

11

Scan here to watch this step:

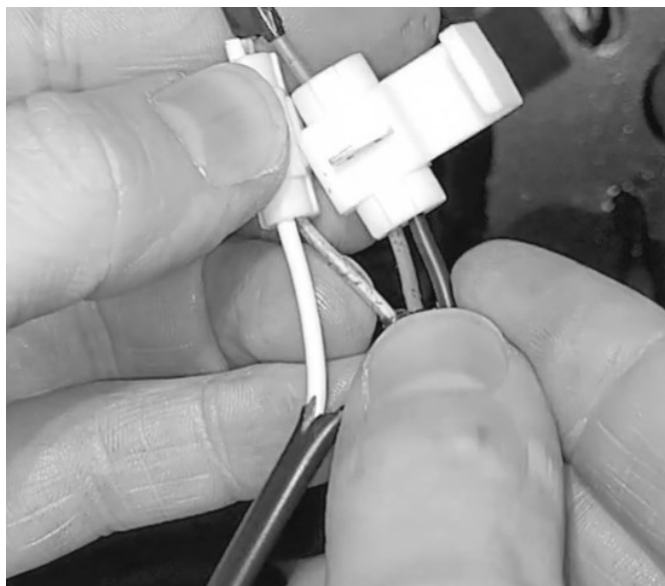

Repeat Steps 7-10 to connect the black wire to the blue wire.

Black > Grey/Brown

12

Scan here to watch this step:



Wrap the entire section with insulation tape.

13


Scan here to watch this step:



Reconnect the fuel cap plug.

14

Scan here to watch this step:

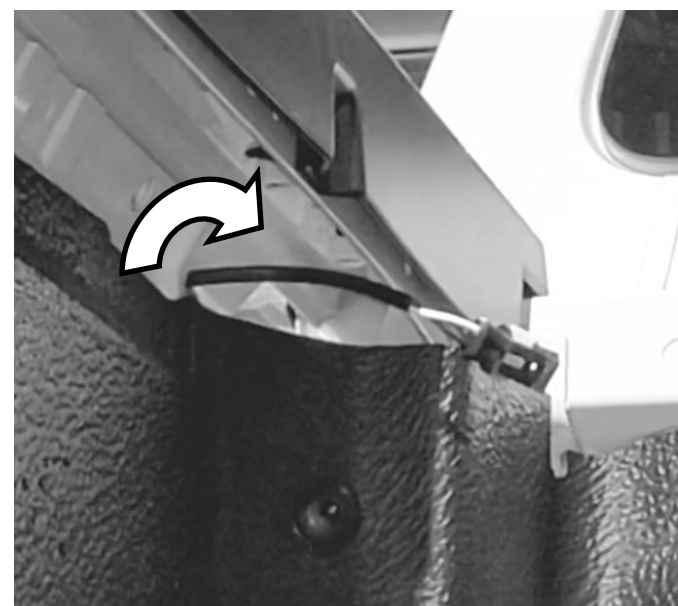

Locate the access point into the tray above the fuel cap, and feed the loose end of the wiring loom up into the tray area.

15

Scan here to watch this step:



Re-install the plastic wheel arch liner, ensure all clips are returned to their original holes.

16

Scan here to watch this step:




Rivet the plastic wheel arch liner in position through the original rivet holes, using the provided rivets.

17

Install the Utemaster accessory now if required.
(Fitting instructions provided with the accessory).

18

Scan here to watch this step:

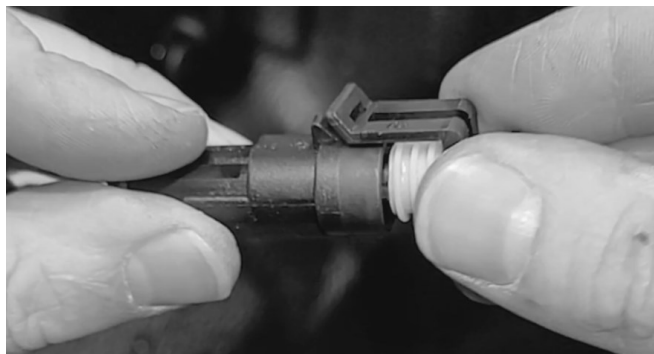

Connect the vehicle wiring loom to the Utemaster accessory inside the tray.

Your central locking is now fully fitted and ready to use.
Thanks again for choosing Utemaster and don't forget to keep checking our website for our latest innovations!