


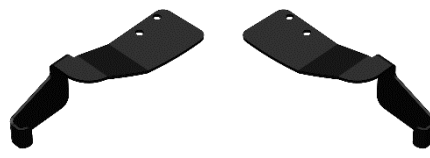












## Ford Ranger 2011-2022

### Centurion Canopy Despatch List

<b>PRT-001662L</b> <b>PRT-001662R</b>		<b>1x</b> <b>1x</b>	
<b>PRT-001666</b>		<b>2x</b>	
<b>PRT-001711L</b> <b>PRT-001711R</b>		<b>1x</b> <b>1x</b>	
<b>PRT-001699L</b> <b>PRT-001699R</b>		<b>1x</b> <b>1x</b>	
<b>M6 x 20mm</b> <b>button head bolt</b>		<b>2x</b>	
<b>M6 x 40mm</b> <b>button head bolt</b>		<b>2x</b>	
<b>M6 washer</b>		<b>8x</b>	
<b>M6 spring washer</b>		<b>8x</b>	
<b>M8 x 25mm</b> <b>button head bolt</b>		<b>8x</b>	
<b>M8 washer</b>		<b>12x</b>	
<b>M8 spring washer</b>		<b>8x</b>	
<b>M6 barrel nut</b>		<b>2x</b>	
<b>M8 nyloc nut</b>		<b>4x</b>	
<b>Wire taps</b>		<b>2x</b>	

## Ford Ranger 2011-2022

### Centurion Canopy Fitting Instructions

Thank you for purchasing a quality Utemaster™ product, our aim is providing you with as much assistance as possible throughout the fitting process. Please contact us if assistance is needed.

**We recommend watching the installation video before attempting to install**

Enter this address into your web browser to view the fitting video:

**<https://bit.ly/2VOmdaP>**



**Fitting time:**

**30-60 minutes**



**Step 1)** Remove the hooks from the rear of the wellside



**Step 2) Lift the canopy onto the vehicle**



**Step 3) Remove the two bolts on each side at the rear of the canopy**



**Step 4) Lift the rear mounting brackets into position**





**Step 5)** Re-install the bolts through the bracket into the canopy



**Step 6)** Re-install the hooks with bolts going through the brackets



**Step 7)** Lift the front mounting brackets into position



**Step 8)** Loosely insert an M6 bolt into the front wellside thread (leaving it loose makes it easier to line up the bolts in the next step)



**Step 9)** Install M8 bolts into the two side wellside threads. Fully tighten all three bolts in the bracket



**Step 10)** Insert bolts connecting the canopy to the front bracket and fully tighten





**Step 11)** Hook the centre clamp through the slot in the side



**Step 12)** Sit the barrel nut under the clamp, lined up with the hole (as indicated below)



**Step 13)** Bolt through the top face into the barrel nut, pulling the clamp tight




**Step 14)** Remove the indicated bracket from the tailgate



**Step 15)** Replace the tailgate bracket, sit the provided bracket on top, and bolt through both



**Step 16)** Remove the rear light on the passenger's side of the vehicle

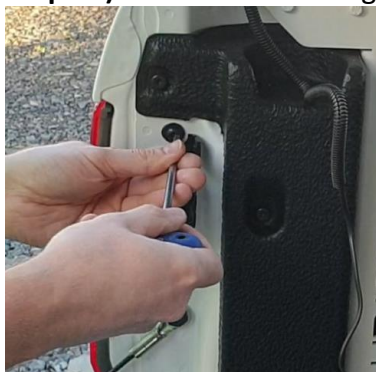

**Step 17)** Feed the wire from the canopy behind the mounting bracket and through the wellside into the rear light cavity




**Step 18)** Use the wire taps to connect the canopy wires onto the top light wires indicated below.

Black > Black

Red > Green



**Step 19)** Re-install the rear light

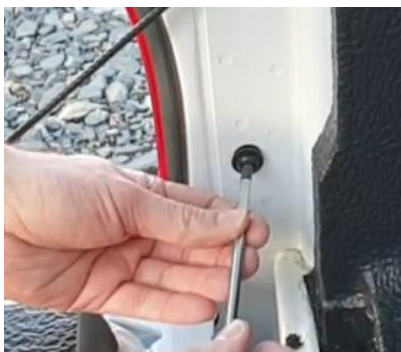

Your canopy is now fully fitted and ready to use.

Thank you again for using Utemaster™ and don't forget to keep checking our website for our latest innovations!