

Ford Ranger 2022+

Tub Divider



Installation
video

bit.ly/3OHm80C





Fitting Time:

15 mins

Despatch List:

ID#	DESCRIPTION	IMAGE	QTY
1	Tub Dividers (PRT-006956)		2X
2	Rear Brackets (PRT-006956-03L) (PRT-006956-03R)		1xL 1xR
3	Front Brackets (PRT-006956-04L) (PRT-006956-04R)		1xL 1xR
4	M8 x 40mm Btn Bolt		4X
5	M8 x 20mm Btn Bolt		8x
6	M8 Spring Washer		12X
7	M8 Flat Washer		12X

1

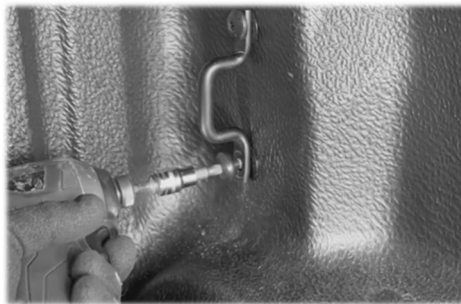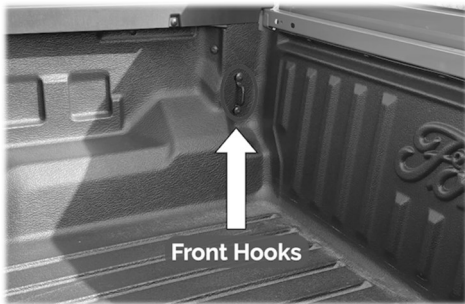

Remove the front hooks on both sides of the tub

2



Reuse the bolts and install the front brackets [3]

3


CANOPY AND LID ONLY



If you have a Utemaster Canopy or Load-Lid installed, use the following fasteners instead:

- [4] 4x M8x40 Btn Head
- [6] 4x M8 Spring Washer
- [7] 4x M8 Flat Washer

4

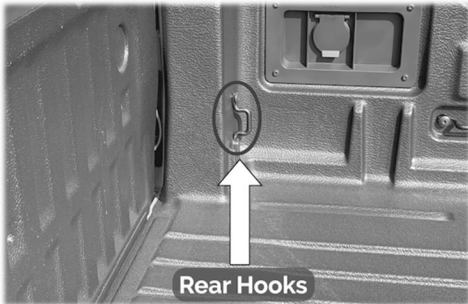

Remove the rear hooks on both sides of the tub

5



Reuse the bolts and install the rear brackets [2]


Leave these brackets loose

6



Position the side boards in place. Make sure to have the rough side facing out. The boards will be labelled with left (L) and right (R) cutouts


7

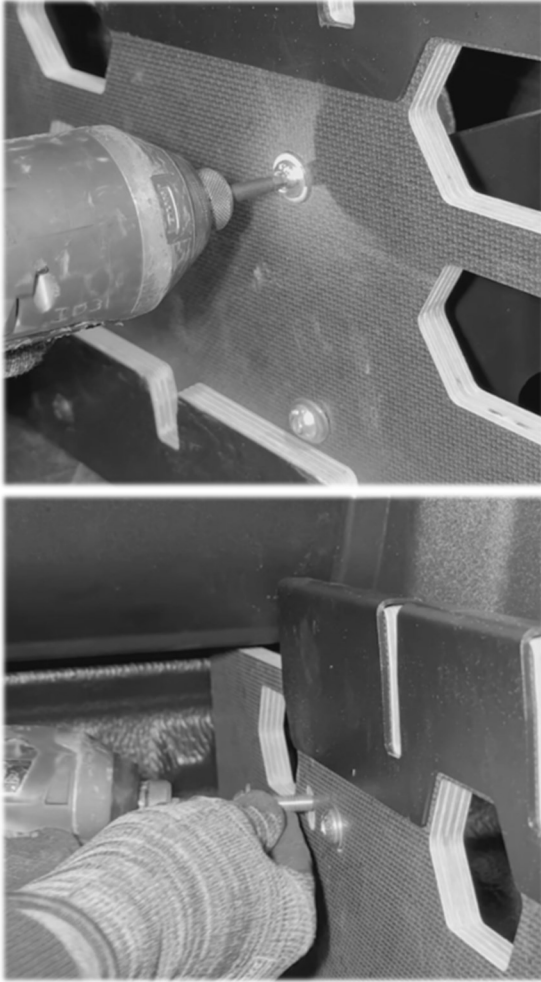

Loosely bolt the side boards to the brackets using the following fasteners:


- [5]** 8x M8x20 Btn Bolt
- [6]** 8x M8 Spring Washer
- [7]** 8x M8 Flat Washer

8

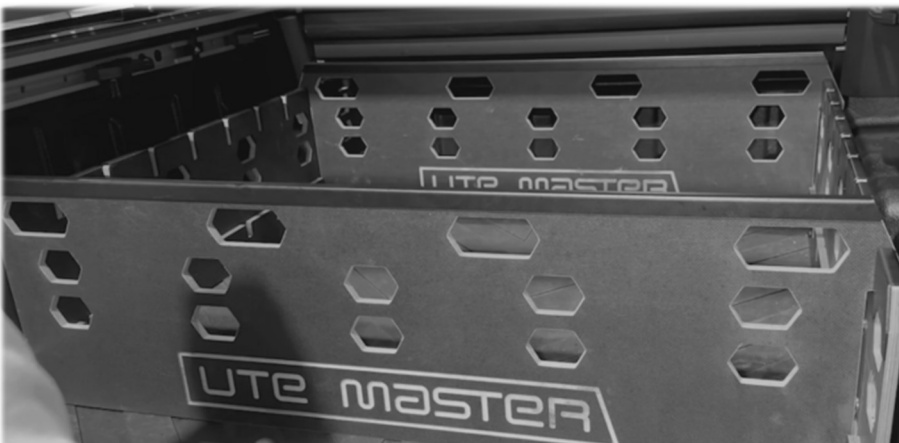

Place the central dividers at the front and rear positions to correctly space the sides

9

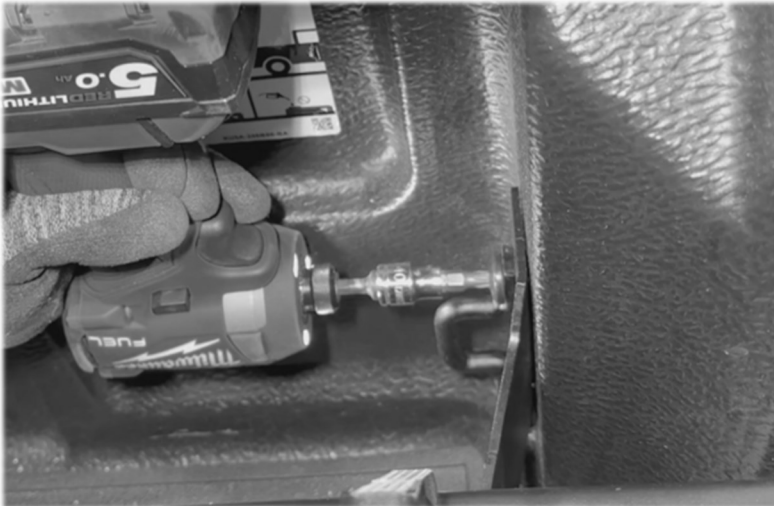

Now with the sides correctly distanced, tighten all the loose bolts

When completed, check the central dividers fit snugly in multiple positions

Your Tub divider is now fully fitted and ready to use.
Thanks again for choosing Utemaster and don't forget to keep checking our website for our latest innovations!