






GWM Cannon Canopy Despatch List

PRT-004396L PRT-004396R		1x 1x
M8 x 40mm button head bolt		8x
M8 washer		8x
M8 spring washer		8x
Wire taps		2x


GWM Cannon Canopy Fitting Instructions

Thank you for purchasing a quality Utemaster™ product, our aim is providing you with as much assistance as possible throughout the fitting process. Please contact us if assistance is needed.

We recommend watching the installation video before attempting to install

Enter this address into your web browser to view the fitting video:

<https://bit.ly/356PzTr>

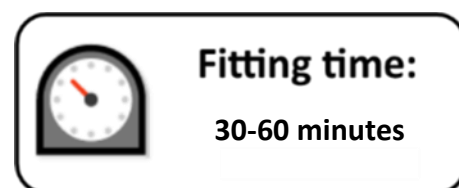

Step 1) Remove all bolts from along the side of the wellside



Step 2) Remove the sports bars



Step 4) Use sealer to seal the wellside gaps in the front corners



Step 3) Lift the canopy onto the vehicle



Step 4) Use the provided fasteners to bolt through the canopy into the threads along the wellside (two at the rear, one in the middle, one at the front)



Step 5) Repeat for opposite side

Step 6) Unbolt the tailgate latches on each side



Step 7) Bolt the tailgate latches in using the original bolts, in the position shown



Step 8) Remove the passenger side rear tail light



Step 9) Feed the brake light wires from the canopy through the wellside into the tail light cavity

Step 10) Identify the positive and ground wires for the brake light in the vehicle tail light

Step 11) Use the wire taps provided to crimp the canopy brake light wires onto the vehicle brake light wires. *Red = positive, Black = ground*

Step 12) Re-install the tail light to the vehicle

Your canopy is now fully fitted and ready to use.

Thank you again for using Utemaster™ and don't forget to keep checking our website for our latest innovations!