

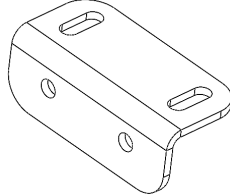
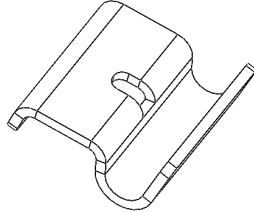






Mitsubishi Triton Canopy





Fitting Instructions

Despatched by:

Fitting Time:
30-60 mins

Despatch List:

ID#	DESCRIPTION	IMAGE	QTY
[1]	Front Mounting Bracket (PRT-005923)		x2
[2]	Bracket Thread Plate (PRT-006473)		x4
[3]	Tailgate locking Tab (PRT-001724L) (PRT-001724R)		X1 X1
[4]	M6 Washer		x4
[5]	M6 Spring Washer		x4
[6]	M6x60mm Btn Head Bolt		x4
[7]	M8 Washer		x10
[8]	M8 Spring Washer		x4

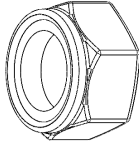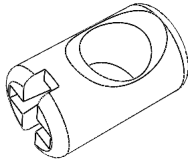ID#	DESCRIPTION	IMAGE	QTY
[9]	M8x25mm Btn Head Bolt		x8
[10]	M8 Nyloc Nut		x4
[11]	M6 Barrell Nut		x4
[12]	Jig (PRT-002018)		x1

We recommend watching the installation video before attempting to install

Enter this address into your web browser to view the fitting video:

<https://wi.st/2UATFi1>

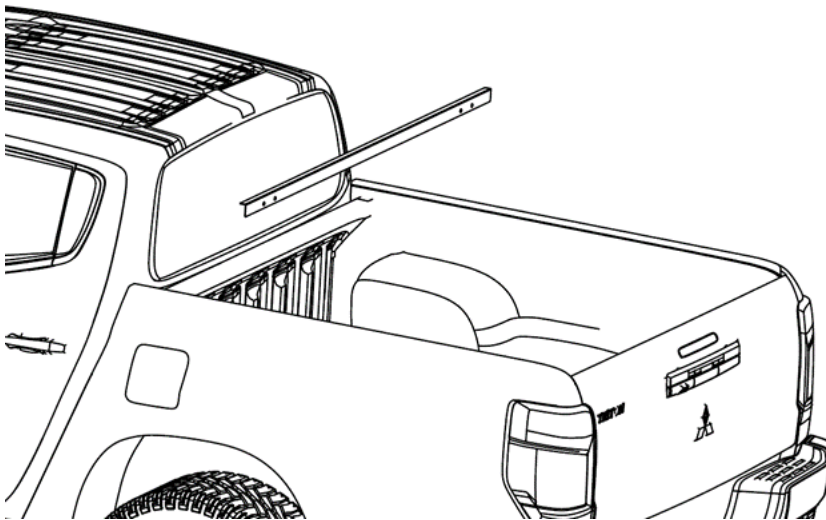


1




Remove the bolts from the rear corners of the wellside and keep them

2



If you have a liner installed on your tub, sit the provided jig **[12]** over the front edge and centred along the front

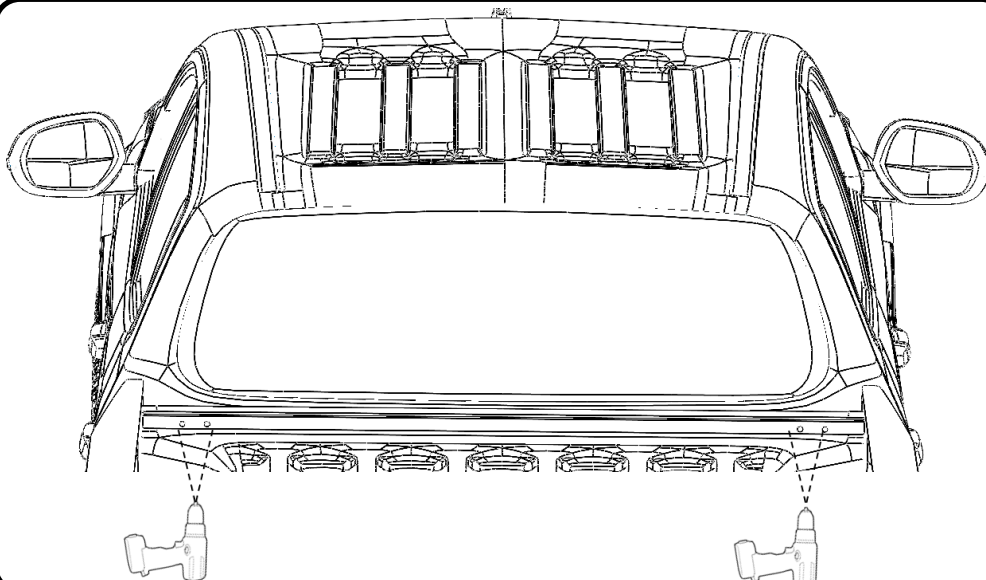3



Mark the holes on the liner and drill through the jig and the tub with a 10mm drill bit. This should expose the threads in the front wall of the wellside

4



Install the provided brackets **[1]** to the front of the wellside using;

[7] 2x M8 Spring washers

[7] 2x M8 x 25 bolts

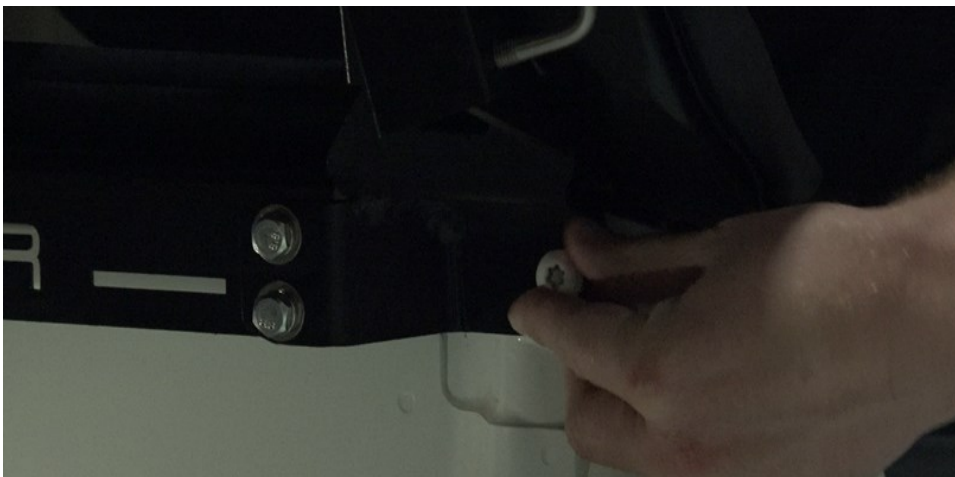
Repeat this for both sides

5



Lift the canopy onto the vehicle

6



Re-install the rear bolts through the canopy frame and the tub

Repeat this for both sides

7



Bolt the canopy through the pre-installed brackets using the following fasteners:

[9] 2xM8x25mm Btn Head Bolt

8



Hook the Bracket Thread Plate **[2]** through the two slots in the frame

9



Sit the barrel nut **[11]** under the Bracket Thread Plate **[2]**, lined up with the hole (as indicated below)

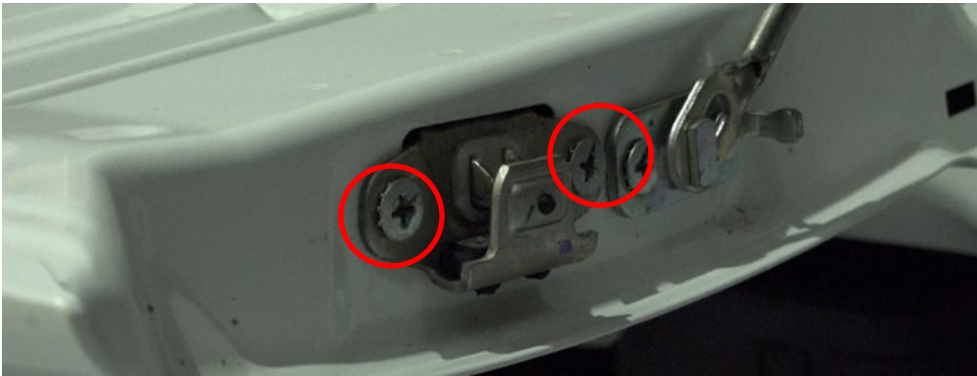
10



Bolt through the top face into the barrel nut, pulling the Bracket Thread Plate **[2]** using:

[6] 12xM6x60mm Btn-Head Bolt

11



Hook the clamps through the two slots in the frame

12



Sit the Tailgate locking Tab **[3]** in place as shown, bolt in place using the original bolts.

Ensure the bracket sits underneath the latches.

Your Ute Master canopy is now fully installed.