

# Ford Ranger Wildtrak 2022+

## CANOPY-FRC2








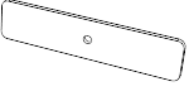

### Centurion Canopy


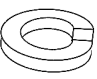
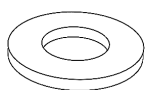
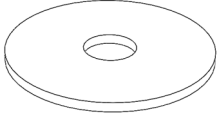

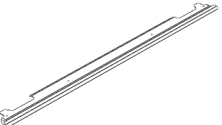


<https://bit.ly/3yHO6Cj>



### Despatch List:

ID#	DESCRIPTION	IMAGE	QTY
1	PRT-005986L		1x
	PRT-005986R		1x
2	PRT-006249L		1x
	PRT-006249R		1x
3	PRT-006218-01 (with back plate and bulb seal installed)		1x
4	PRT-006219L		1x
	PRT-006219R		1x
5	PRT-005963		2x
6	M8 x 25mm Btn Bolt		14x

ID#	DESCRIPTION	IMAGE	QTY
7	M8 x 16mm Btn Bolt (Black)		6x
8	M8 Spring Washer		12x
9	M8 Medium Washer		6x
10	M8 Fender Washer		16x
11	M8 Nyloc Nut		10x
12	PRT-005987 (with bulb seal installed)		1x

#### IMPORTANT WARRANTY MESSAGE:

The warranty on this canopy is only valid if there has been a Ford Approved Tub Brace kit installed on the vehicle. If this is not installed the warranty on the vehicle may not be valid.



Any steps marked with the alert symbol are critical steps for removing or refitting existing vehicle bolts. These bolts have a thread locking glue, and can become jammed and snap when force is applied. Recommended procedure is to use a heat induction tool to loosen the bolts, alternatively use Förch Black Magic to lubricate the thread. Gently work the bolt backwards and forwards in the thread using hand tools to 'crack' the thread locking glue. Slowly extract the bolt using hand tools. Take equal care when refitting the bolts, ensure the bolt is clean and the thread is lubricated. Bolts may require heating to soften the glue before refitting. **DO NOT FORCE THE BOLT IF JAMMED.** Take the vehicle to a specialist if the problem persists.

1

Remove Wildtrak sailplane from vehicle.  
See fitting video to watch this process:




Bolt jamming risk

2



Trim down the  
tailgate rubber seal.

3

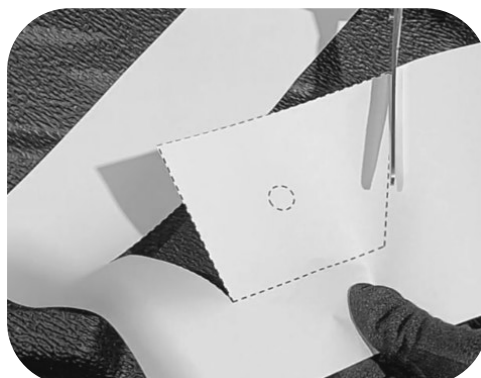

Cut out the paper  
template provided on  
the final page of these  
fitting instructions.


4



Sit the paper template on the liner in the rear corners, and mark the hole position.

*Repeat for both sides.*



5

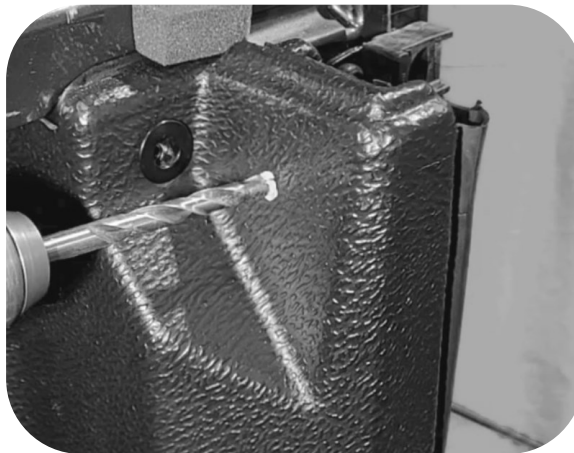

Drill through the mark with a 8.5mm drill bit.

*Repeat for both sides.*

6

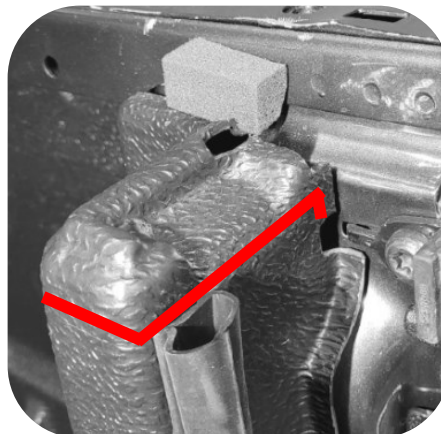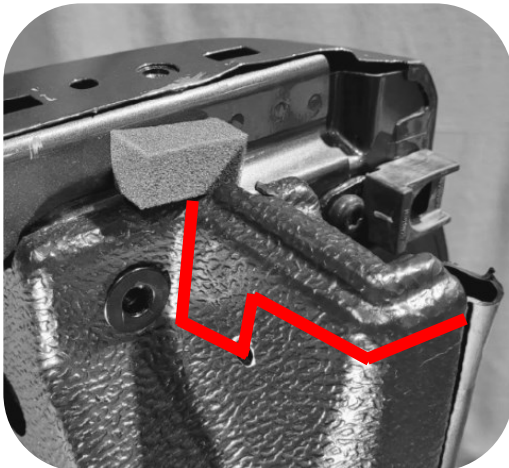

Mark around the liner at the top of the rear corners following the lines indicated.

*Repeat for both sides.*


7



Cut around the marks from the previous step, to remove the top cap of the liner.

*Repeat for both sides.*

8

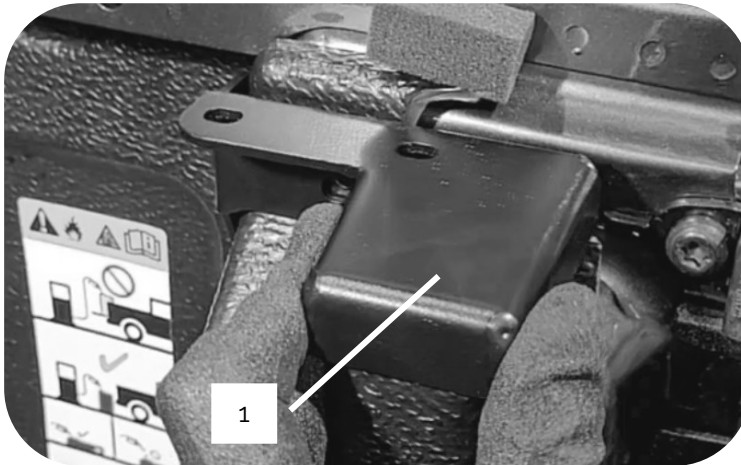

Install rear mounting brackets (1), these will cover the cut liner.

*Repeat for both sides.*

9



Bolt jamming risk  
See Page 2




Re-install the original bolts through the brackets into the vehicle threads.

*Repeat for both sides.*



10

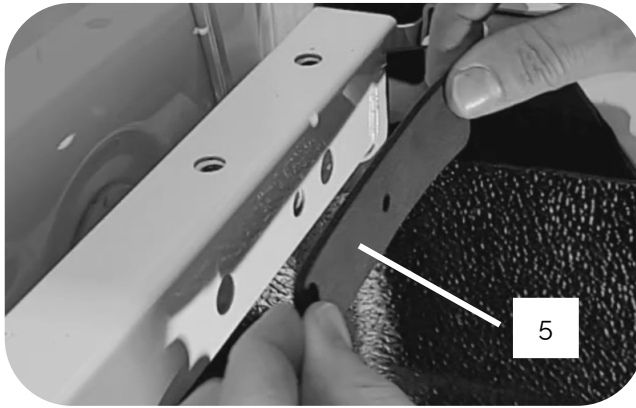



Install foam gasket (5) to the front wall over the threads.

*Repeat for both sides.*

11



Bolt jamming risk  
See Page 2

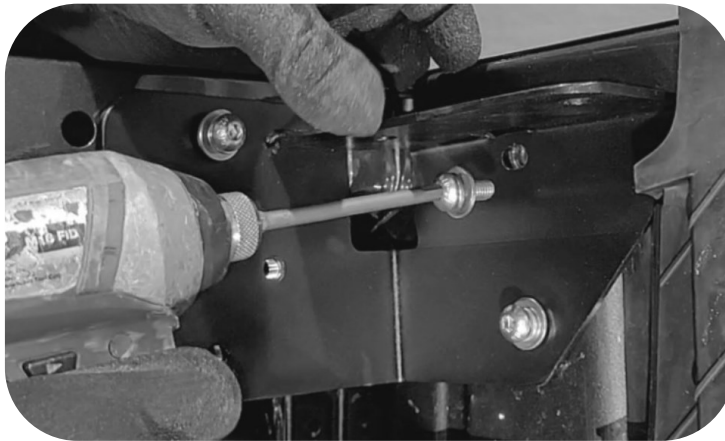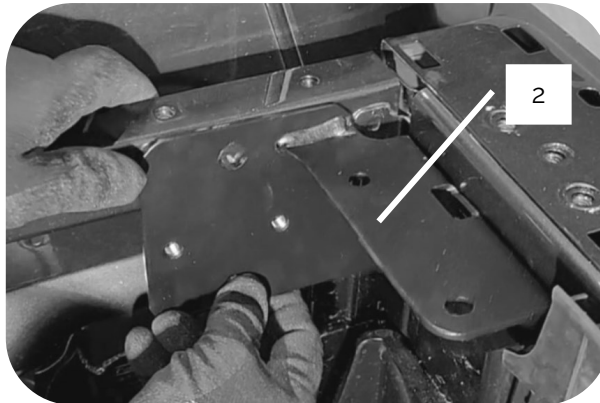


Install the front mounting brackets (2) using the following fasteners:

- 6) M8 x 25mm Btn Bolt
- 8) M8 Spring Washer
- 9) M8 Medium Washer


*Repeat for both sides.*

12

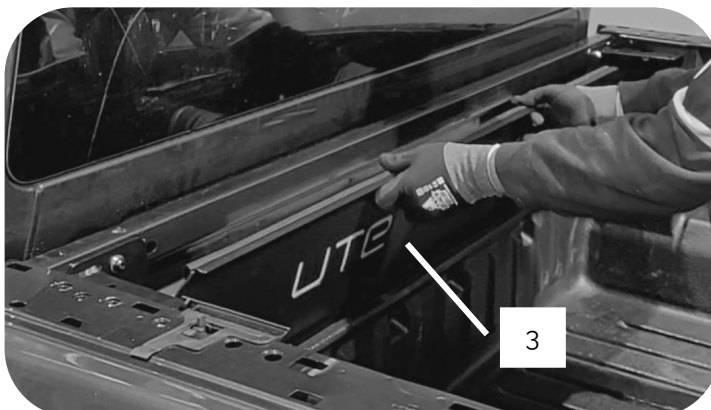

Lift the front panel (3) into position, ensure the base sits behind the plastic liner.

13

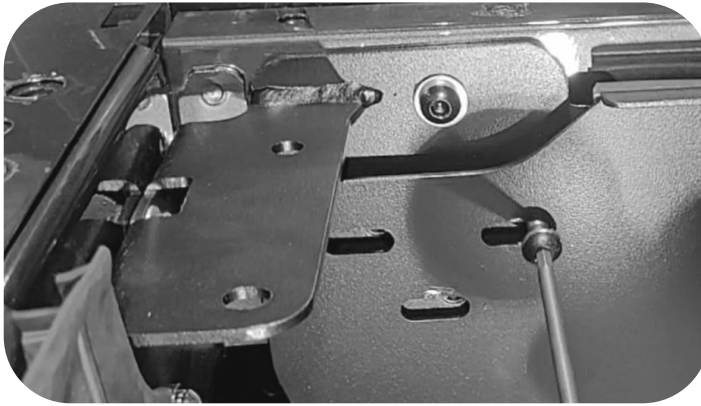

Bolt the front panel to the front mounting brackets using the following fasteners:

- 7) M8 x 16mm Btn Bolt (Black)
- 8) M8 Spring Washer

Only bolt through the inside slot at this stage.


*Repeat for both sides.*

14



Lift the canopy onto the vehicle.

15

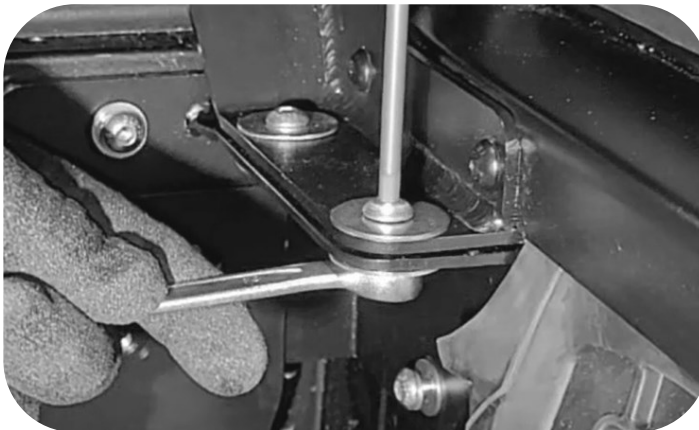

Bolt the canopy to the front mounting brackets using the following fasteners:

- 6) M8 x 25mm Btn Bolt
- 10) M8 Fender Washer
- 11) M8 Nyloc Nut

*Repeat for both sides.*

16




Bolt jamming risk  
See Page 2



Remove the front hooks.

17

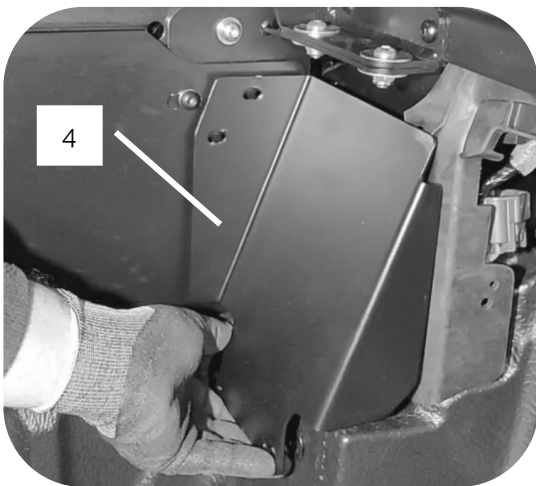

Bolt the corner plates (4) to the front mounting brackets, using the following fasteners:


- 7) M8 x 16mm Btn Bolt (Black)
- 8) M8 Spring Washer

*Repeat for both sides.*

18



Bolt jamming risk  
See Page 2

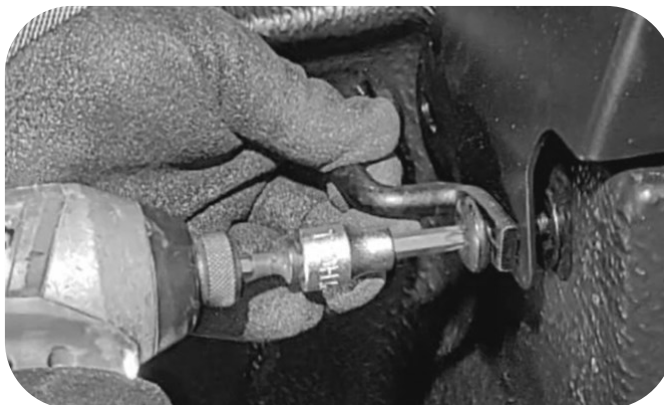

Re-install the front hooks through the corner plates.

*Repeat for both sides.*

19



Bolt the canopy to the rear mounting brackets using the following fasteners:

- 6) M8 x 25mm Btn Bolt
- 10) M8 Fender Washer
- 11) M8 Nyloc Nut

*Repeat for both sides.*




20



Remove the top row of screws from the tailgate.

21

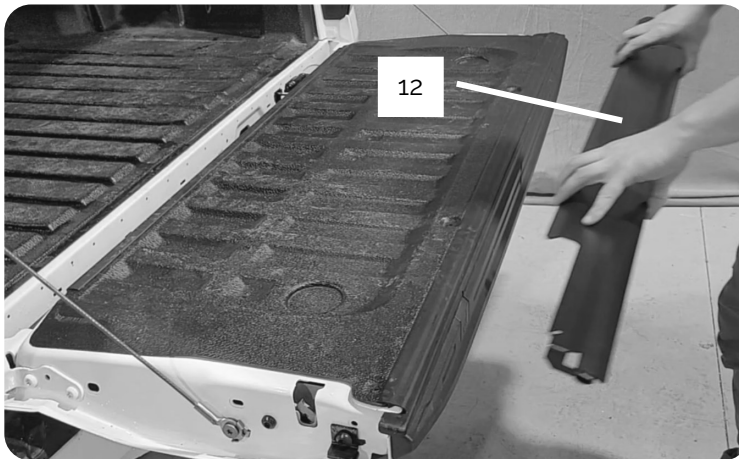


Sit the tailgate bracket PRT-005987 (12) in position, so the end tabs hook underneath the plastic liner.



Screw in position using the original screws.

Your canopy is now fully fitted and ready to use.  
Thank you again for using Utemaster and don't forget to keep checking our website for our latest innovations!



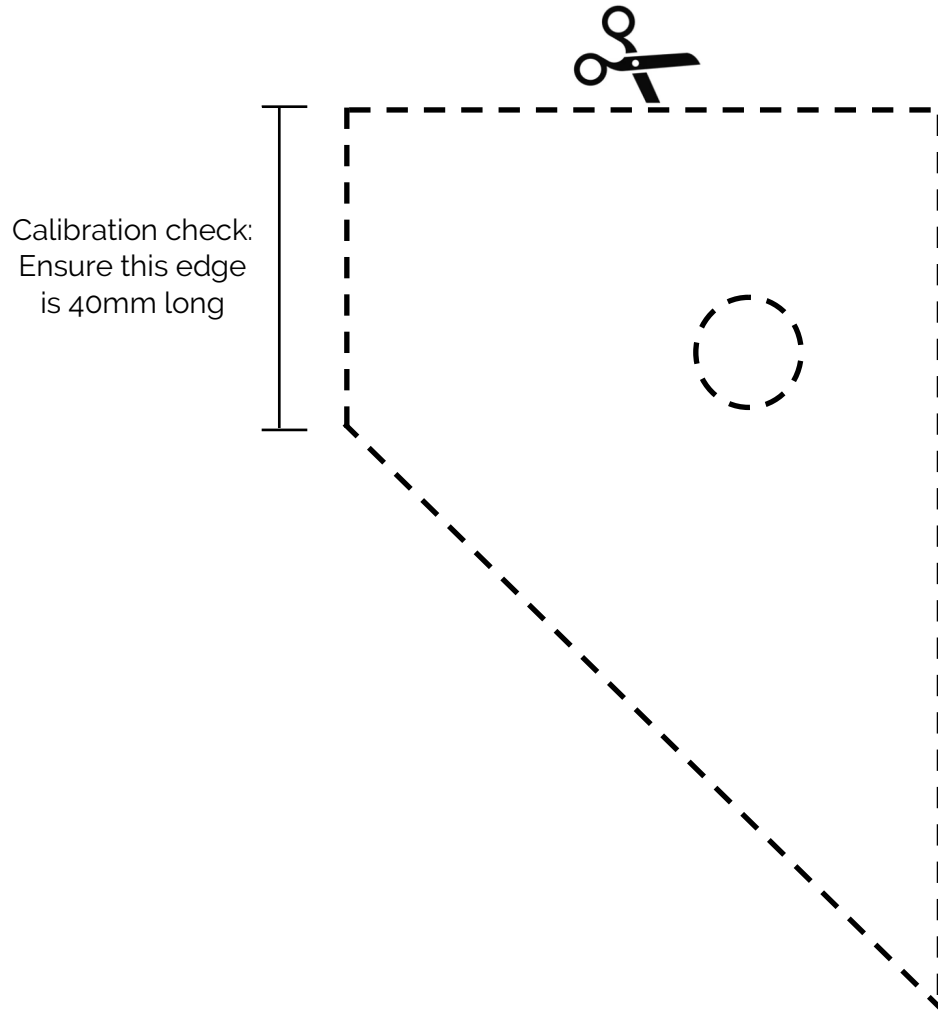

Cut this template out to use on Step 3