













Isuzu D-Max 2020+ Canopy Despatch List

PRT-003673L PRT-003673R		1x 1x
PRT-003674		2x
PRT-003672L PRT-003672R		1x 1x
PRT-003748L PRT-003748R		1x 1x
M6 x 40mm button head bolt		2x
M6 washer		6x
M8 x 25mm button head bolt		4x
M6 x 25mm button head bolt		4x
M8 washer		8x
M6 nyloc nut		6x
M8 nyloc nut		4x
Wire taps		2x


Isuzu D-Max 2020+ Canopy Fitting Instructions

Thank you for purchasing a quality Utemaster™ product, our aim is providing you with as much assistance as possible throughout the fitting process. Please contact us if assistance is needed.

We recommend watching the installation video before attempting to install

Enter this address into your web browser to view the fitting video:

<https://bit.ly/38IBRrp>

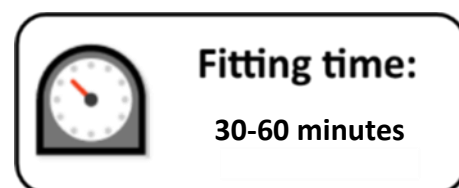

Step 1) Remove the hooks from the front of the wellside



Step 2) Remove the rear wellside bolt



Step 3) Install the front mounting brackets, re-using the original hook and bolts




Step 4) Install the rear mounting brackets, re-using the original bolt



Step 5) Lift the canopy onto the vehicle



Step 6) Bolt the canopy to the front mounting brackets using the M8 bolts, nuts, and washers

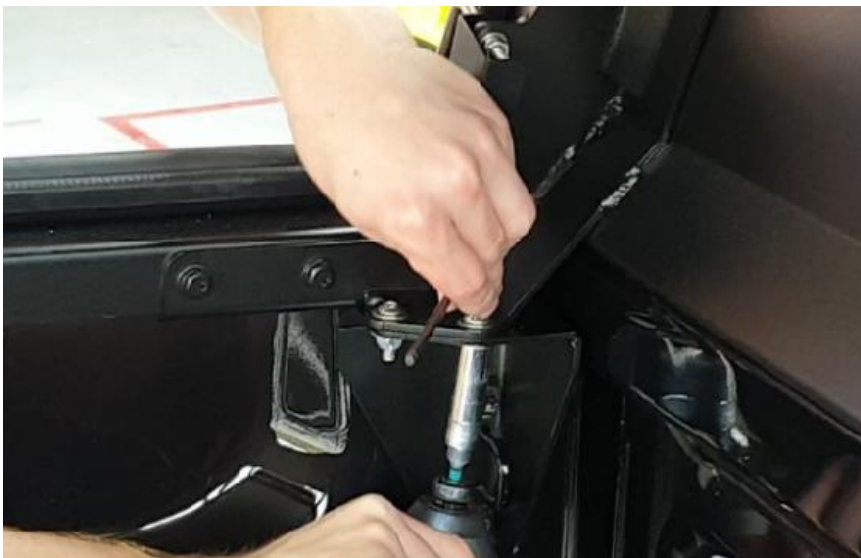

Step 7) Bolt the canopy to the rear brackets using the short M6 bolts, nuts, and washers



Step 8) Insert the clamping tab on each side and bolt in place with a nyloc nut underneath



Step 9) Remove the rear passenger side light and unplug the white plug in the centre




Step 10) Feed the wire from the canopy through the wellside into the rear light cavity



Step 11) Use the provided wire taps to connect the canopy wires onto the wires shown below.


Red > Red

Black > Black

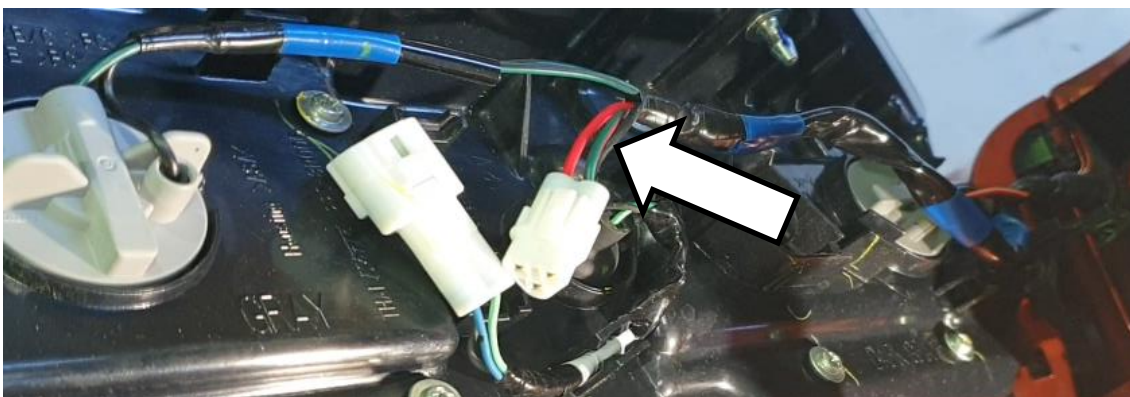

Step 12) Insulation tape up the connectors

Step 13) Re-attach the clip and re-route the wires, then re-install the rear light to the vehicle

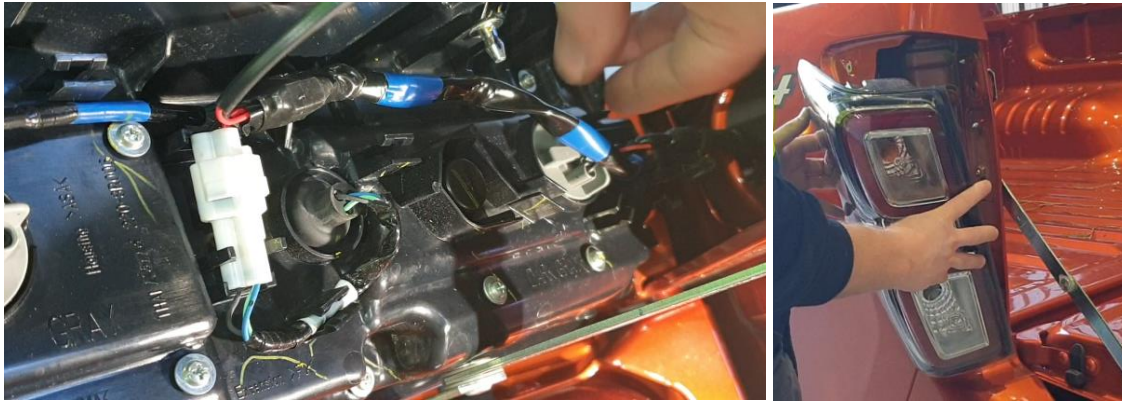

Step 14) Remove the bolts holding the tailgate latches



Step 15) Insert the tailgate brackets behind the tailgate latches and re-insert the bolts through both layers



Your canopy is now fully fitted and ready to use.

Thank you again for using Utemaster™ and don't forget to keep checking our website for our latest innovations!