NZ Support:
P: 0800 683 352
E: sales@utemaster.co.nz
W: www.utemaster.co.nz

Australia Support:
P: 1800 769 577
E: sales@utemaster.com.au
W: www.utemaster.com.au

Lid Lift Kit to suit Sports Bar Load-Lid

70909-100-SB
70909-200-SB

Despatch List:

ID#	DESCRIPTION	IMAGE	QTY
1	Lift Kit Subassembly LH Lift Kit Subassembly RH		1x 1x
2	Strut (100 or 200)		2x
3	Strut Brackets		2x
4	M6 x 12mm Btn Bolts		4x
5	M6 Nyloc Nuts		4x
6	6mm Steel Rivets		4x

Fitting Time:
30 mins

1

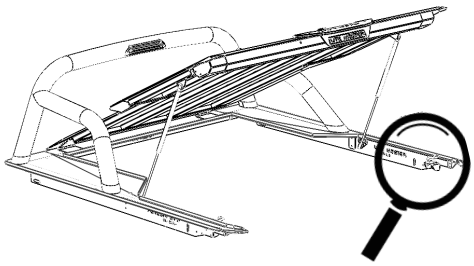

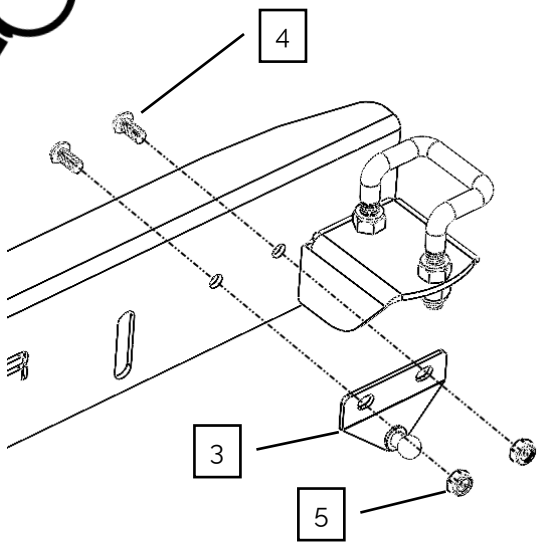

Install the strut brackets to the pre-cut holes in the mounting frame on each side using the following fasteners:

4) M6 x 12mm Btn Bolts
5) M6 Nyloc Nuts

© Copyright Utemaster NZ Ltd.

NZ Support:
P: 0800 683 352
E: sales@utemaster.co.nz
W: www.utemaster.co.nz

Australia Support:
P: 1800 769 577
E: sales@utemaster.com.au
W: www.utemaster.com.au

2

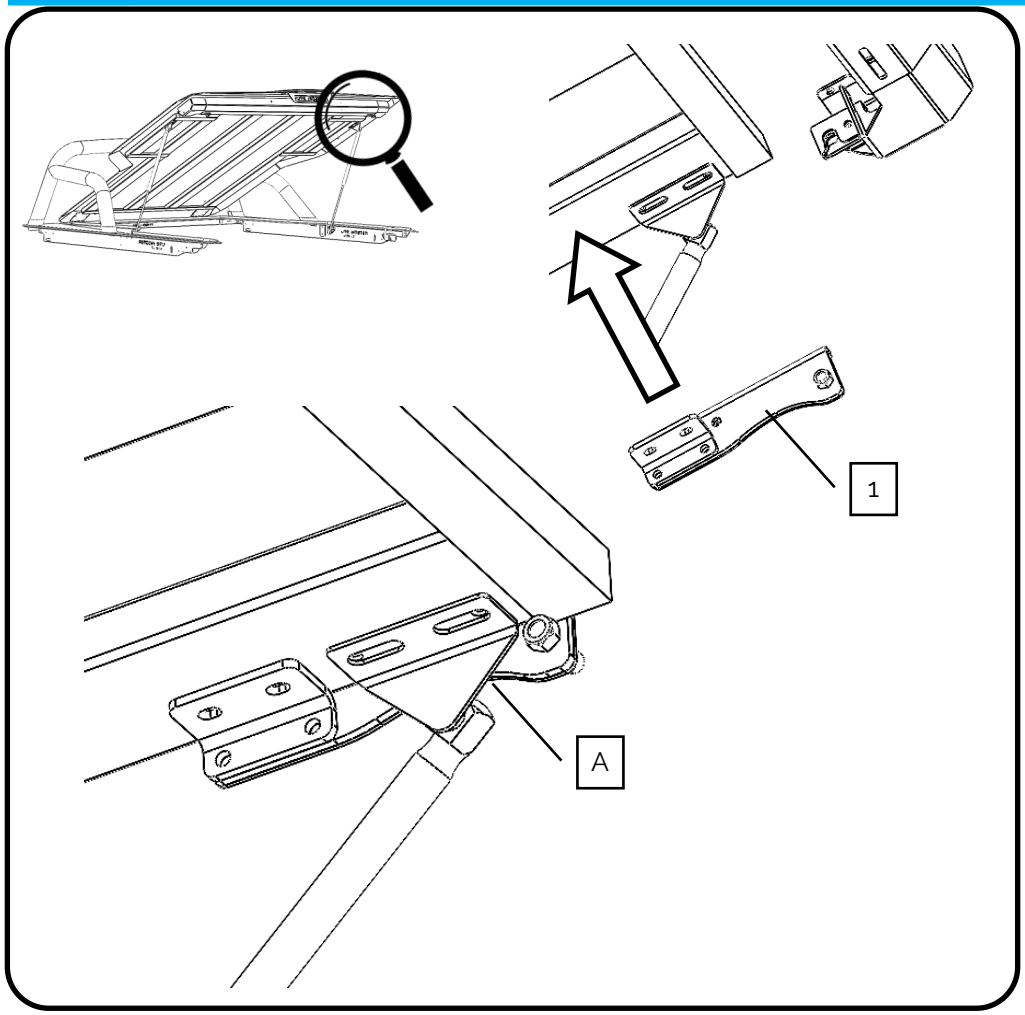

Sit the Lift Kit brackets in position on the underside of the Load-Lid.

Position the brackets sitting over the RHS extrusion, with the ball stud at the handle (rear) end of the Load-Lid.

The curve of the Lift Kit bracket should straddle the Load-Lid gas strut bracket (A).

3

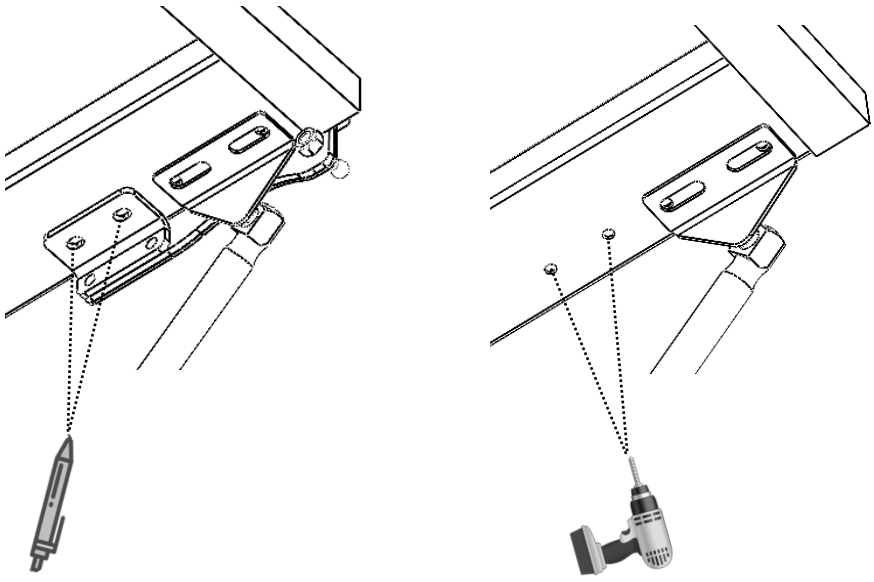

Mark the hole positions with a marker.

Remove the brackets and drill through the marks with a 6.5mm drill bit.

Repeat for both sides.

© Copyright Utemaster NZ Ltd.

NZ Support:
P: 0800 683 352
E: sales@utemaster.co.nz
W: www.utemaster.co.nz

Australia Support:
P: 1800 769 577
E: sales@utemaster.com.au
W: www.utemaster.com.au

4

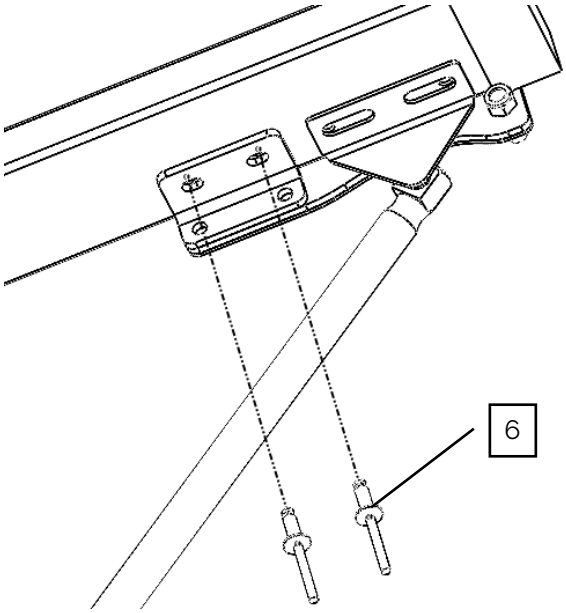

Rivet the Lift Kit brackets in place using the following fasteners:

6) 6mm Steel Rivets

5

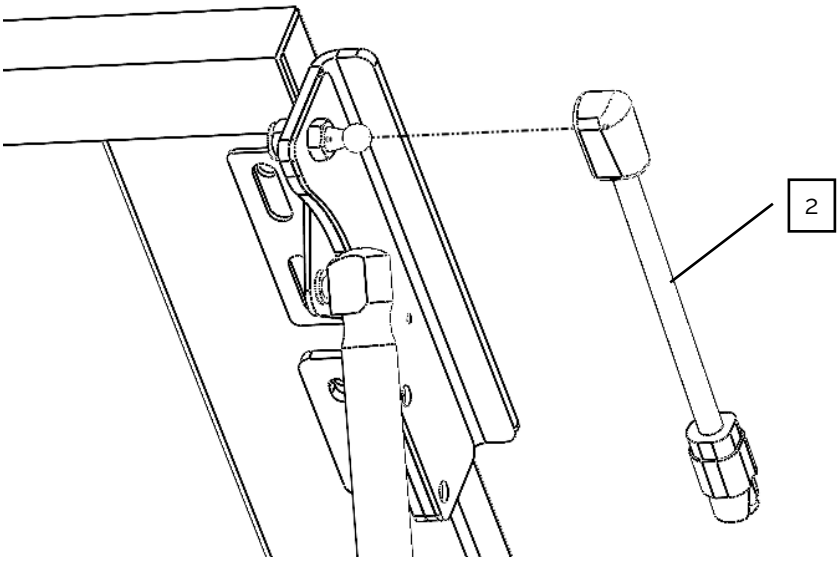

Connect the smaller end of the strut to the ball stud.

Clip in place using the strap and dome stud.

Repeat for the opposite side.

© Copyright Utemaster NZ Ltd.